


CODY 2 DOOR 1 DRAWER WARDROBE ASSEMBLY INSTRUCTIONS WHITE/PINE EFFECT

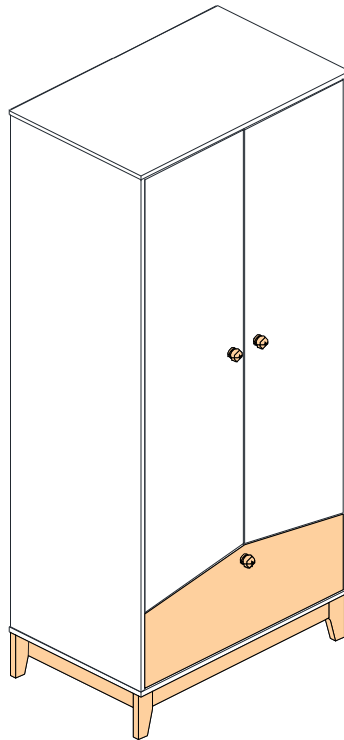


IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

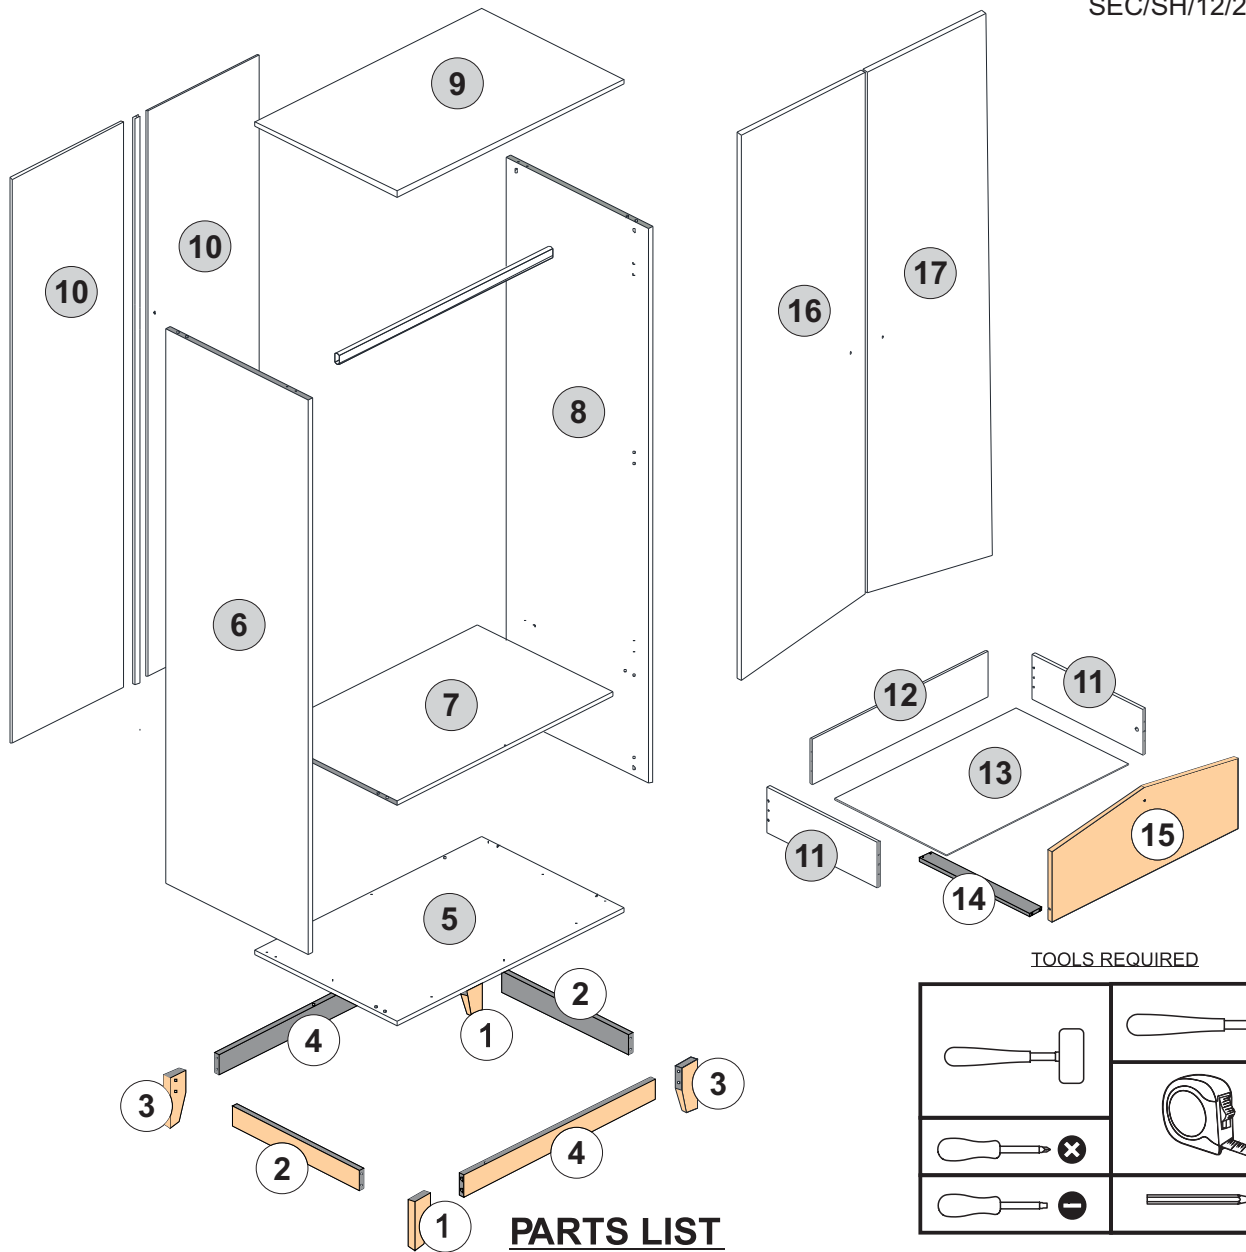


















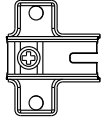
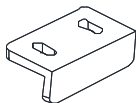
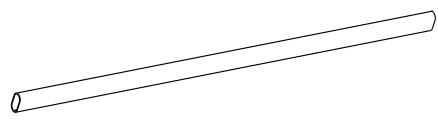
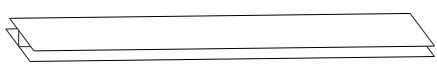
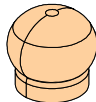


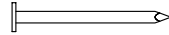PARTS LIST

Please Note:
The below parts have all been stamped with the part number to help identify them during assembly.

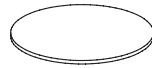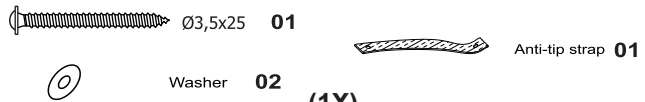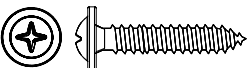
Part Number	Part Code	Part Description	Quantity	Carton
1	S100-101-186-DV1-01	Left Leg	2	2/2
2	S100-101-186-DV1-02	Leg Support Left & Right	2	2/2
3	S100-101-186-DV1-03	Right Leg	2	2/2
4	S100-101-186-DV1-04	Leg Support Front & Back	2	2/2
5	S100-101-186-DV1-05	Base Panel	1	2/2
6	S100-101-186-DV1-06	Left Side Panel	1	1/2
7	S100-101-186-DV1-07	Shelf	1	2/2
8	S100-101-186-DV1-08	Right Side Panel	1	1/2
9	S100-101-186-DV1-09	Top Panel	1	2/2
10	S100-101-186-DV1-10	Back Panel	2	1/2
11	S100-101-186-DV1-11	Drawer Sides	2	2/2
12	S100-101-186-DV1-12	Drawer Back	1	2/2
13	S100-101-186-DV1-13	Drawer Base	1	2/2
14	S100-101-186-DV1-14	Drawer Base Support	1	2/2
15	S100-101-186-DV1-15	Drawer Front	1	2/2
16	S100-101-186-DV1-16	Left Door	1	1/2
17	S100-101-186-DV1-17	Right Door	1	1/2

FITTINGS LIST
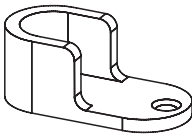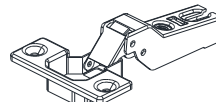
<p>A</p>  <p style="text-align: center;">Glue (3x)</p>	<p>B</p>  <p style="text-align: center;">2/+ Dowel Ø6,0 x 30mm (26x)</p>	<p>C</p>  <p style="text-align: center;">Slide 450mm (1x)</p>	<p>D</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø4,0 x 40mm (8x)</p>
<p>E</p>  <p style="text-align: center;">5/+ Nail 10 x 10 (45x)</p>	<p>F</p>  <p style="text-align: center;">1/+ Cam Nut 12mm (6x)</p>	<p>G</p>  <p style="text-align: center;">1/+ Cam Bolt (22x)</p>	<p>H</p>  <p style="text-align: center;">1/+ Screw Ø 6x8 (4x)</p>
<p>I</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø3,0 x 14mm (8x)</p>	<p>J</p>  <p style="text-align: center;">1/+ Hole Plugs (6x)</p>	<p>K</p>  <p style="text-align: center;">(1X)</p>	
<p>L</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø4,0 x 30mm (3x)</p>	<p>M</p>  <p style="text-align: center;">2/+ Flat Head Screw Ø4,0 x 14mm (24x)</p>	<p>N</p>  <p style="text-align: center;">1/+ Dowel Ø8,0 x 30mm (8x)</p>	<p>O</p>  <p style="text-align: center;">1/+ Cam Nut 15mm (16x)</p>
<p>P</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø3,5 x 25mm (2x)</p>	<p>Q</p>  <p style="text-align: center;">Hanging Rail Support (2x)</p>	<p>R</p>  <p style="text-align: center;">Hinge (6x)</p>	<p>S</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø3,5 x 12mm (4x)</p>
<p>T</p>  <p style="text-align: center;">Hinge Plate (6x)</p>	<p>U</p>  <p style="text-align: center;">Door Stop (2x)</p>	<p>V</p>  <p style="text-align: center;">Hanging Rail 760mm (1x)</p>	
<p>W</p>  <p style="text-align: center;">Plastic profile 1596 mm (1x)</p>		<p>Y</p>  <p style="text-align: center;">Handle(3x)</p>	


TIPS FOR FITTINGS CAM-LOCKS

WHEN FITTING CAM NUT. ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE




↑

CORRECT



↑


WRONG

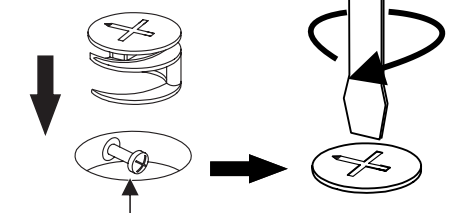


Cam bolt head needs to be in centre

CAMBOLT


Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)



Shoulder

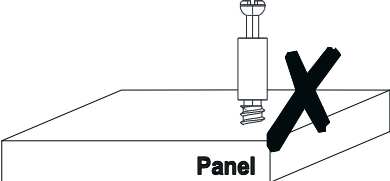

Panel

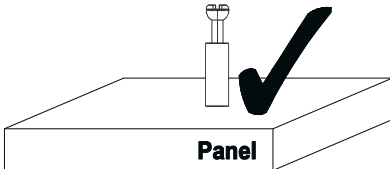

Panel

STEP 1

PARTS REQUIRED




1 - LEFT LEG x2

3 - RIGHT LEG x2

HARDWARE REQUIRED

G  08

TOOLS REQUIRED

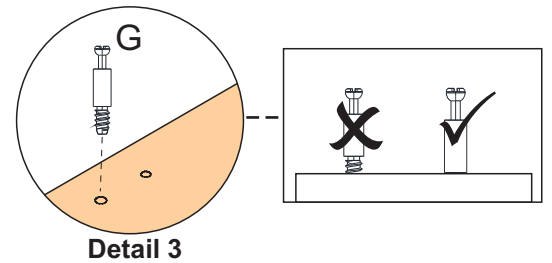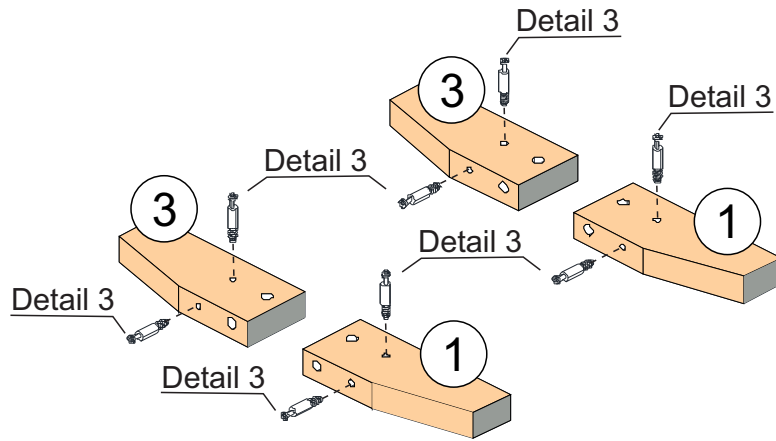

STEP 2

PARTS REQUIRED

2- LEG SUPPORT LEFT+RIGHT x2

4- LEG SUPPORT FRONT+BACK x2




HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

N  Ø8 x 30mm 08

TOOLS REQUIRED

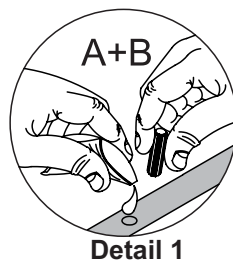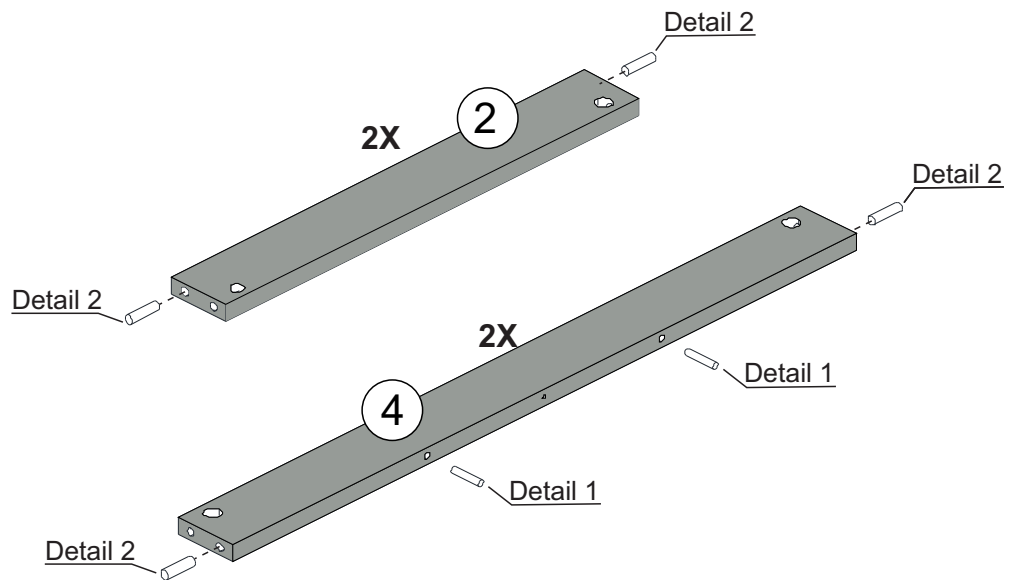


STEP 3


PARTS REQUIRED


7- SHELF x1

HARDWARE REQUIRED






A  01

B  04
Ø6 x 30mm

S  02
Ø3,5 x 12mm

U  01

TOOLS REQUIRED

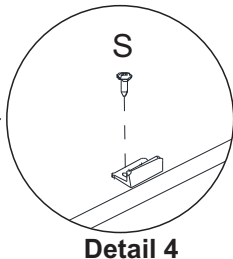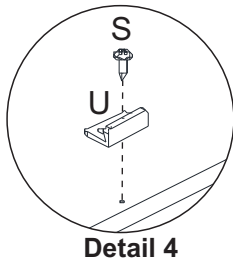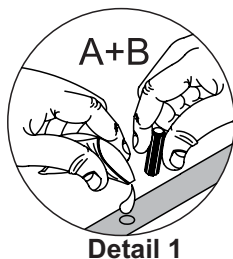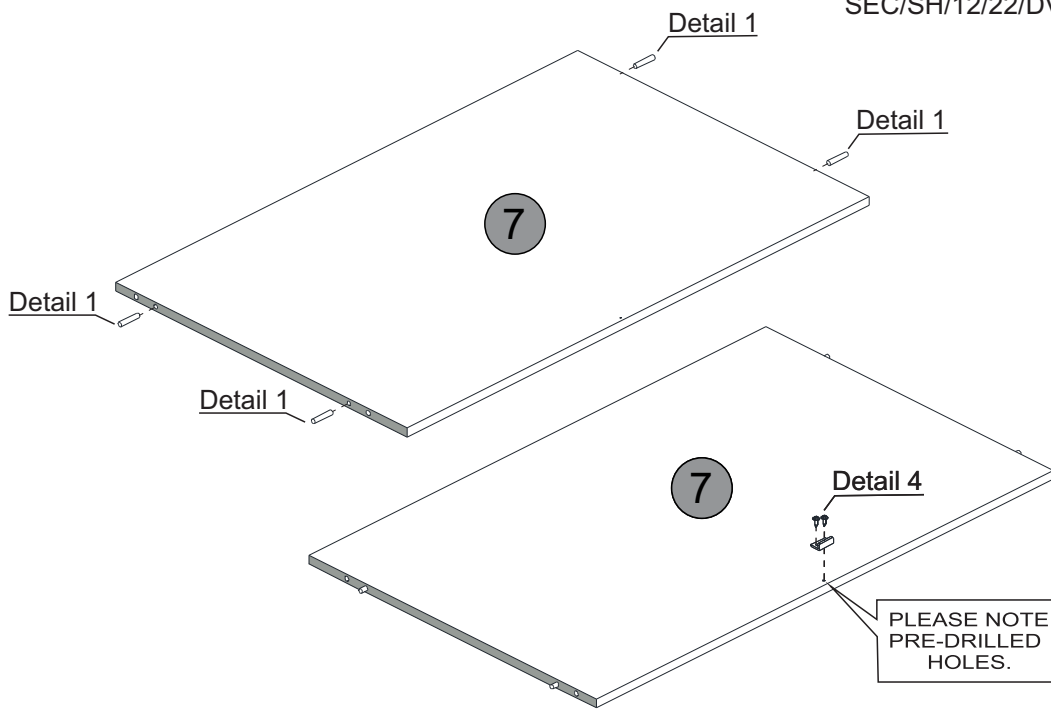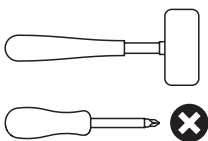



STEP 4


PARTS REQUIRED

9 - TOP PANEL x1







HARDWARE REQUIRED

G  04

S  02
Ø3,5 x 12mm

U  01

TOOLS REQUIRED

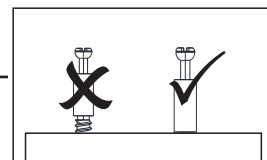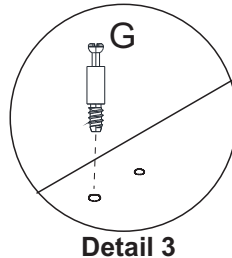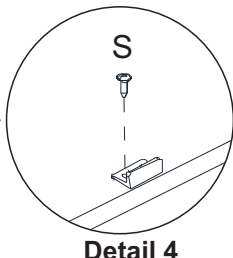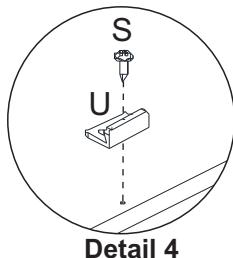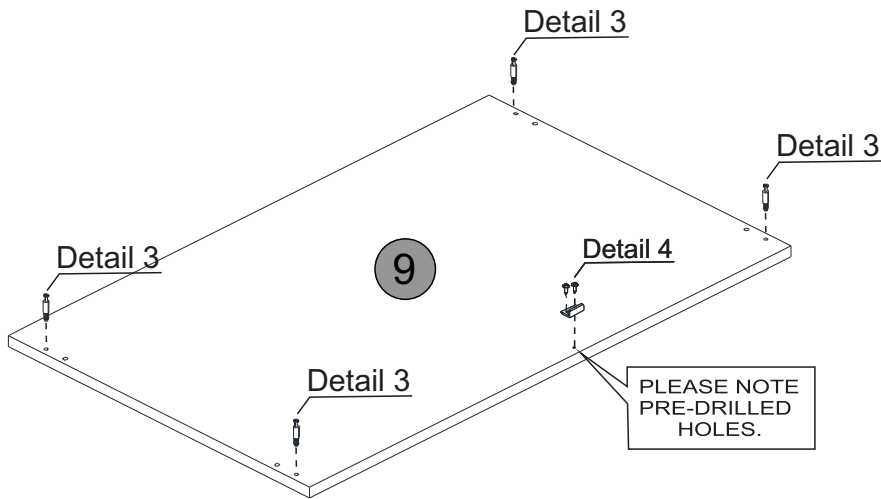


STEP 5


PARTS REQUIRED

6- LEFT SIDE PANEL x1






HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

G  02

TOOLS REQUIRED

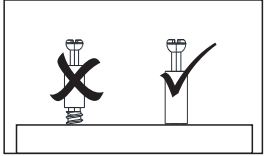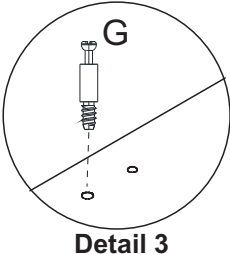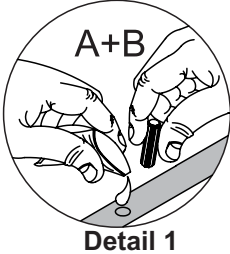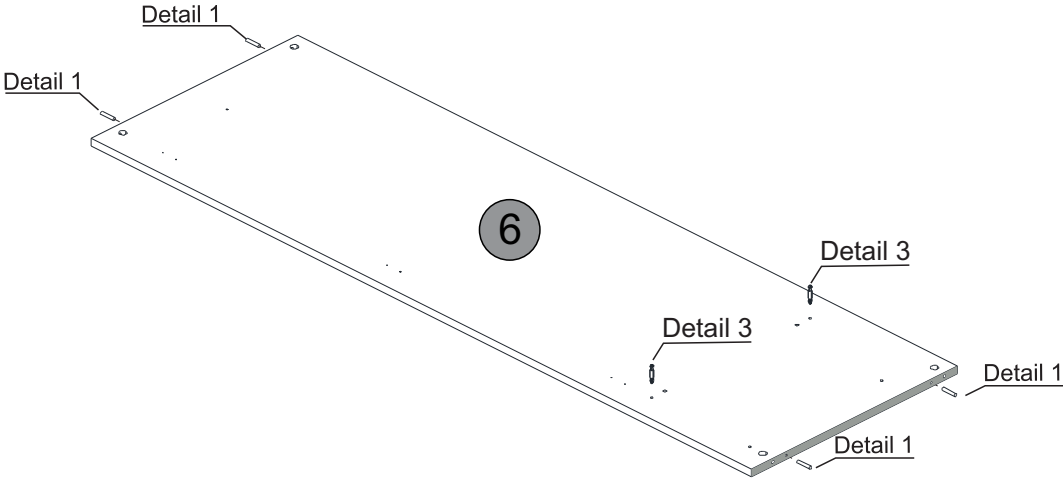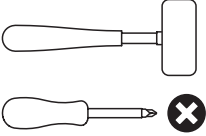


STEP 6

PARTS REQUIRED

6- LEFT SIDE PANEL x1

HARDWARE REQUIRED






I  Ø3,0 x 14mm 02

M  Ø4,0 x 14mm 06

Q  01

T  03

TOOLS REQUIRED

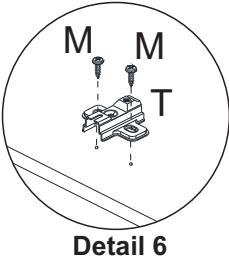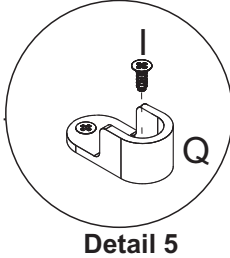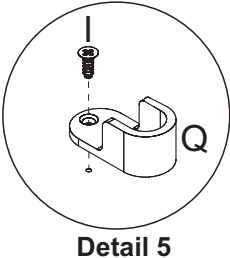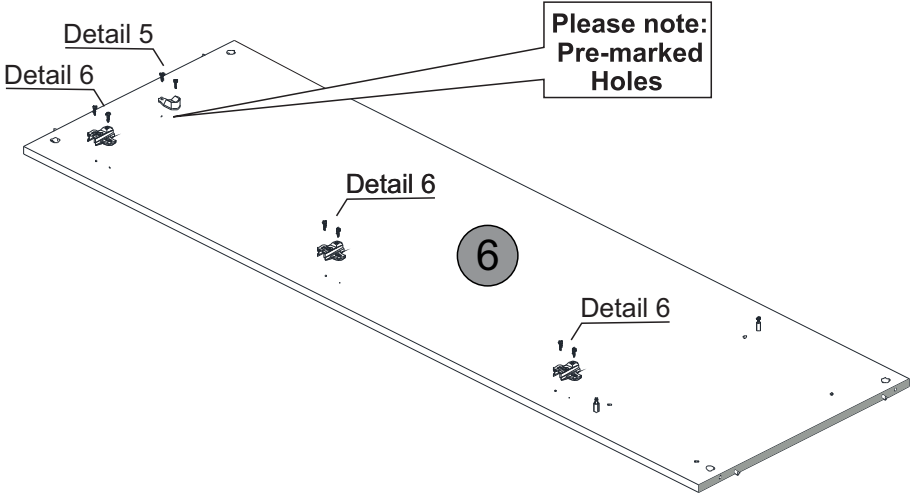

STEP 7

PARTS REQUIRED




6- LEFT SIDE PANEL x1

HARDWARE REQUIRED

C  01
450mm

H  02
Ø6 x 8mm

TOOLS REQUIRED

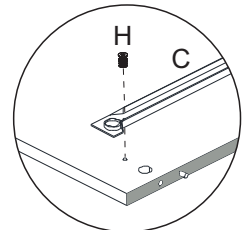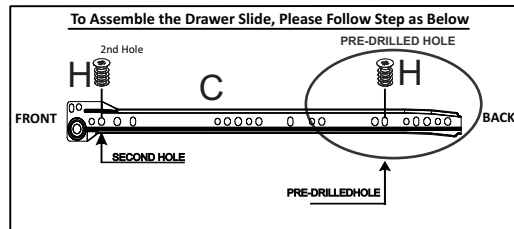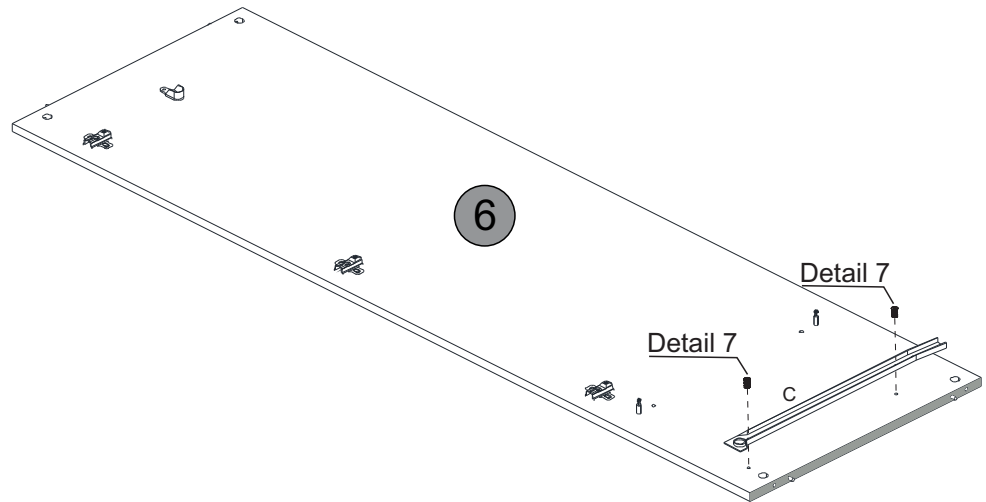


Detail 7


STEP 8


PARTS REQUIRED

8- RIGHT SIDE PANEL x1




HARDWARE REQUIRED

A  01


B  04
Ø6 x 30mm

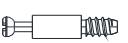G  02


TOOLS REQUIRED

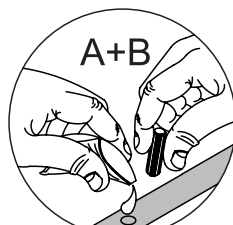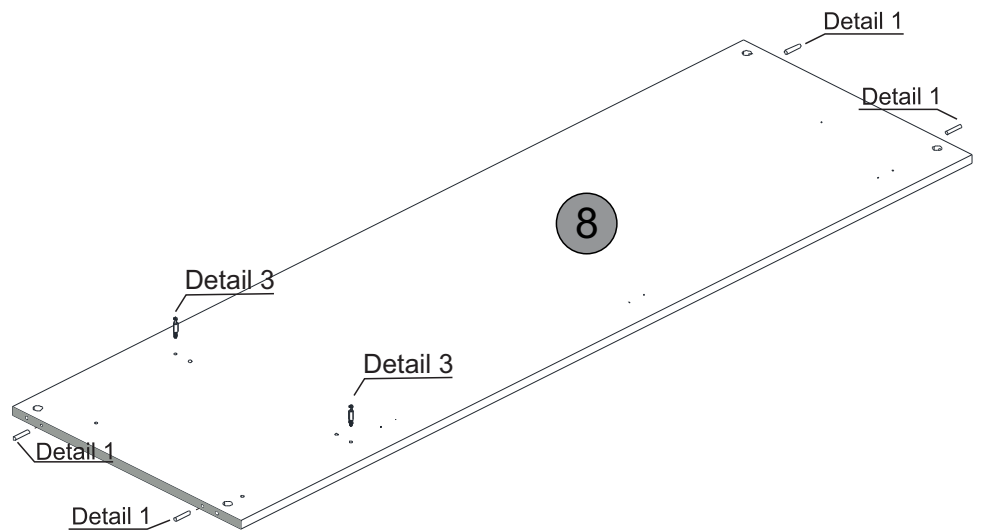

Detail 1

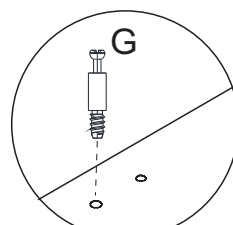

Detail 3

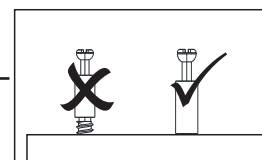



STEP 9

PARTS REQUIRED

8- RIGHT SIDE PANEL x1

HARDWARE REQUIRED



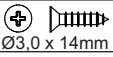
I  02
Ø3.0 x 14mm

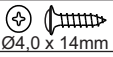M  06
Ø4.0 x 14mm


Q  01

T  03


TOOLS REQUIRED

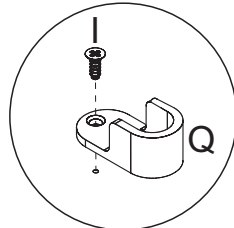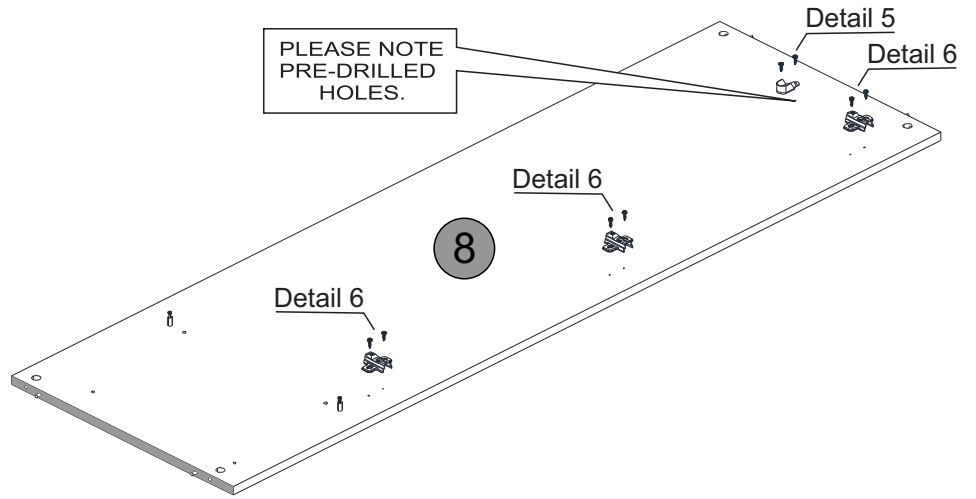

Detail 5

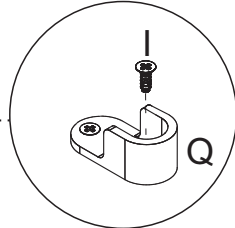

Detail 5

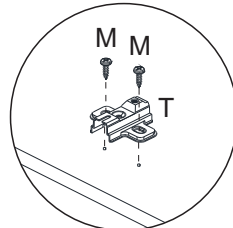


Detail 6

STEP 10

PARTS REQUIRED





8- RIGHT SIDE PANEL x1

HARDWARE REQUIRED

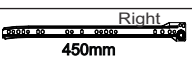C  01
450mm Right

H  02
Ø6 x 8mm

TOOLS REQUIRED

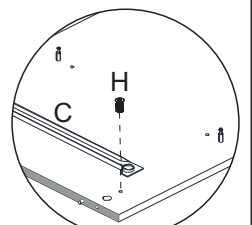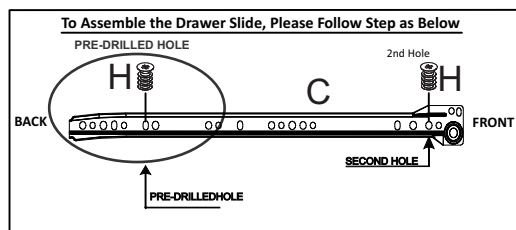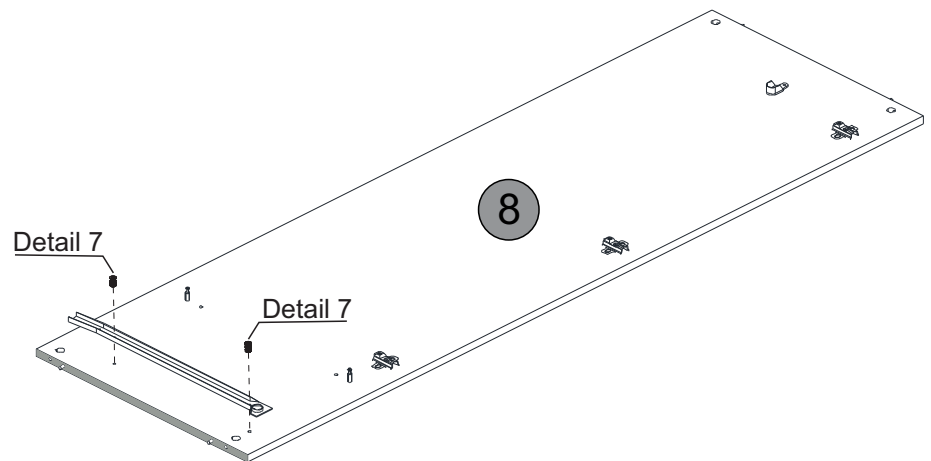



Detail 7

STEP 11




PARTS REQUIRED

1- LEFT FOOT	x2
3- RIGHT FOOT	x2
4- FRONT AND REAR FOOTER	x2


HARDWARE REQUIRED

A		01
O		04


TOOLS REQUIRED

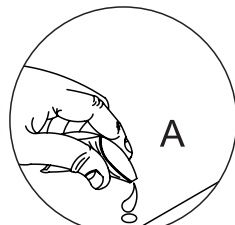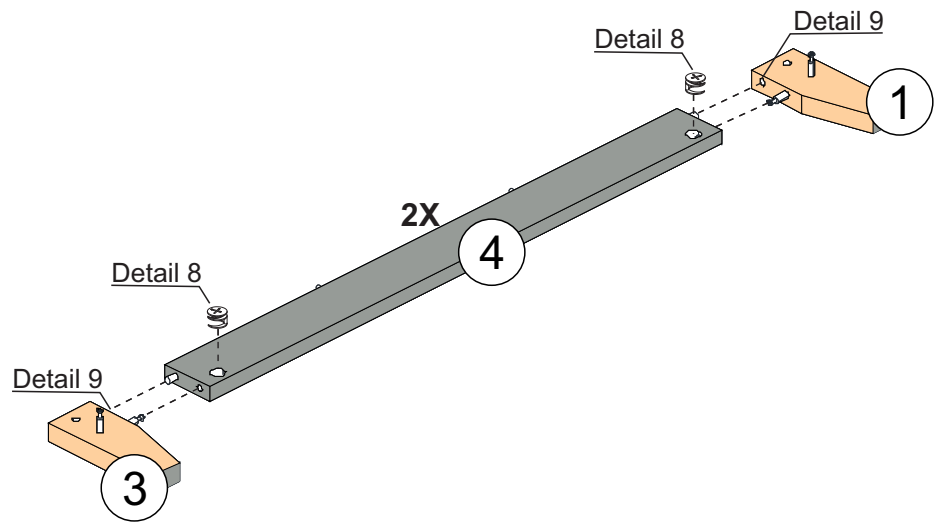

Detail 9

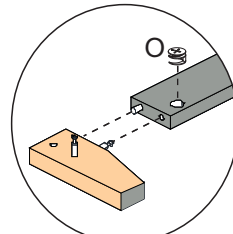


Detail 8

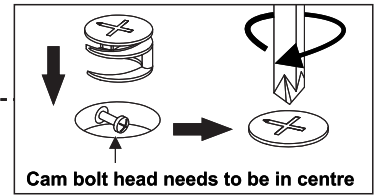



STEP 12

PARTS REQUIRED



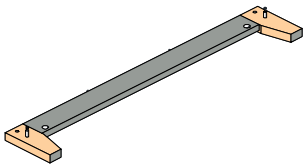
2- SIDE FOOTER	x2
----------------	----




HARDWARE REQUIRED

A		01
O		02


TOOLS REQUIRED

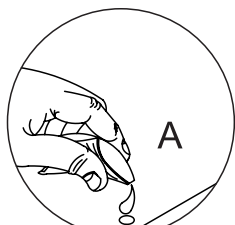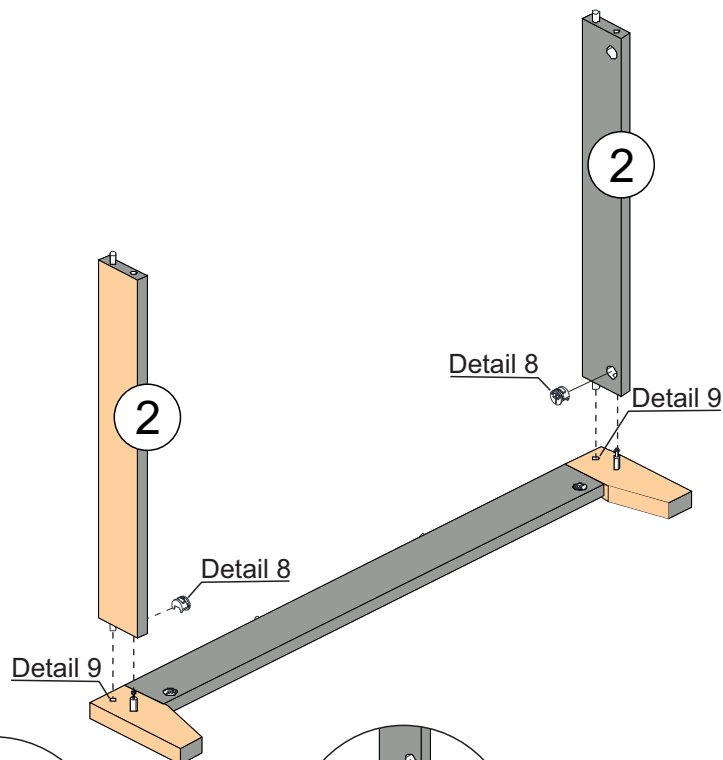

Detail 9

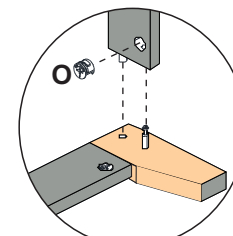


Detail 8

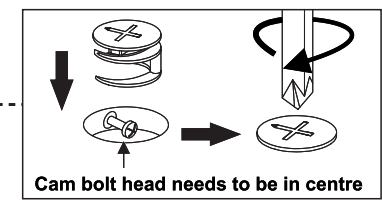


STEP 13




PARTS REQUIRED

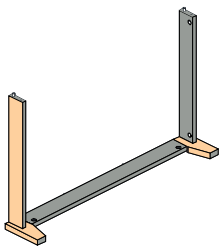


HARDWARE REQUIRED




TOOLS REQUIRED

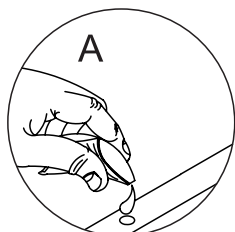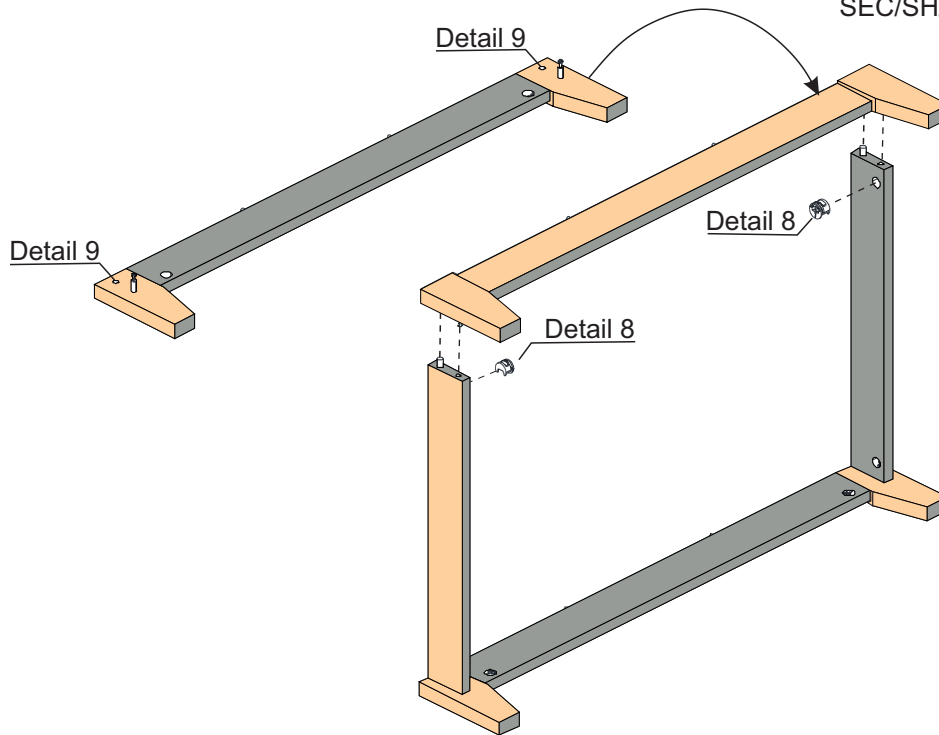

Detail 9

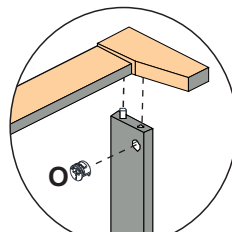


Detail 8

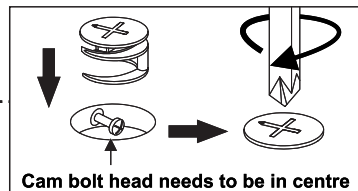



Cam bolt head needs to be in centre

STEP 14




PARTS REQUIRED

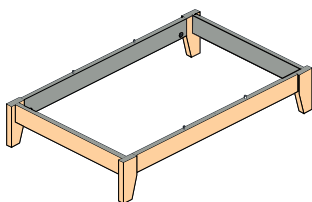


HARDWARE REQUIRED



TOOLS REQUIRED

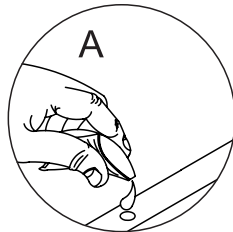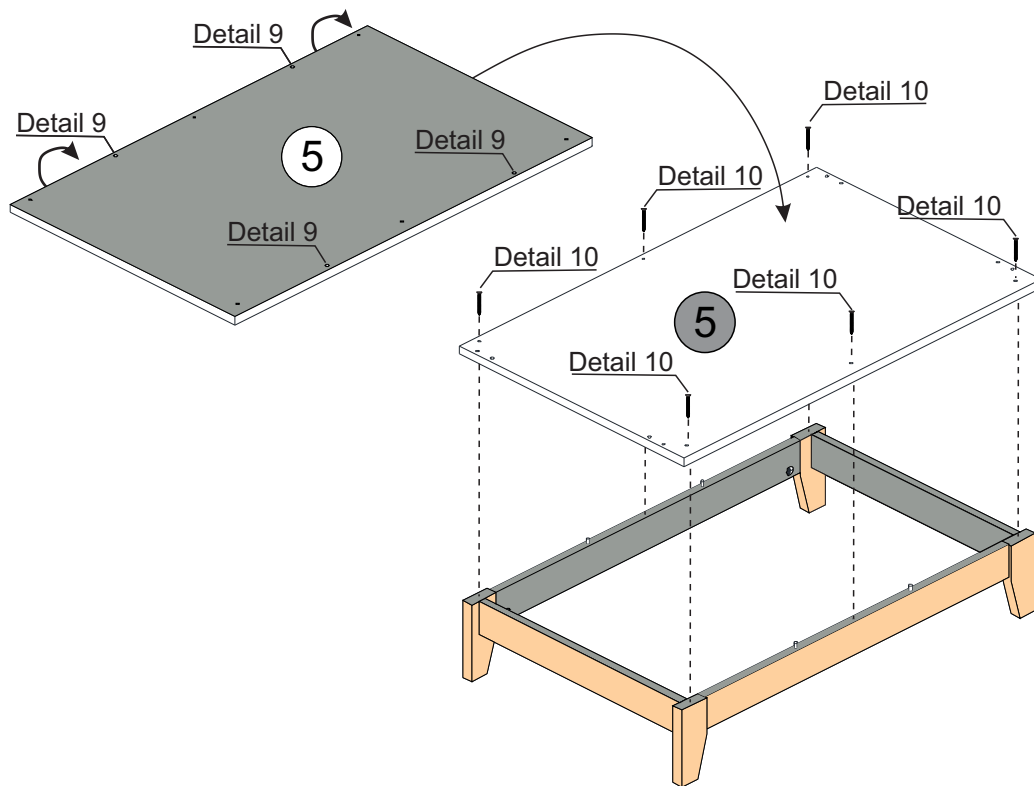


Detail 9

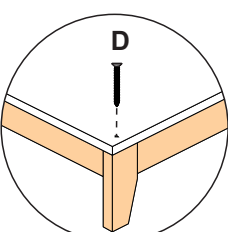


Detail 10

STEP 15




PARTS REQUIRED

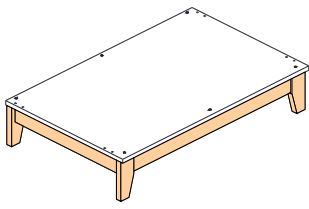

HARDWARE REQUIRED



TOOLS REQUIRED

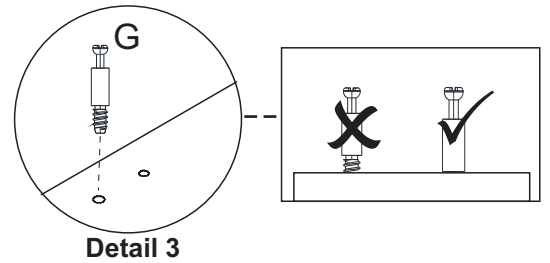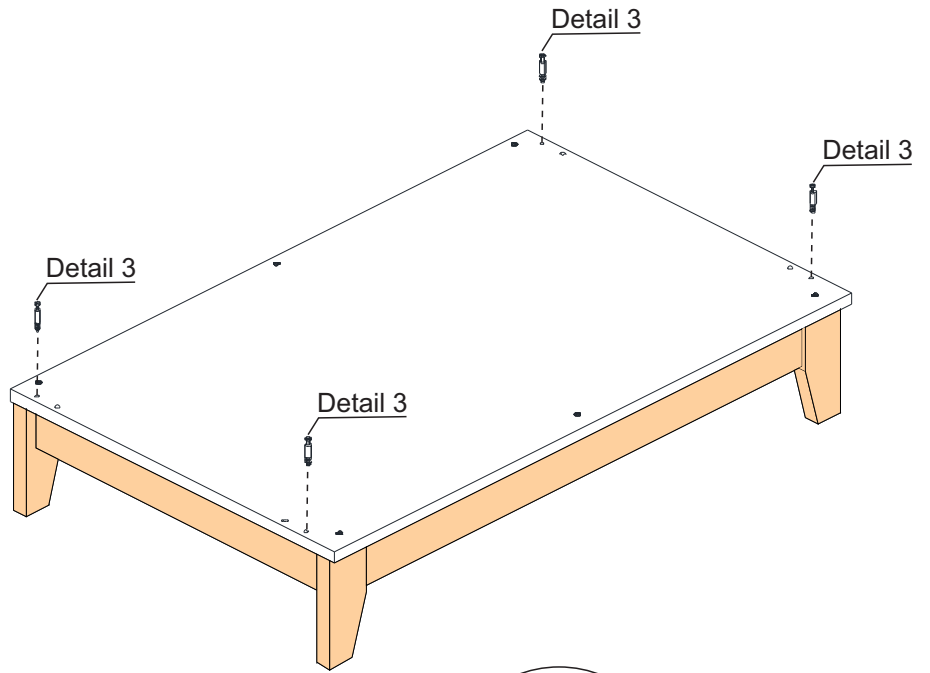

STEP 16

PARTS REQUIRED




6- LEFT SIDE PANEL x1

7- SHELF x1


HARDWARE REQUIRED




TOOLS REQUIRED

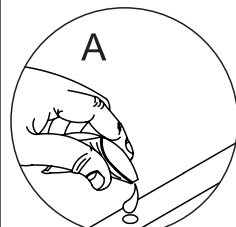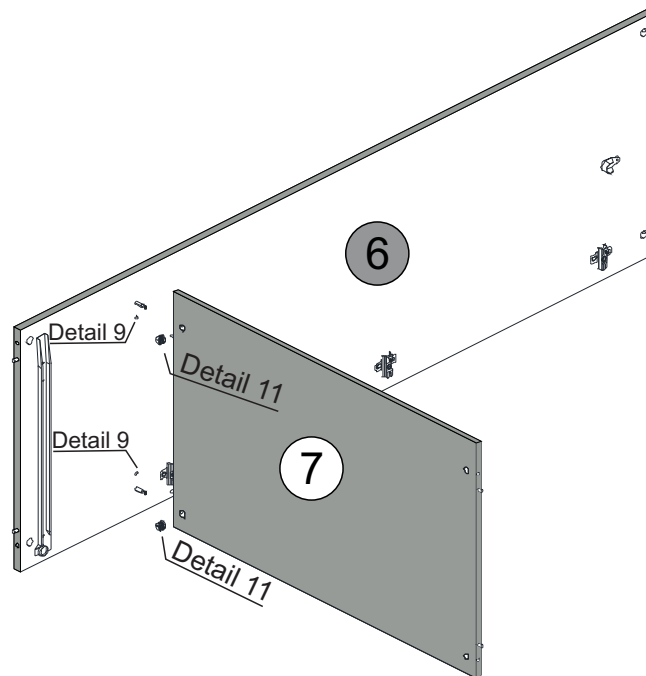

Detail 9

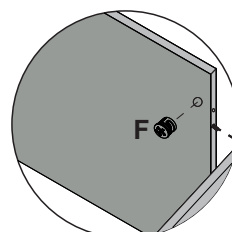


Detail 11

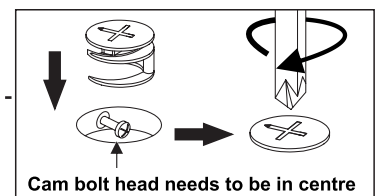

STEP 17

PARTS REQUIRED

8- RIGHT SIDE PANEL x1



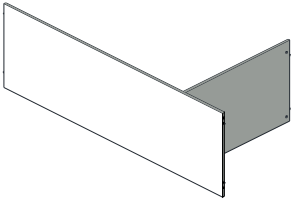


HARDWARE REQUIRED


A  01

F  Ø12mm 02


TOOLS REQUIRED

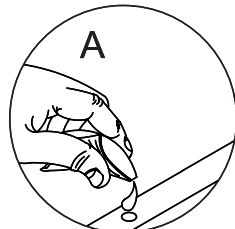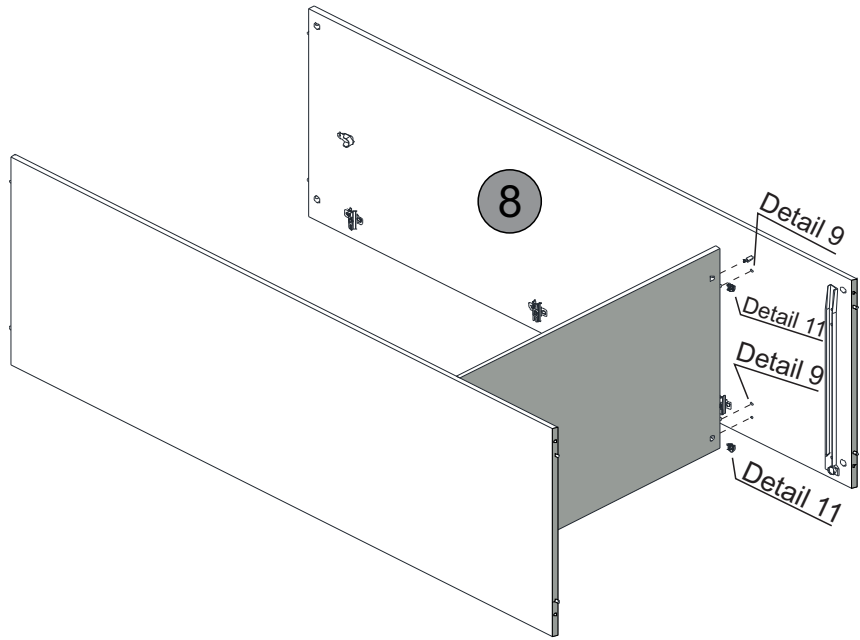

Detail 9

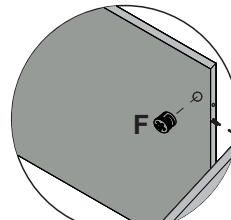


Detail 11

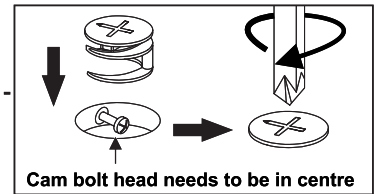

STEP 18

PARTS REQUIRED



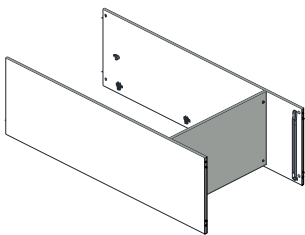


HARDWARE REQUIRED


A  01

O  04


TOOLS REQUIRED

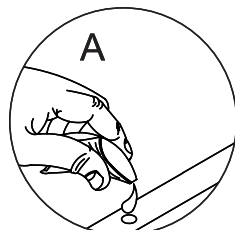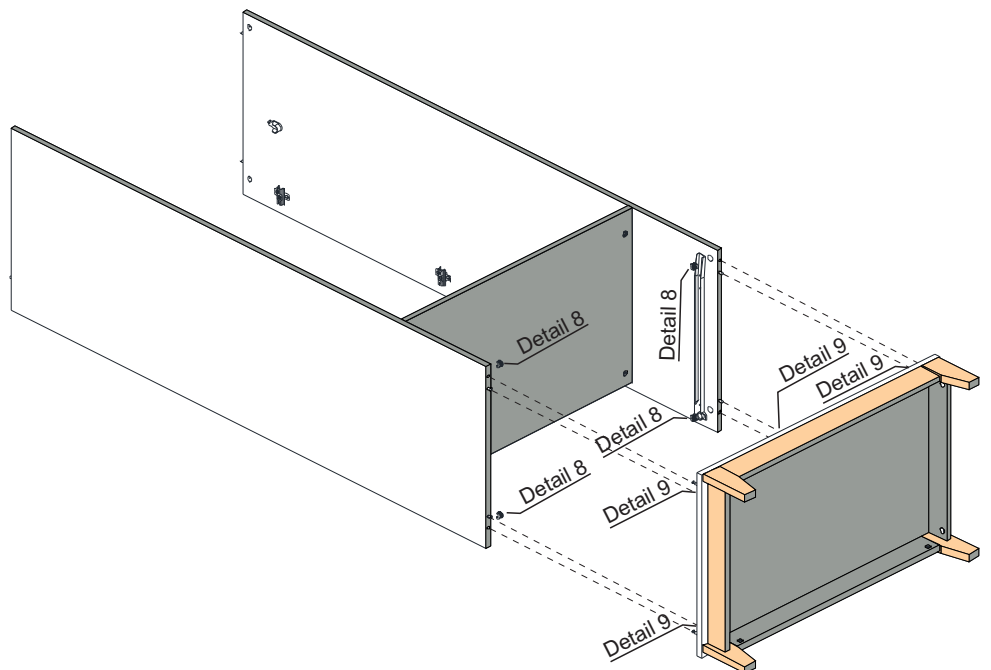

Detail 9

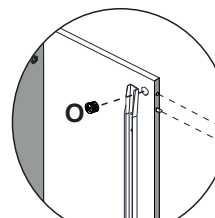


Detail 8

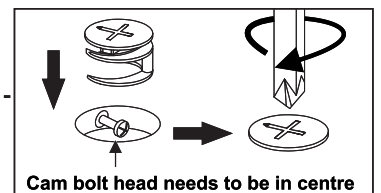

STEP 19

PARTS REQUIRED

9- TOP PANEL x1

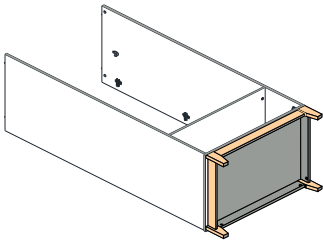




HARDWARE REQUIRED

A  01


O  04

J  04


TOOLS REQUIRED

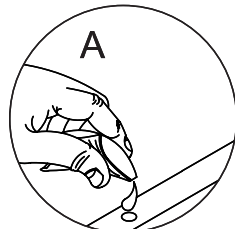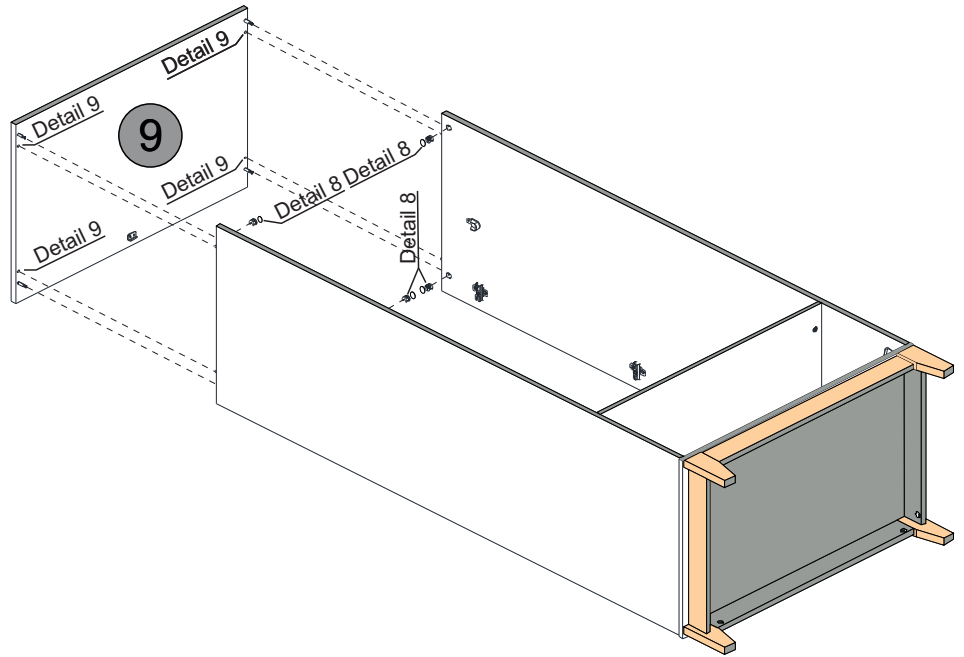

Detail 9

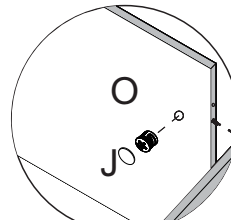


Detail 8

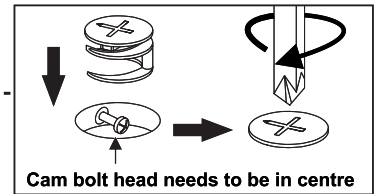


STEP 20


PARTS REQUIRED

10- BACK PANEL x2



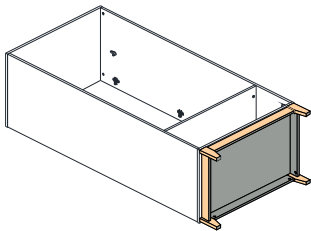


HARDWARE REQUIRED

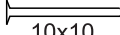E  10x10 32

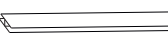W  01

TOOLS REQUIRED

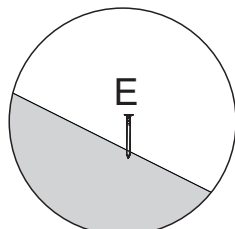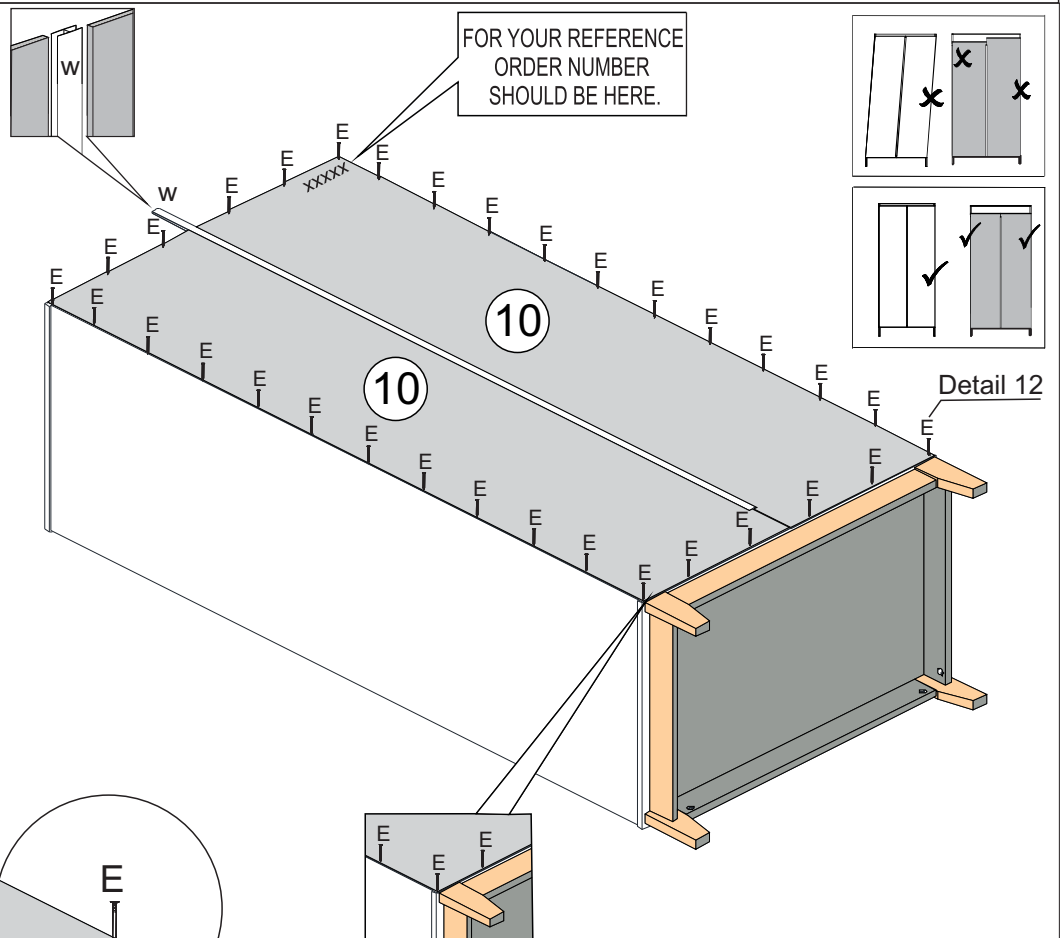


Detail 12


Detail 12

STEP 21




PARTS REQUIRED

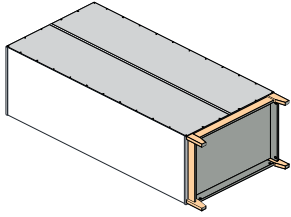

HARDWARE REQUIRED



TOOLS REQUIRED

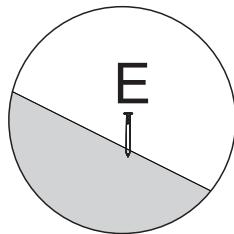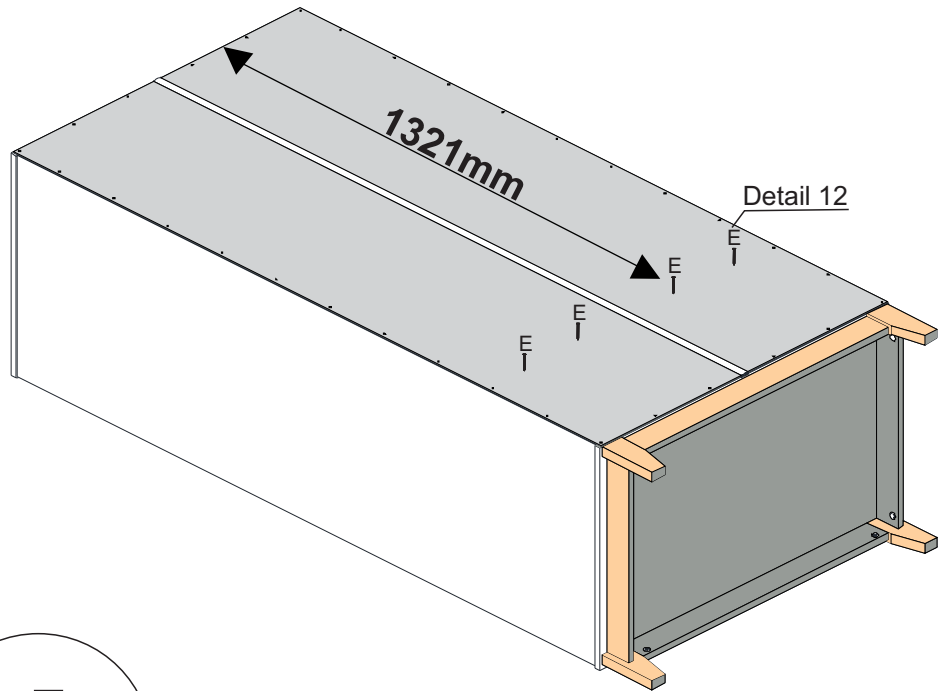



Detail 12

STEP 22




PARTS REQUIRED

- 11- DRAWER SIDES x2
- 12- DRAWER BACK x1
- 14- DRAWER BASE SUPPORT x2

HARDWARE REQUIRED



TOOLS REQUIRED

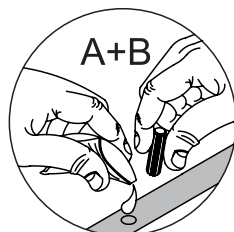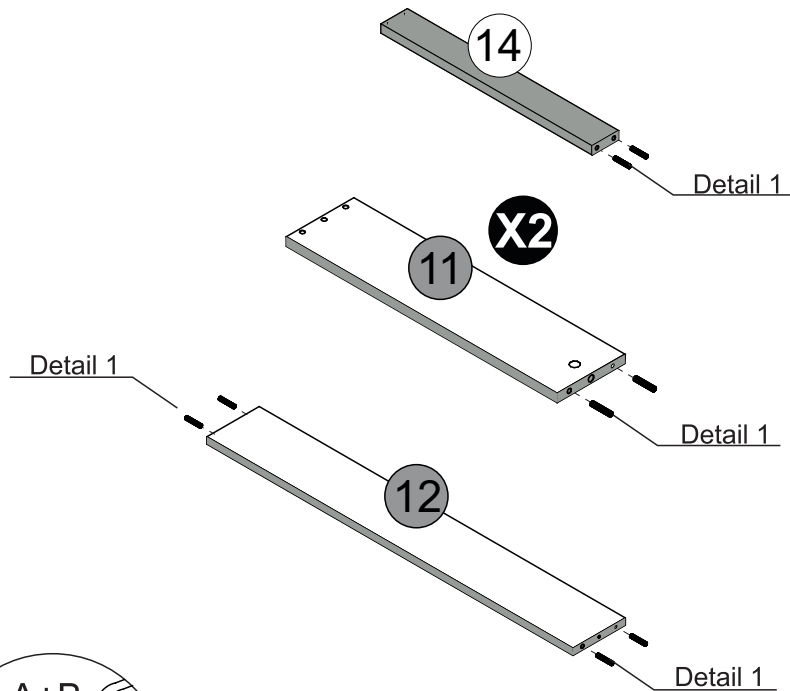

Detail 1

STEP 23




PARTS REQUIRED

15- DRAWER FRONT x1

HARDWARE REQUIRED

G  02

TOOLS REQUIRED

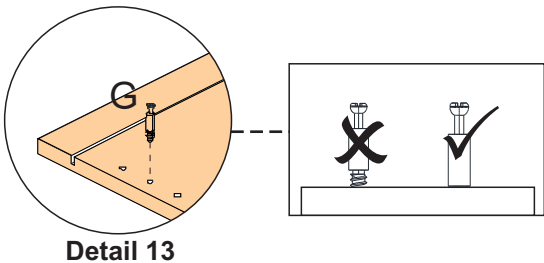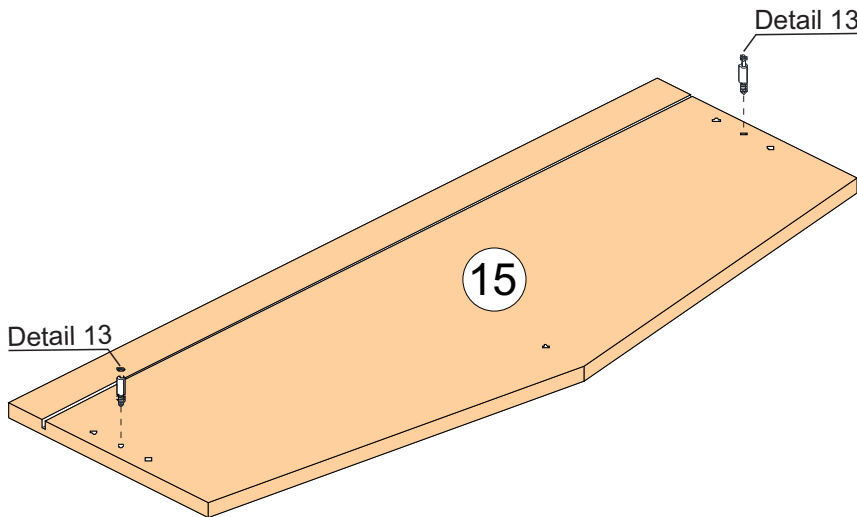


STEP 24

PARTS REQUIRED




11- DRAWER SIDES x2

12- DRAWER BACK x1

HARDWARE REQUIRED

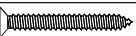D  Ø4,0 x 40mm 02


TOOLS REQUIRED

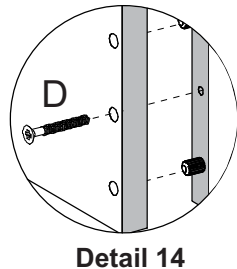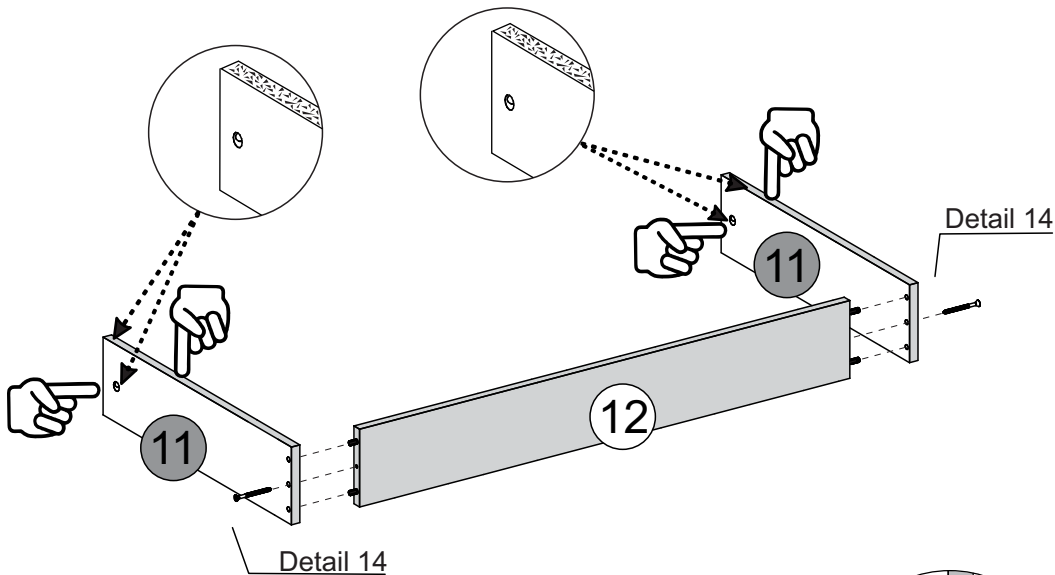

STEP 25

PARTS REQUIRED

15 - DRAWER FRONT x1

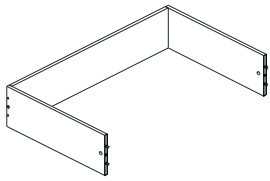





HARDWARE REQUIRED

A 01


F Ø12mm 02

J 02


TOOLS REQUIRED

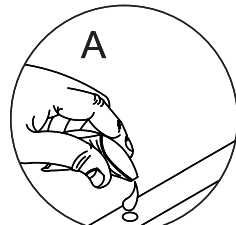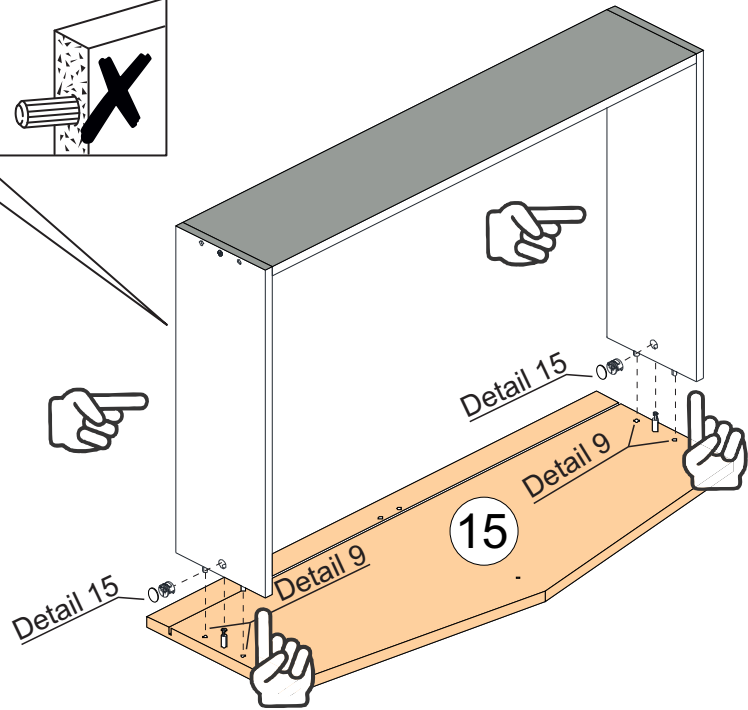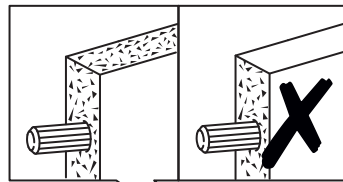

Detail 9

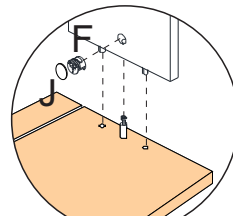

Detail 15

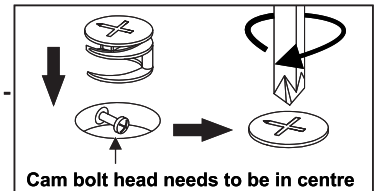


STEP 26

PARTS REQUIRED

13 - DRAWER BASE x1

14 - DRAWER BASE SUPPORT x1



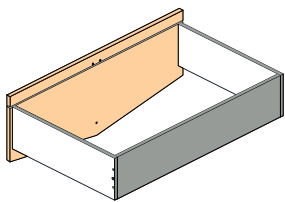


HARDWARE REQUIRED


A 01

E 08



TOOLS REQUIRED

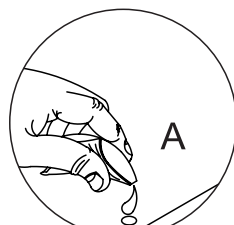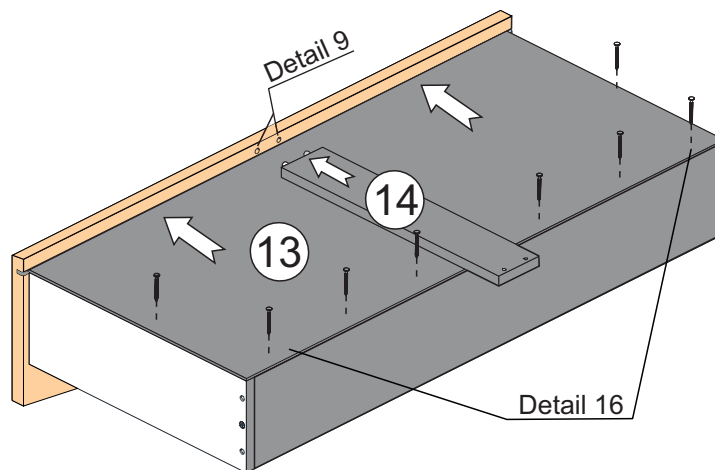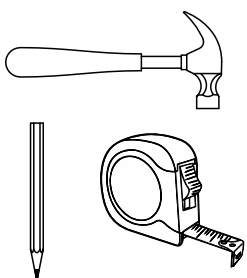

Detail 9

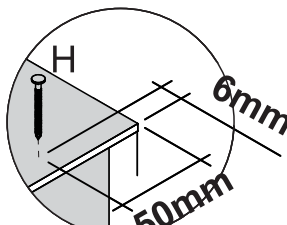


Detail 16

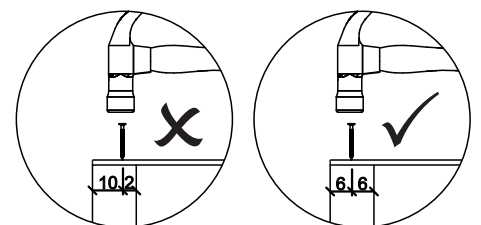
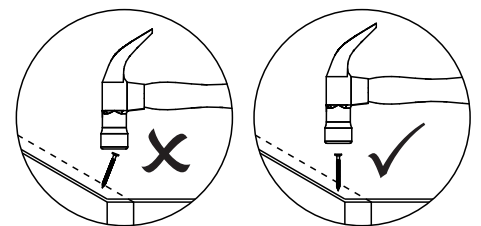


STEP 27



PARTS REQUIRED

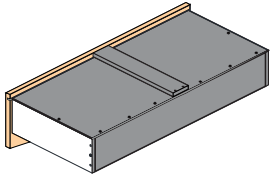

HARDWARE REQUIRED




TOOLS REQUIRED

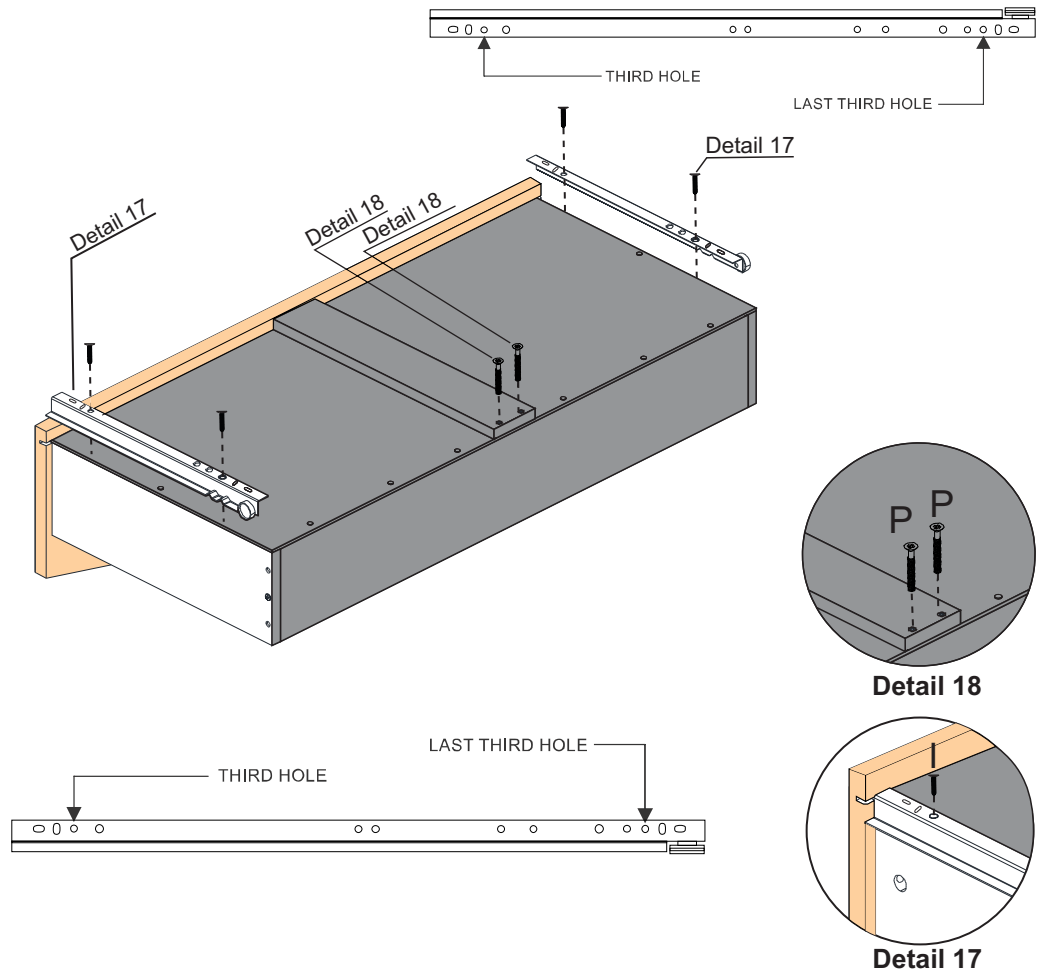



STEP 28




PARTS REQUIRED

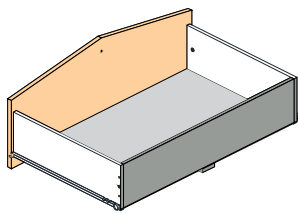

HARDWARE REQUIRED




TOOLS REQUIRED

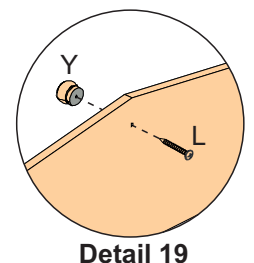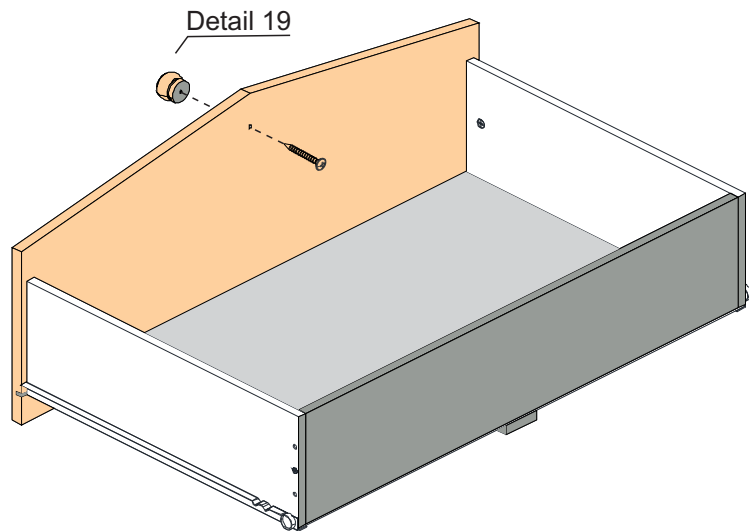

Detail 19


STEP 29

PARTS REQUIRED

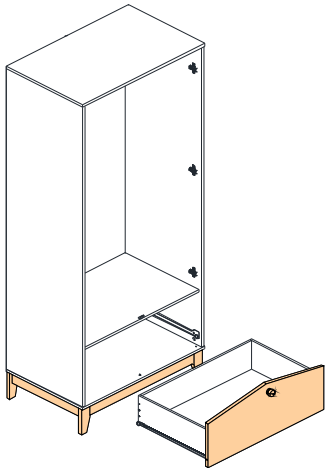


HARDWARE REQUIRED

TOOLS REQUIRED

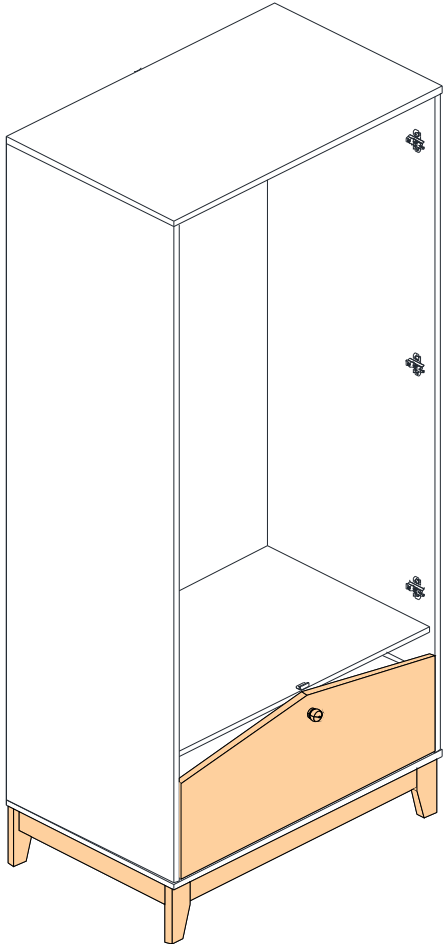


STEP 30




PARTS REQUIRED

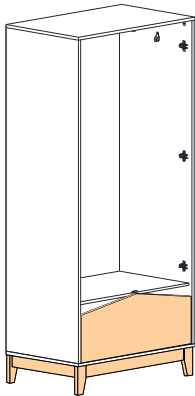

HARDWARE REQUIRED



TOOLS REQUIRED

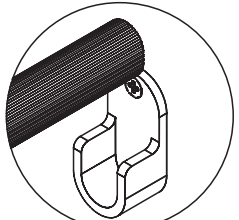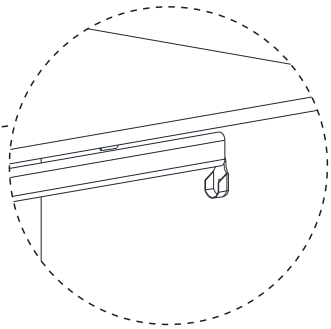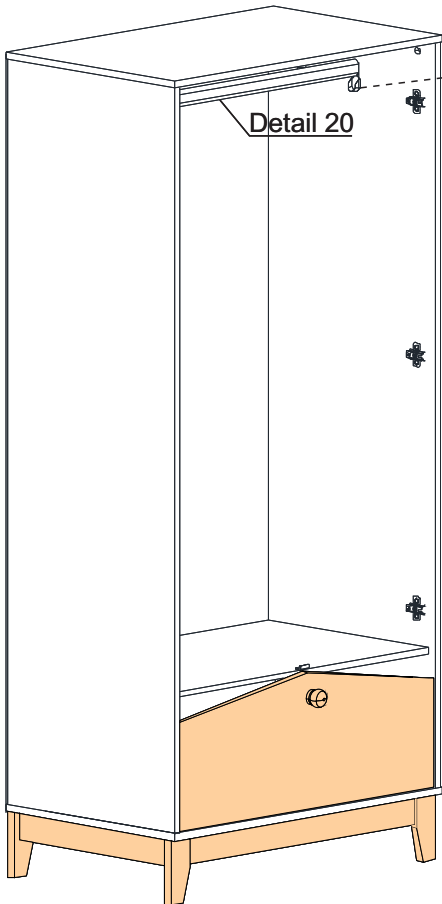

Detail 20


STEP 31

PARTS REQUIRED

16- LEFT DOOR x1




17- RIGHT DOOR x1

HARDWARE REQUIRED

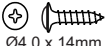M  12
Ø4,0 x 14mm

R  06

TOOLS REQUIRED

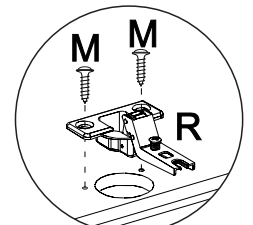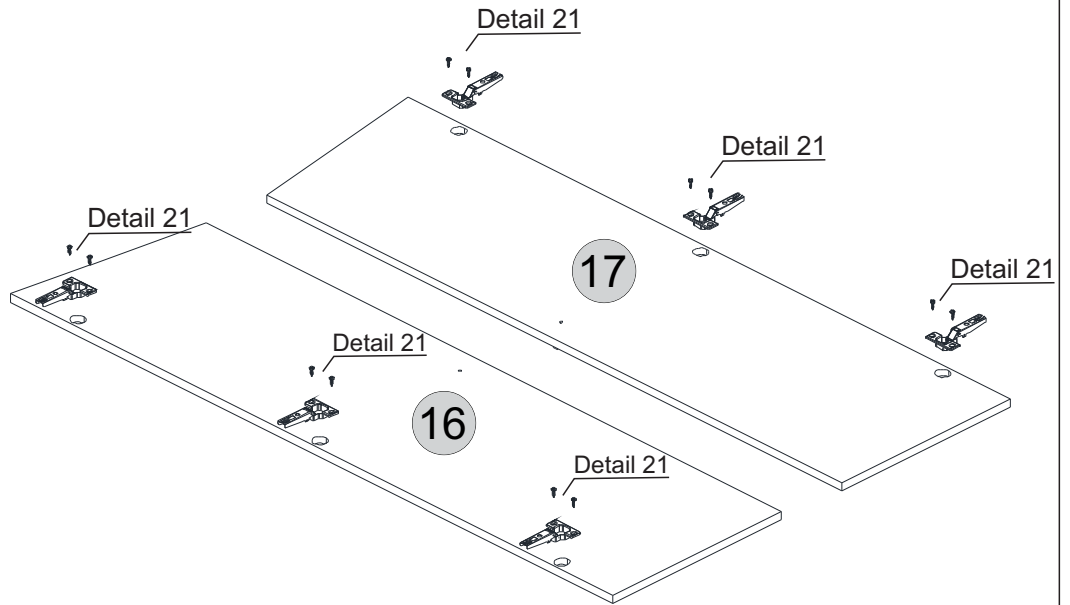


Detail 21

STEP 32


PARTS REQUIRED


16- LEFT DOOR x1

17- RIGHT DOOR x1



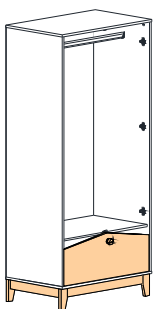


HARDWARE REQUIRED

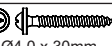L  02
Ø4,0 x 30mm


Y  02

TOOLS REQUIRED

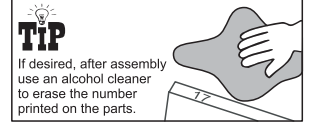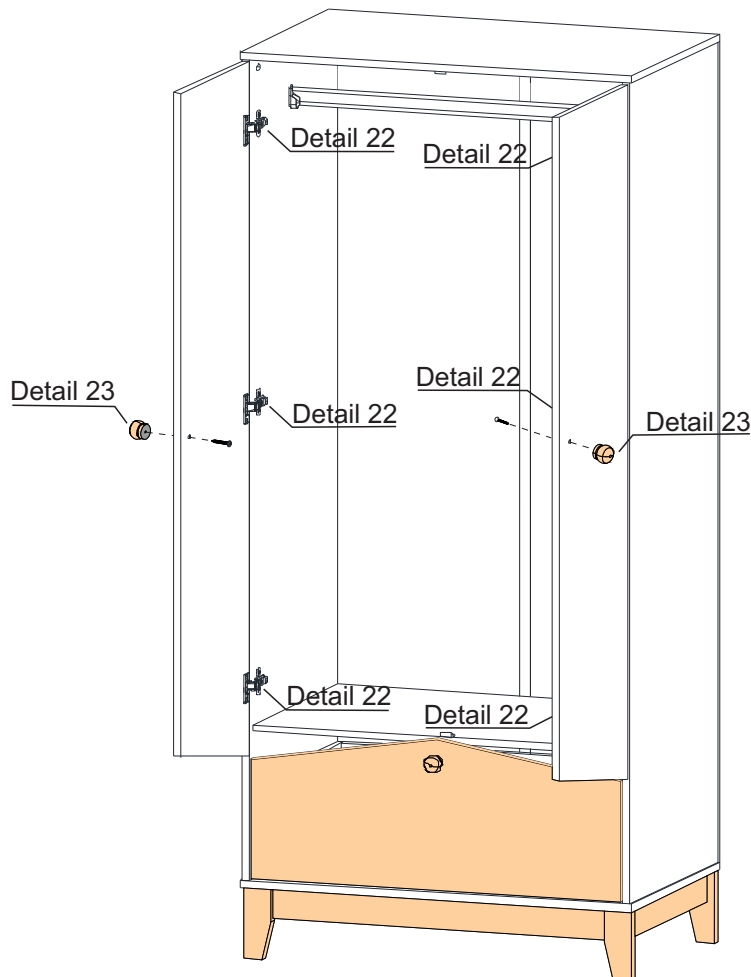


TIP

If desired, after assembly use an alcohol cleaner to erase the number printed on the parts.

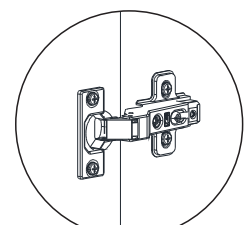


Detail 22

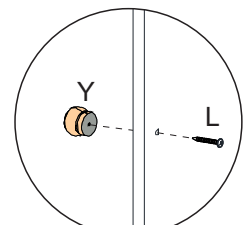

Detail 23

STEP 33






PARTS REQUIRED

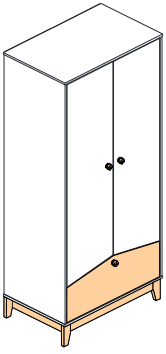

HARDWARE REQUIRED

K  01

TOOLS REQUIRED

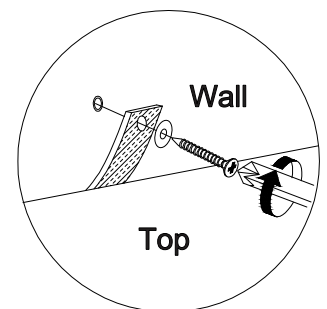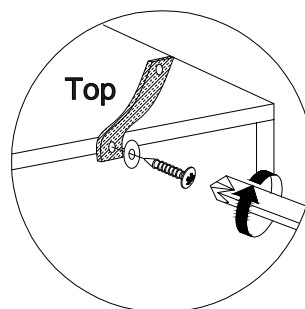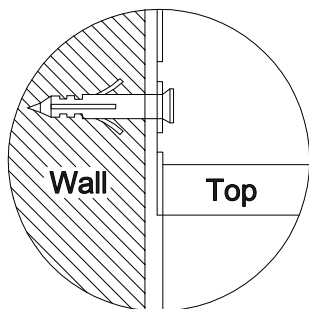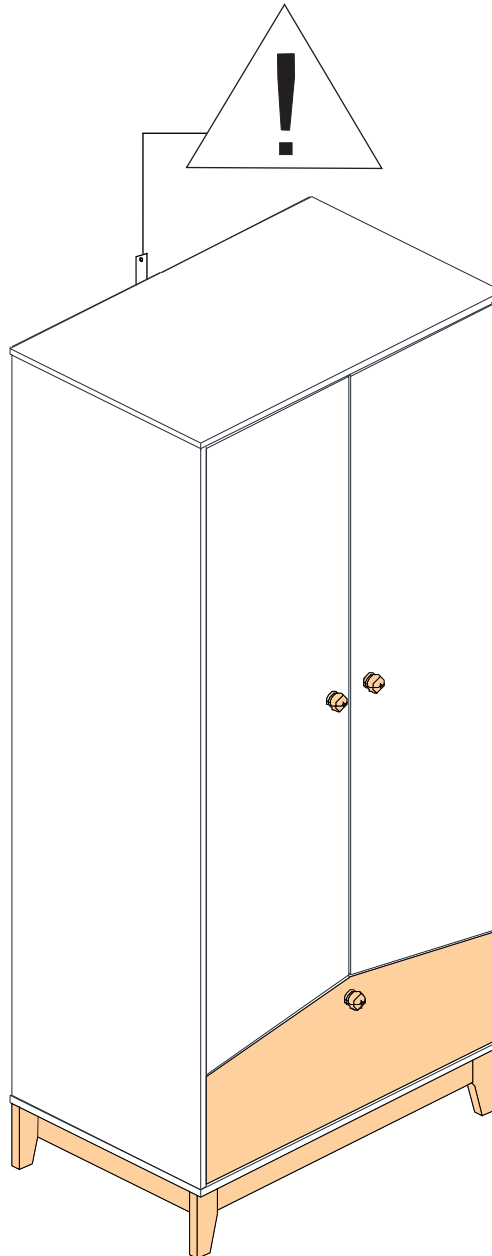

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.