


NEVADA 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

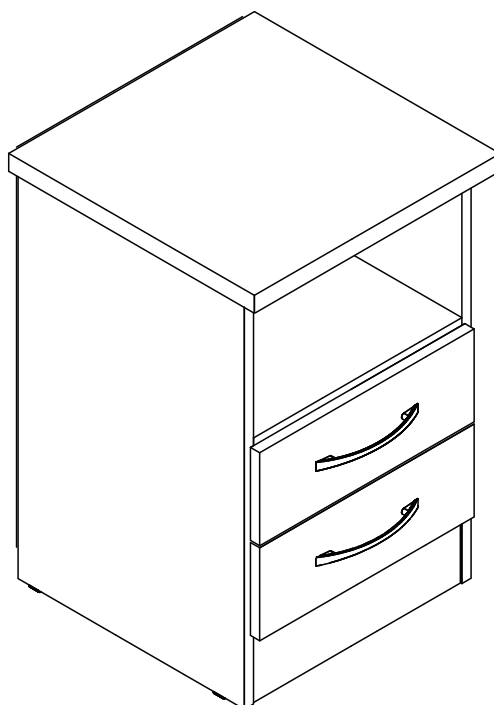



IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.






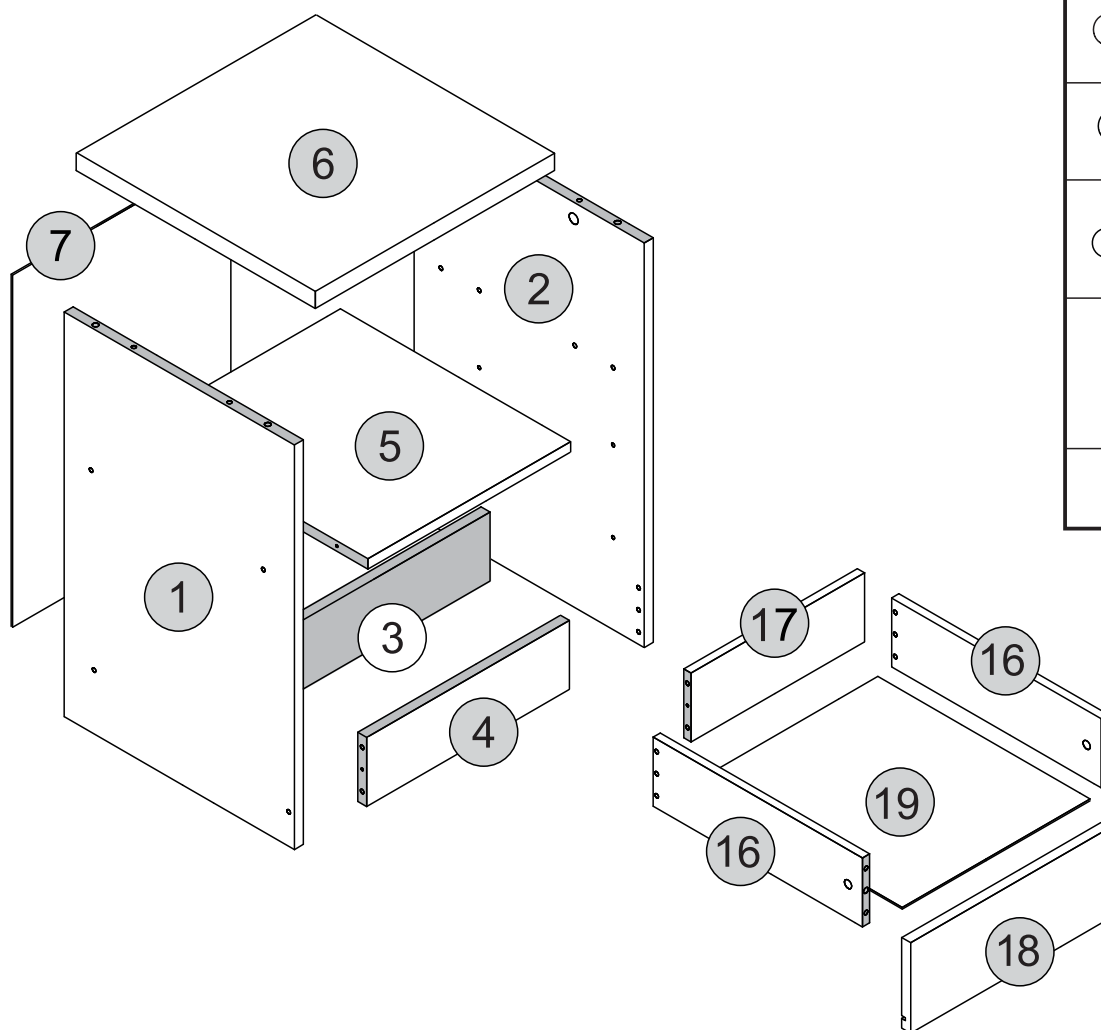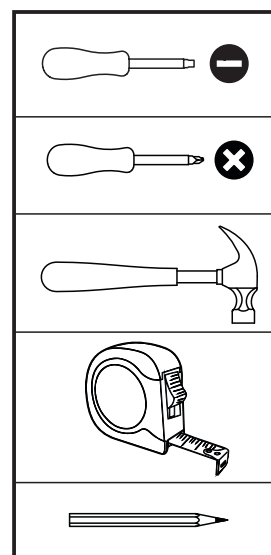






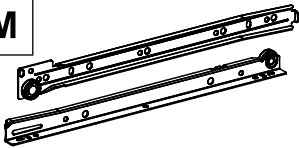

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

TOOLS REQUIRED**PARTS LIST*****Please Note:***



The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Description	Quantity	Carton
1	Left Side Panel	1	1/1
2	Right Side Panel	1	1/1
3	Back Baseboard	1	1/1
4	Front Baseboard	1	1/1
5	Shelf	1	1/1
6	Top Panel	1	1/1
7	Back Panel	1	1/1
16	Drawer Side	4	1/1
17	Drawer Back Panel	2	1/1
18	Drawer Front	2	1/1
19	Drawer Bottom	2	1/1

FITTINGS LIST

A  Flat Head Screw 2/+ Ø6,0 x 8mm (8x)	B  Flat Head Screw 2/+ Ø4,0 x 14mm (12x)	C  Flan Head Screw 1/+ Ø4,0 x 20mm (4x)	D  Flat Head Screw 2/+ Ø4,0 x 45mm (12x)
E  2/+ Dowel Ø6,0 x 30mm (32x)	F  2/+ Nail 10 x 10 (33x)	G  1/+ Cam Bolt (8x)	H  2/+ Cam Nut Ø12mm (8x)
I  1/+ Plastic Foot (4x)	J  2/+ Hole Plugs (20x)	K  Glue (2x)	L  Handle (2x)
M  Drawer Runners (2x)	N  1/+ Flan Head Screw Ø3,5 x 12mm (2x)		



TIPS FOR FITTINGS CAM-LOCKS

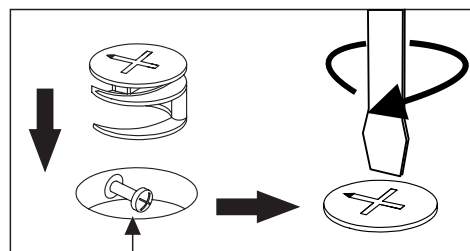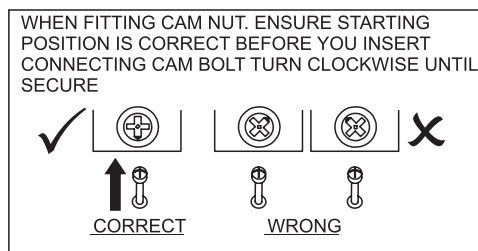

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

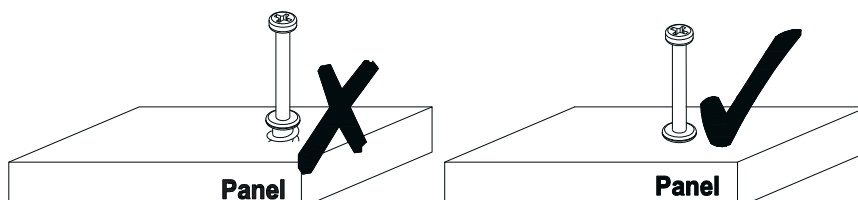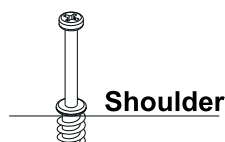



STEP 1

PARTS REQUIRED

1 - LEFT SIDE PANEL x1

HARDWARE REQUIRED




E  02
Ø6,0 x 30mm

F  02
10 x 10

I  02

K  01
GLUE

TOOLS REQUIRED

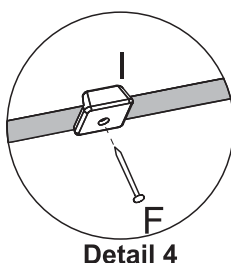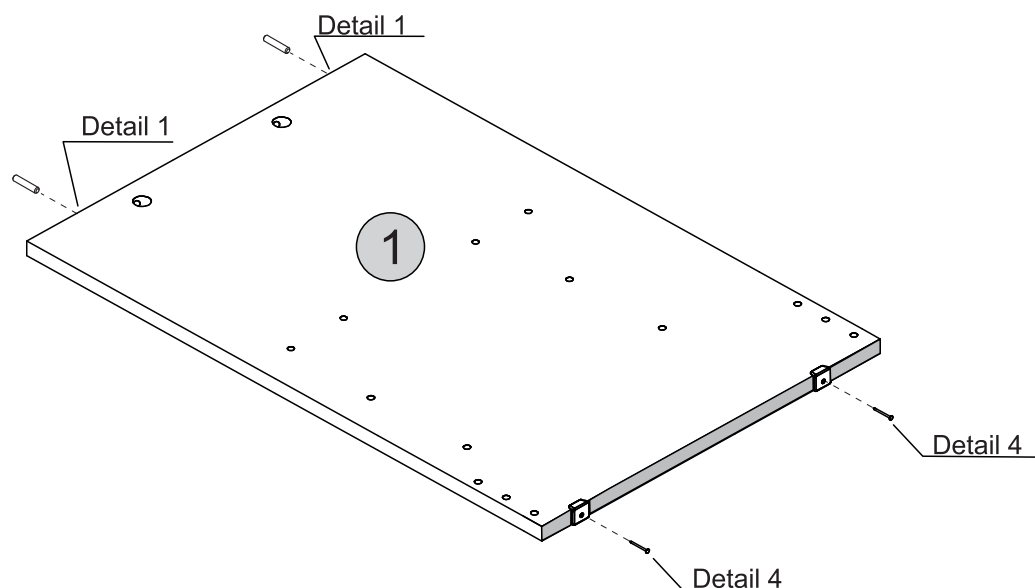



STEP 2

PARTS REQUIRED

2 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED




E  02
Ø6,0 x 30mm

F  02
10 x 10

I  02

K  01
GLUE

TOOLS REQUIRED

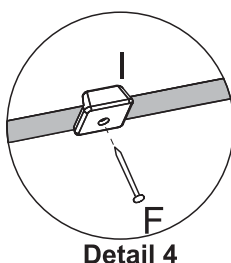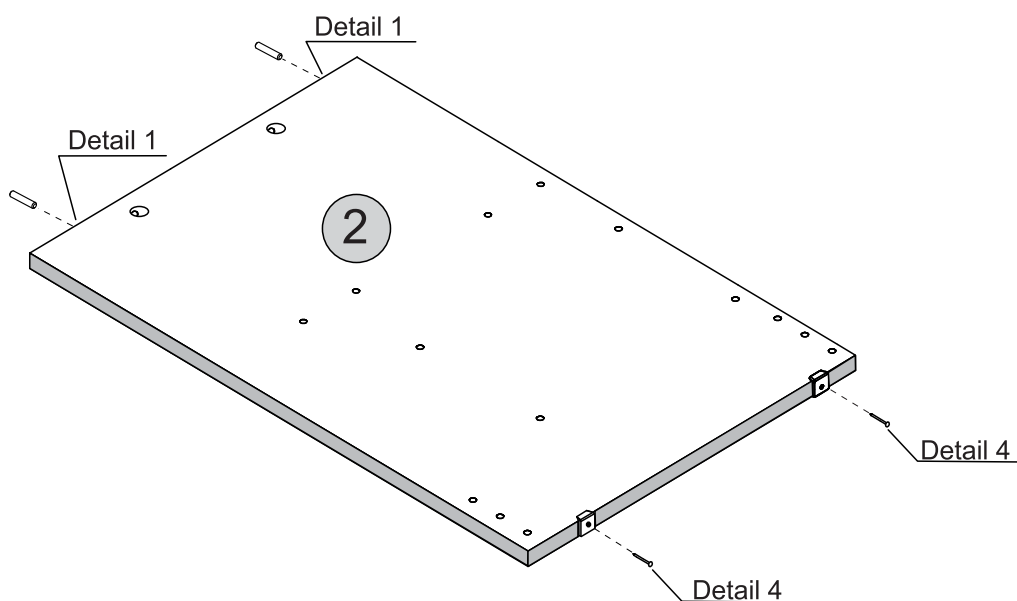

STEP 3

PARTS REQUIRED





2 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED

A  04
Ø6,0 x 8mm

M  02
RIGHT

TOOLS REQUIRED

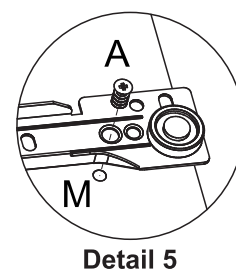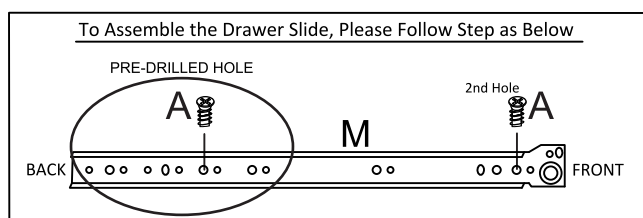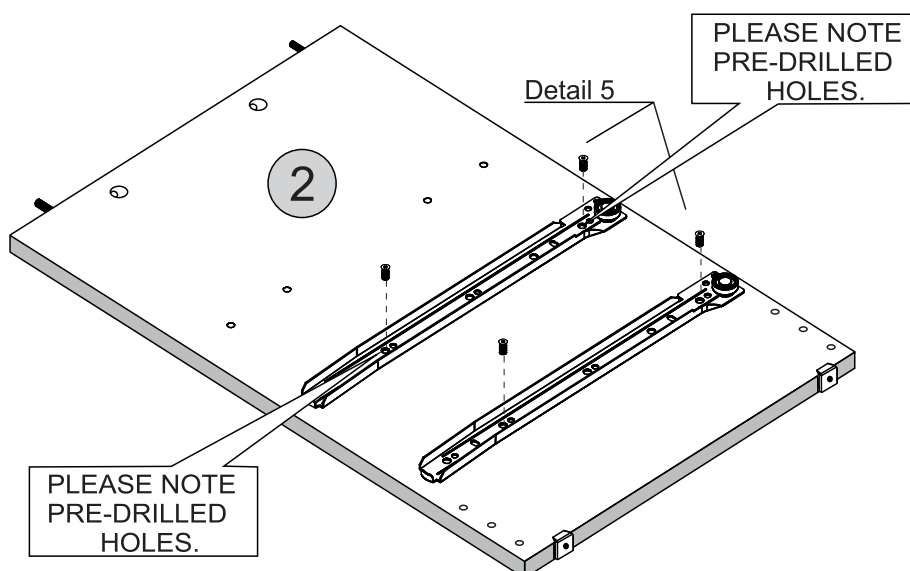

STEP 4

PARTS REQUIRED




1 - LEFT SIDE PANEL x1

HARDWARE REQUIRED

A  04
Ø6,0 x 8mm

M  02
LEFT

TOOLS REQUIRED

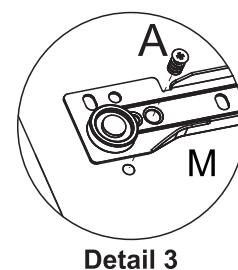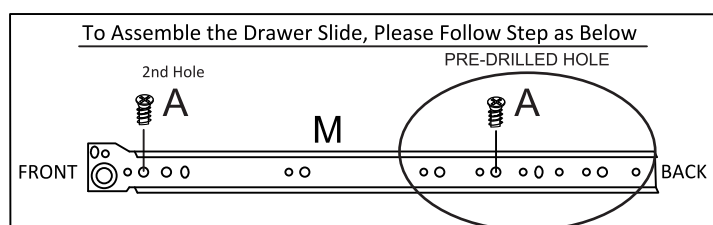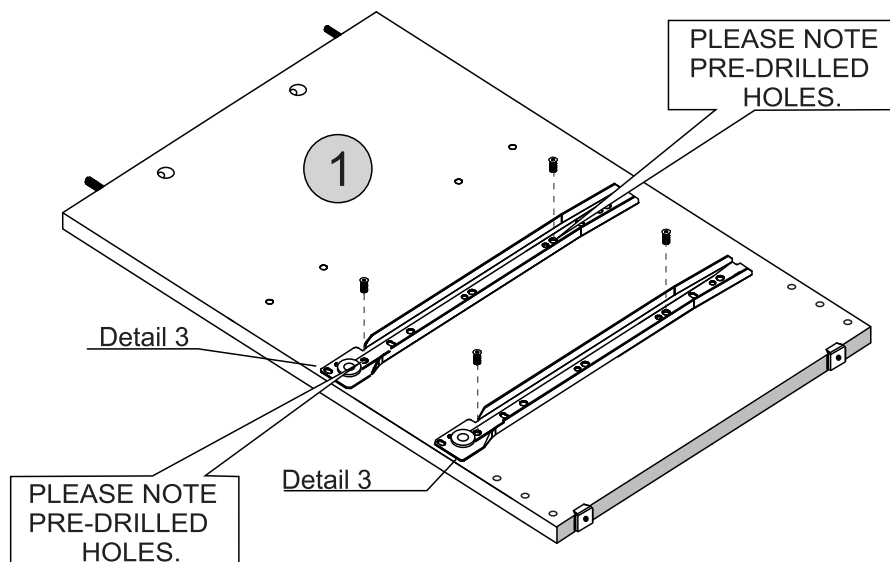

STEP 5


PARTS REQUIRED

3 - BACK BASEBOARD x1


4 - FRONT BASEBOARD x1

5 - SHELF x1

HARDWARE REQUIRED

E  12
Ø6,0 x 30mmK  01
GLUE

TOOLS REQUIRED

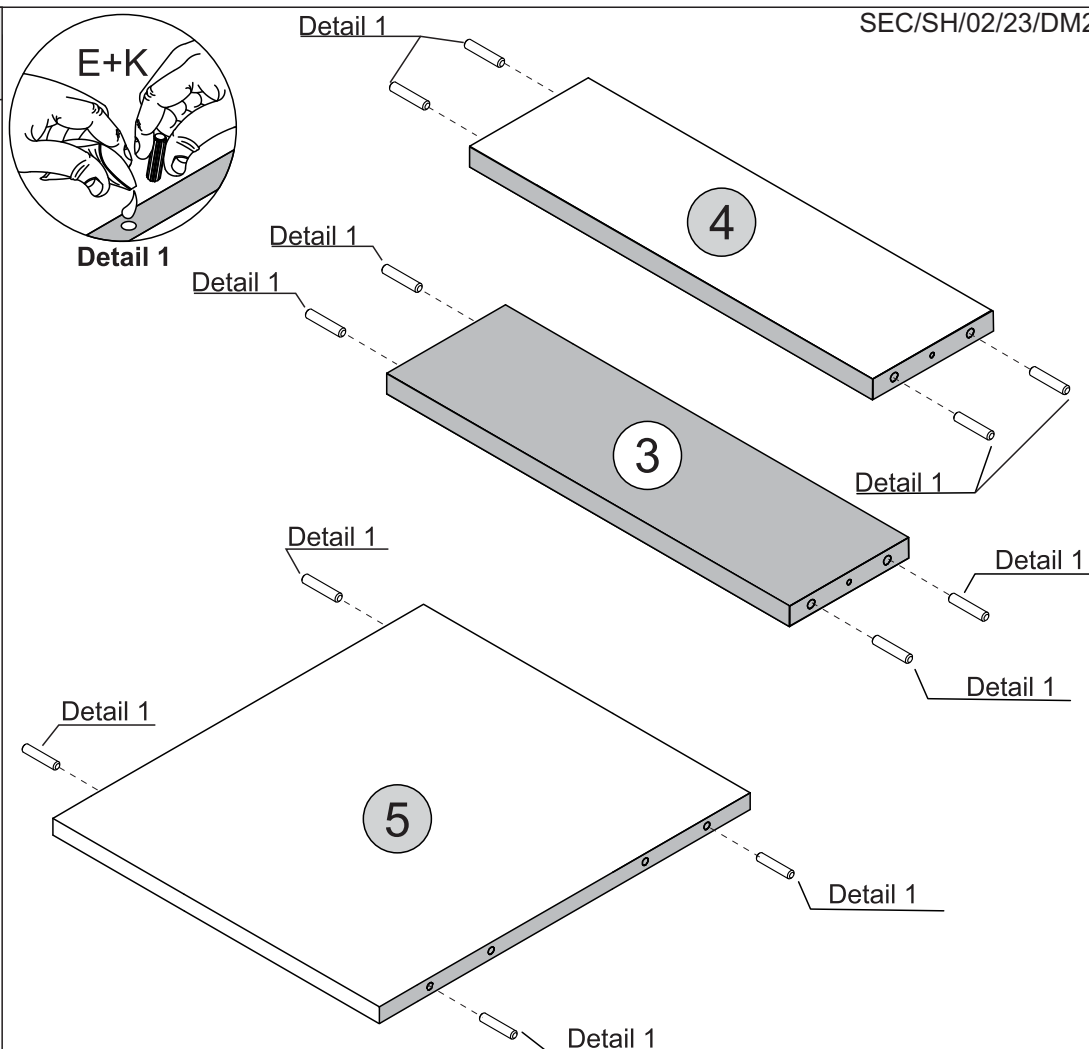

STEP 6

PARTS REQUIRED


2 - RIGHT SIDE PANEL x1

3 - BACK BASEBOARD x1



4 - FRONT BASEBOARD x1

5 - SHELF x1

HARDWARE REQUIRED

D  04
Ø4,0 x 45mmK  01
GLUE


TOOLS REQUIRED

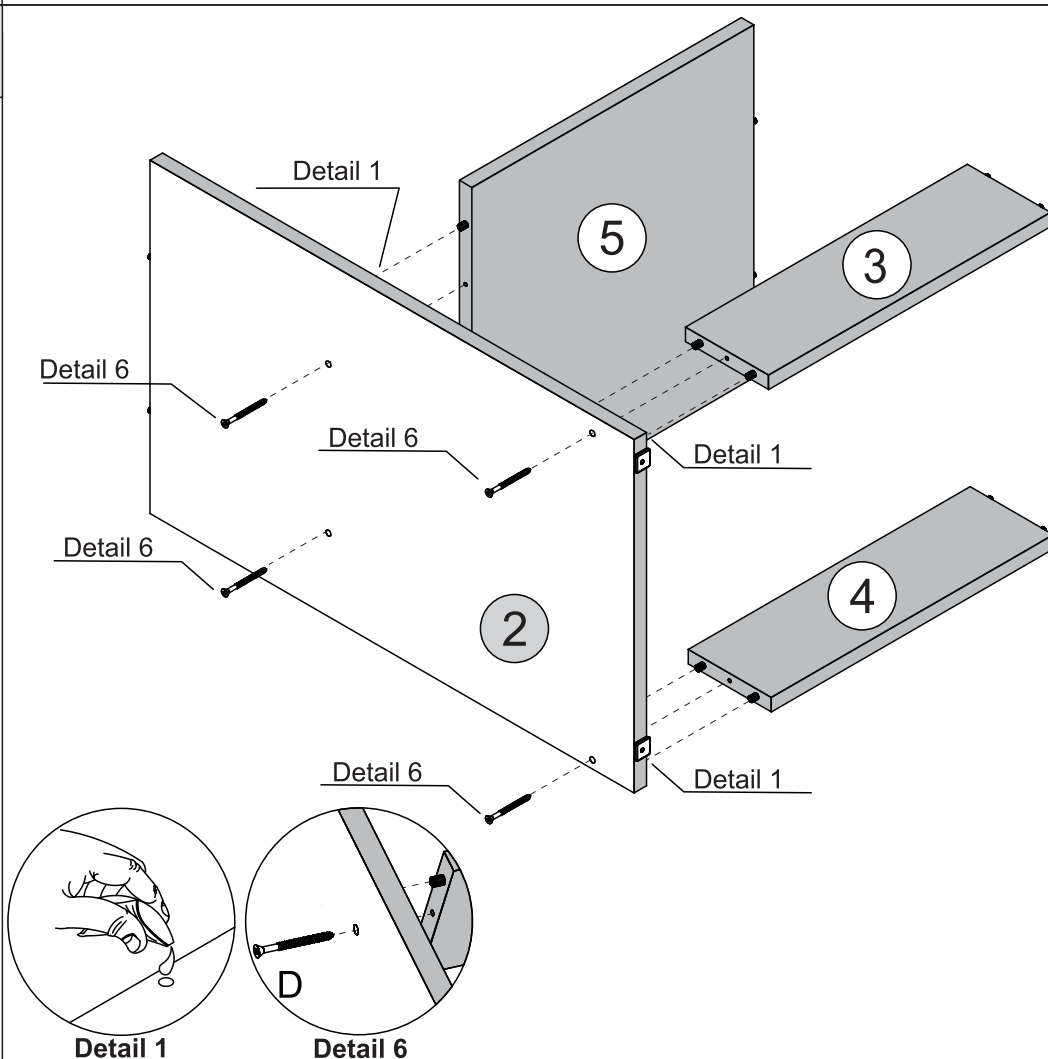

STEP 7

PARTS REQUIRED

1 - LEFT SIDE PANEL x1


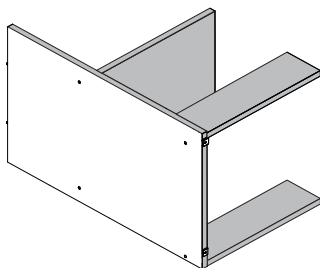


HARDWARE REQUIRED


D  04
Ø4,0 x 45mm

K  01
GLUE

TOOLS REQUIRED

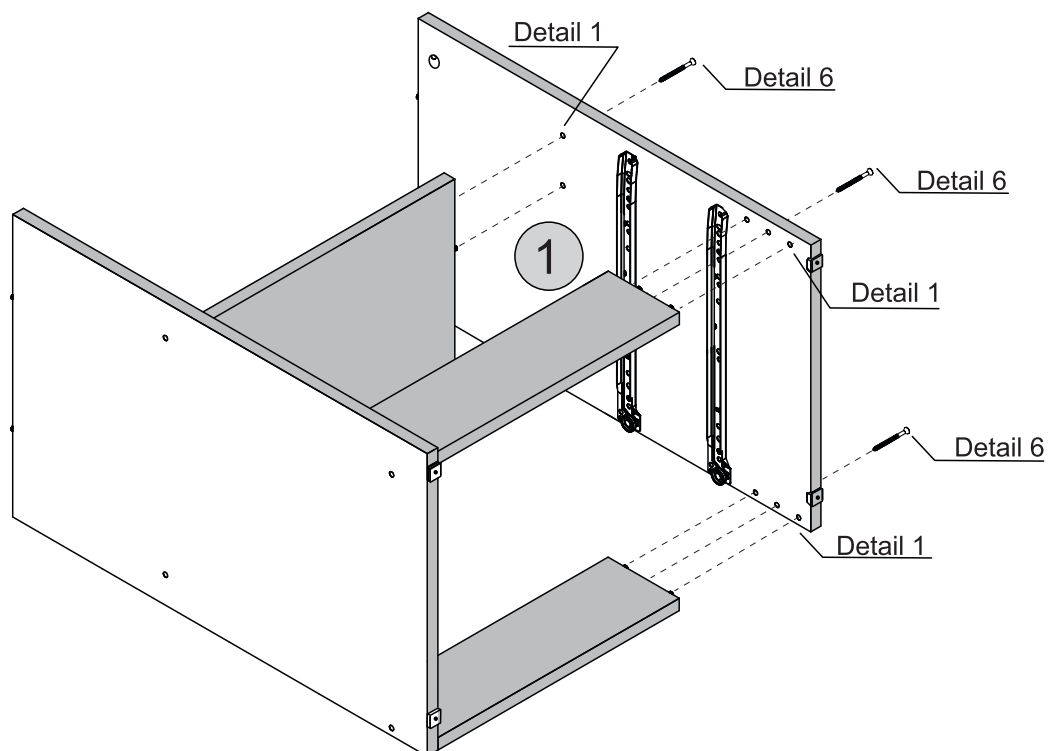

Detail 1

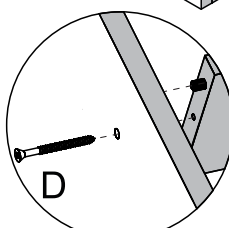


Detail 6

STEP 8




PARTS REQUIRED

6 - TOP PANEL x1


HARDWARE REQUIRED

G  04

TOOLS REQUIRED

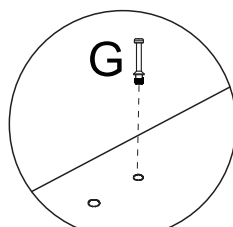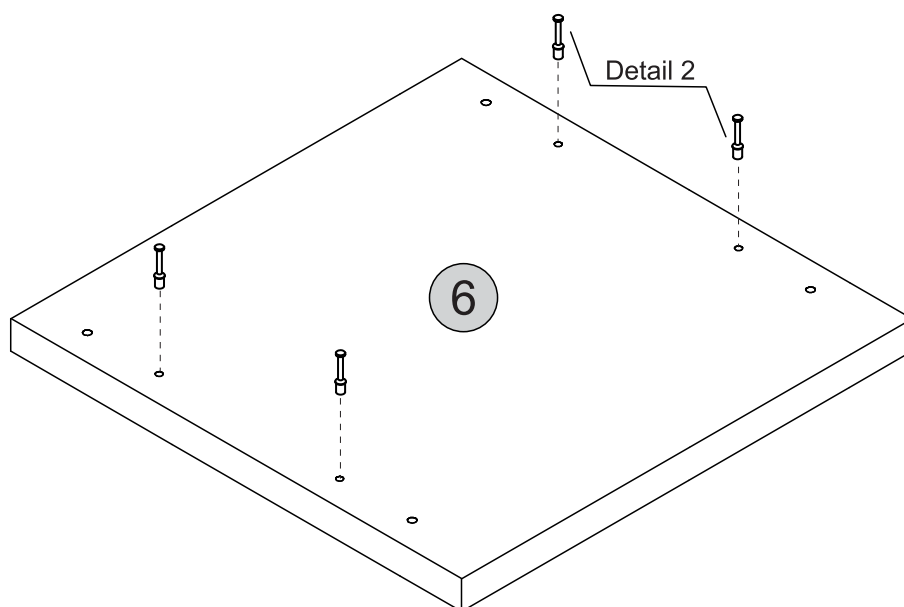


Detail 2

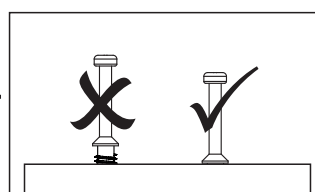

STEP 9

PARTS REQUIRED

6 - TOP PANEL x1





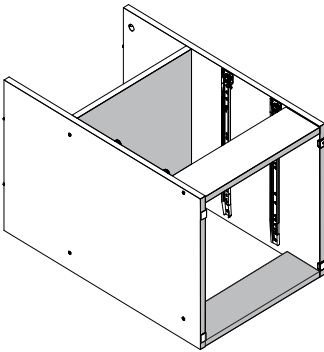


HARDWARE REQUIRED

H  04

K  01


TOOLS REQUIRED

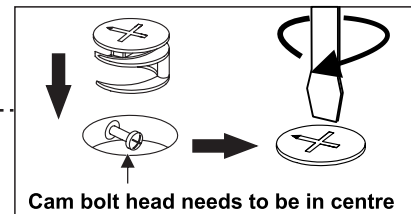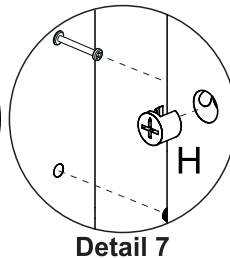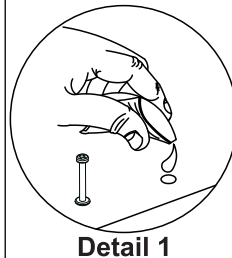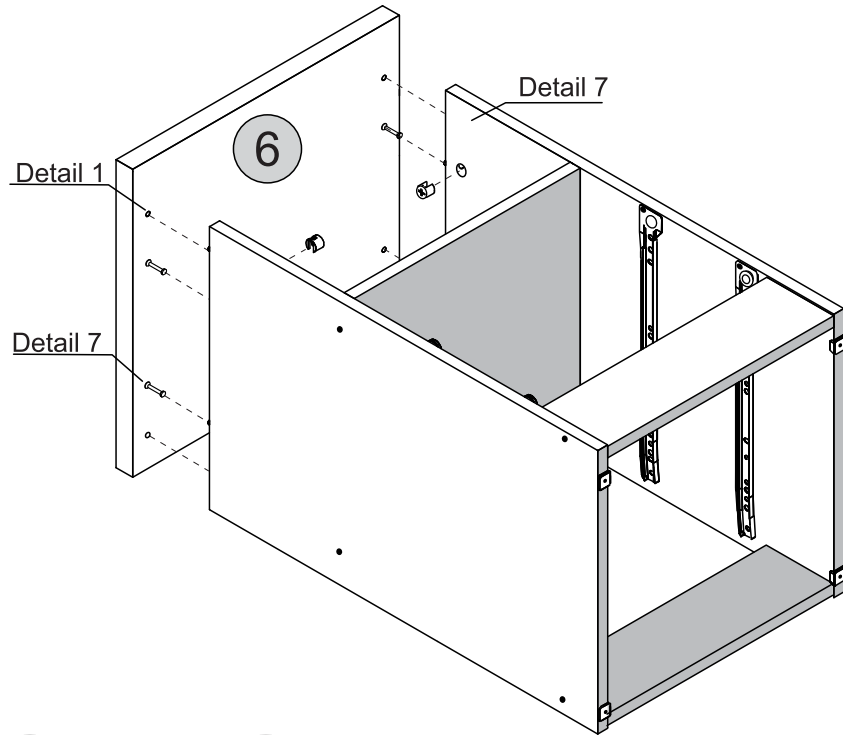


STEP 10

PARTS REQUIRED

7 - BACK PANEL x1




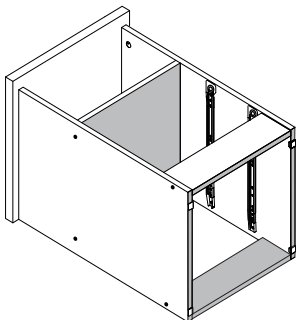


HARDWARE REQUIRED




F  13

N  02

TOOLS REQUIRED

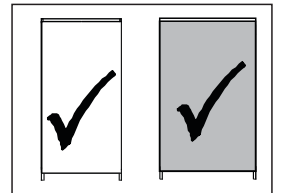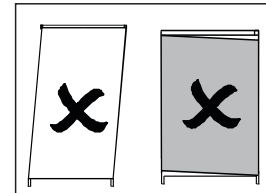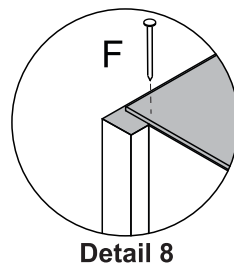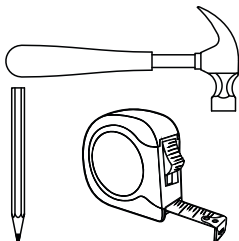

* For your future reference
Order Number should be here

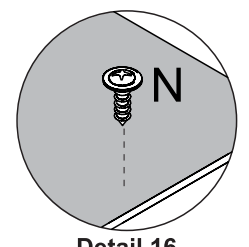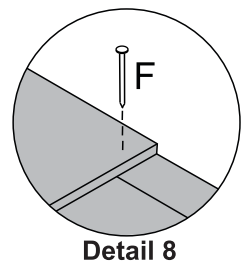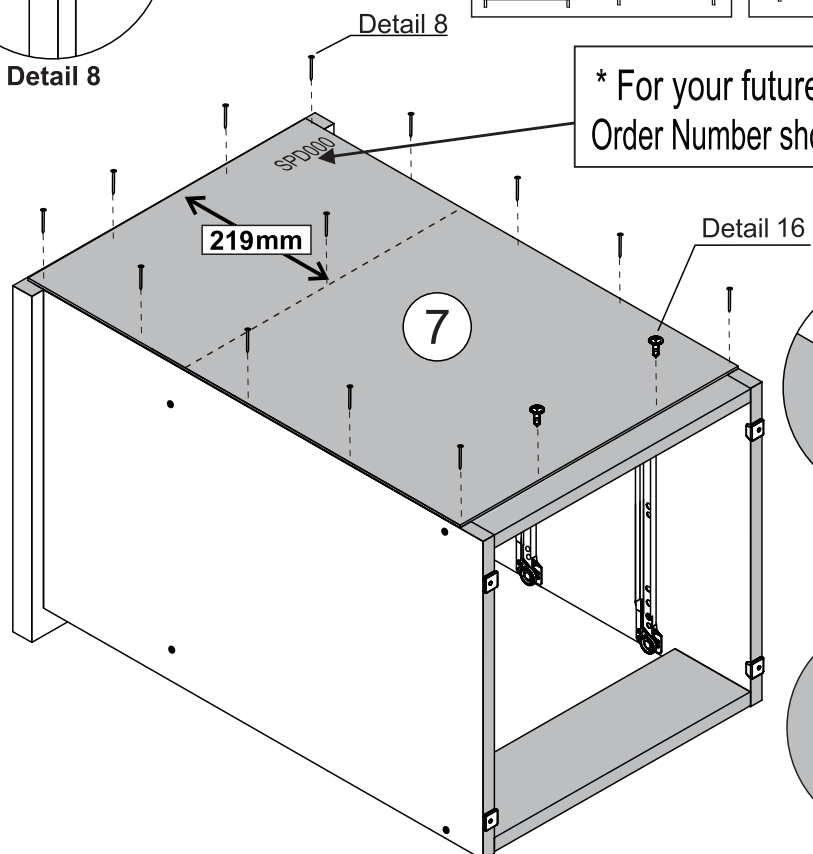

STEP 11

SEC/SH/02/23/DM2


PARTS REQUIRED

16 - DRAWER SIDE x4


17 - DRAWER BACK PANEL x2

18 - DRAWER FRONT x2



HARDWARE REQUIRED

E  16
Ø6,0 x 30mm

K  01
GLUE

G  04

TOOLS REQUIRED

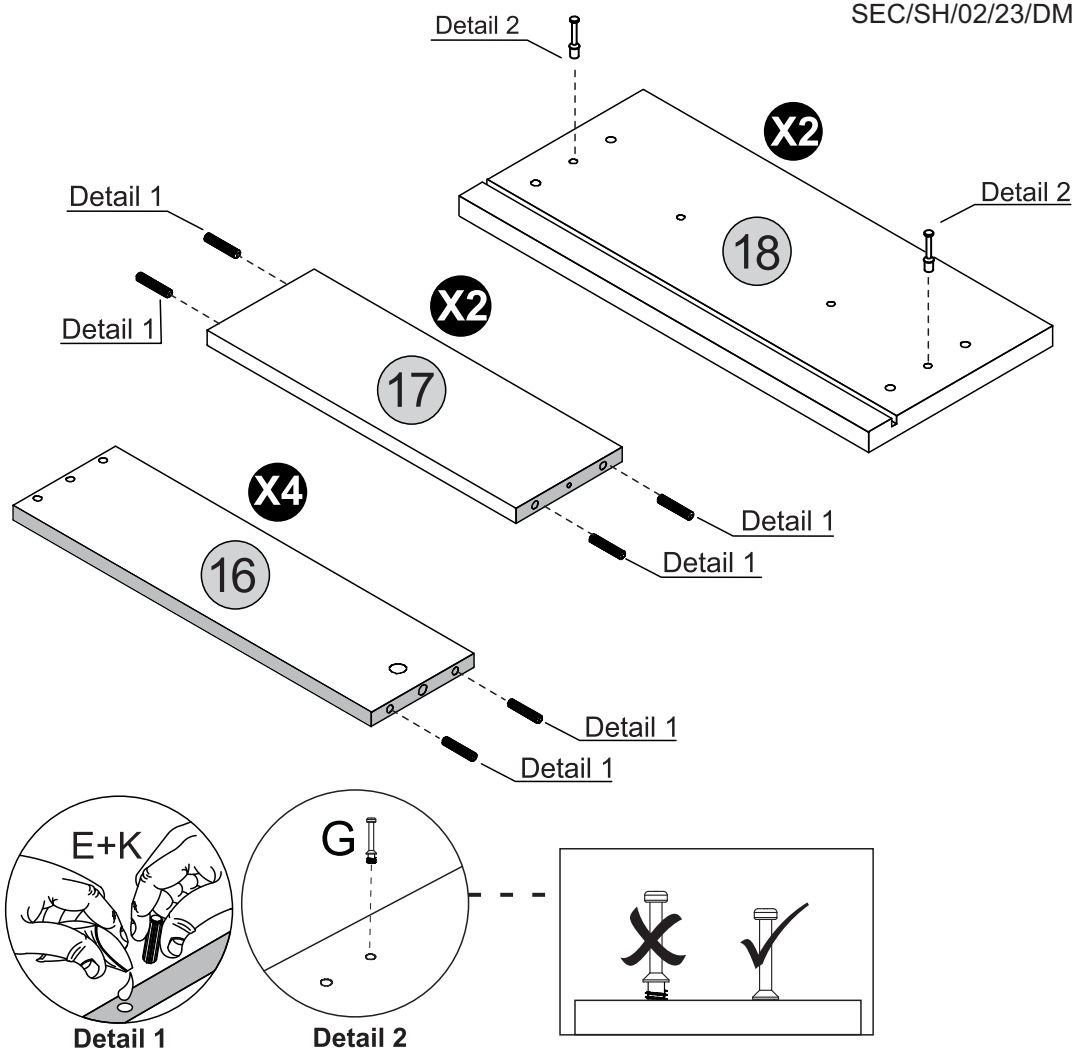


STEP 12

PARTS REQUIRED



16 - DRAWER SIDE x4

17 - DRAWER BACK PANEL x2

HARDWARE REQUIRED

D  04
Ø4,0 x 45mm


TOOLS REQUIRED

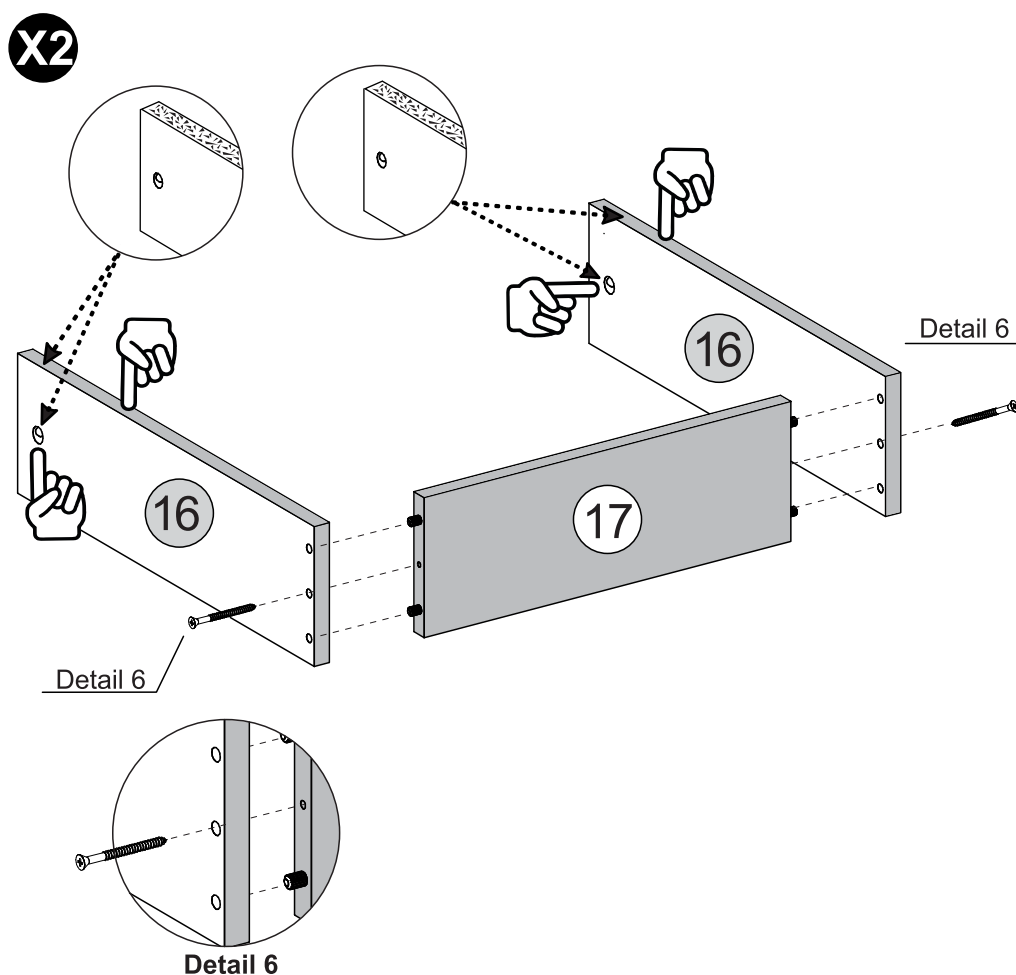

STEP 13

PARTS REQUIRED



18 - DRAWER FRONT x2

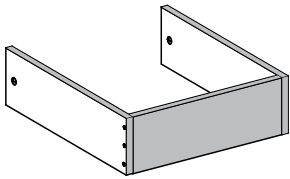

HARDWARE REQUIRED

K GLUE 01


TOOLS REQUIRED

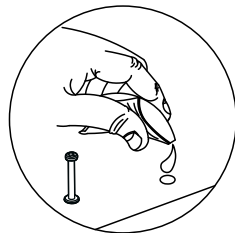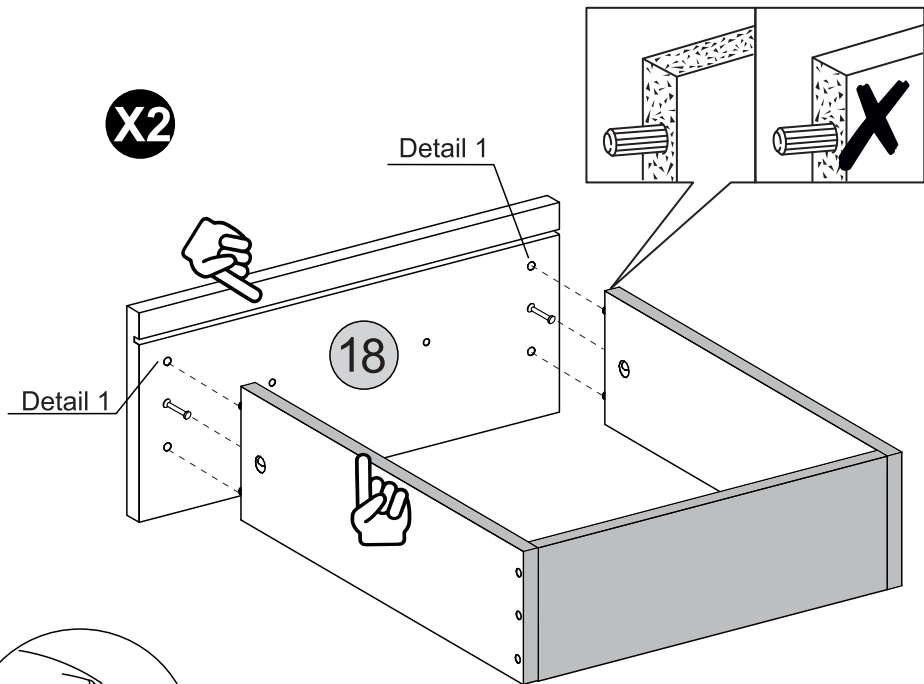

Detail 1

STEP 14

PARTS REQUIRED



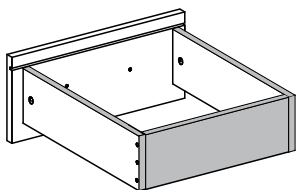


HARDWARE REQUIRED


H 04

J 08

TOOLS REQUIRED

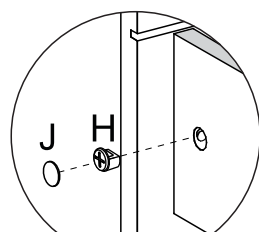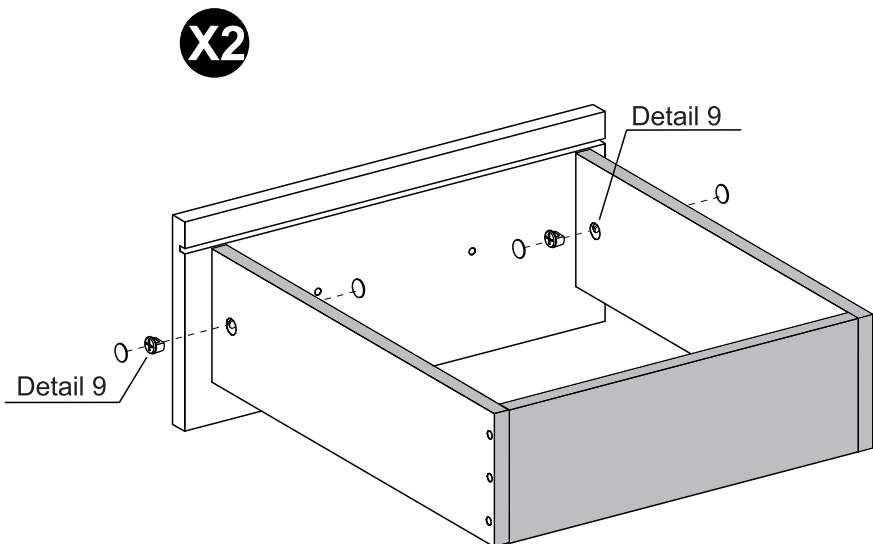


Detail 9

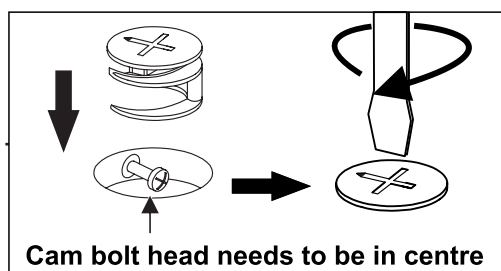

STEP 15

PARTS REQUIRED




19 - DRAWER BOTTOM x2

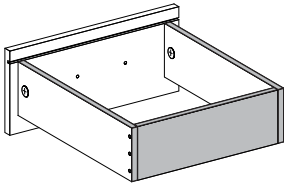

HARDWARE REQUIRED


F 10 x 10 08

TOOLS REQUIRED

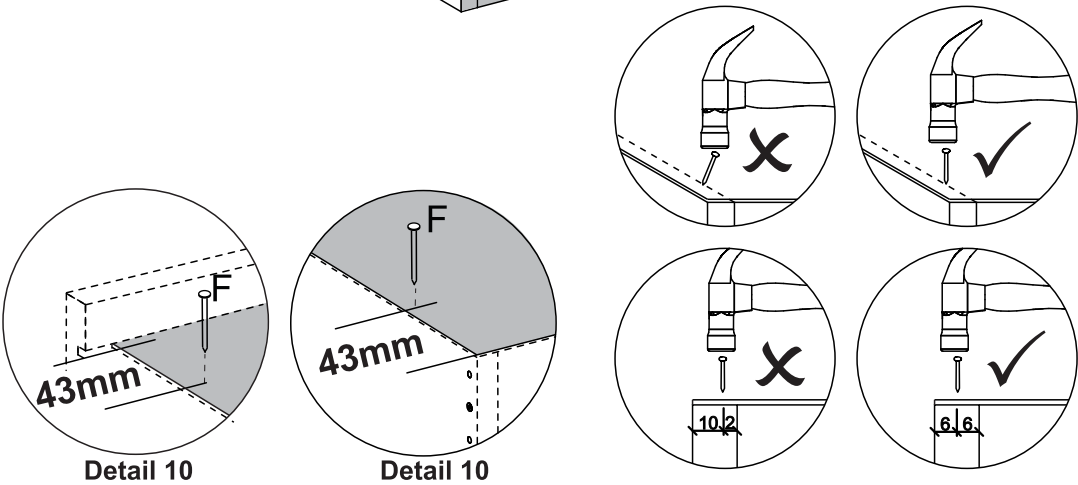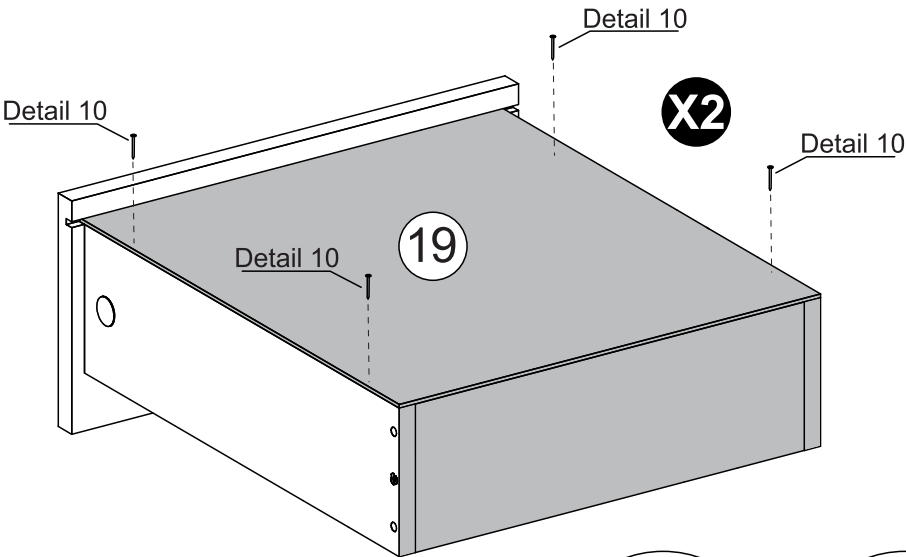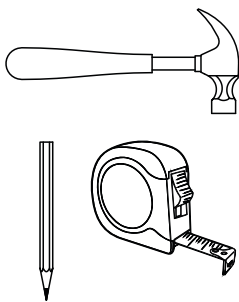

STEP 16




PARTS REQUIRED

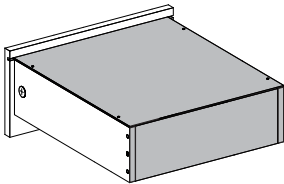

HARDWARE REQUIRED


F 10 x 10 08

TOOLS REQUIRED

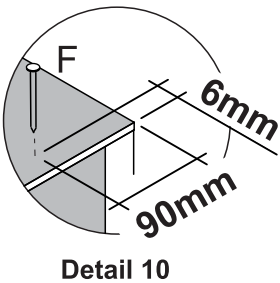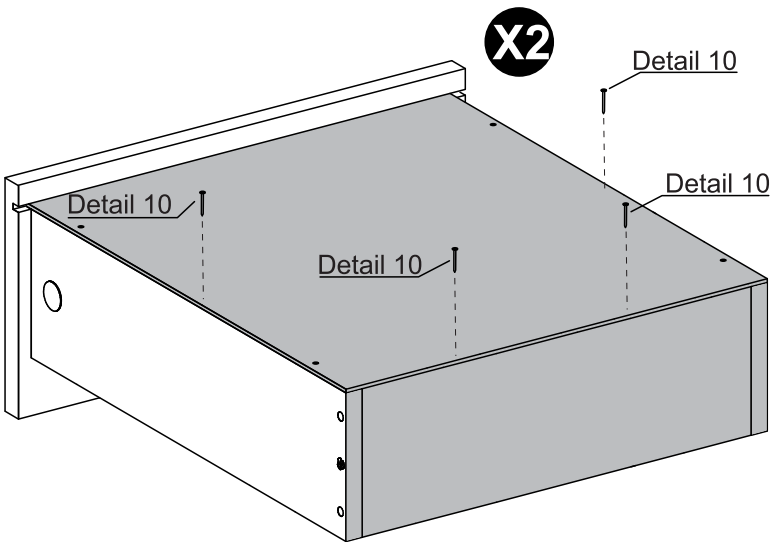
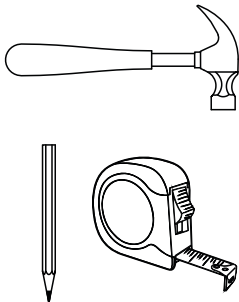


STEP 17





PARTS REQUIRED

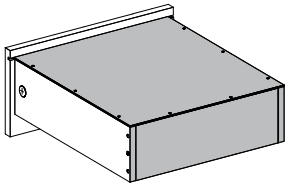

HARDWARE REQUIRED




TOOLS REQUIRED

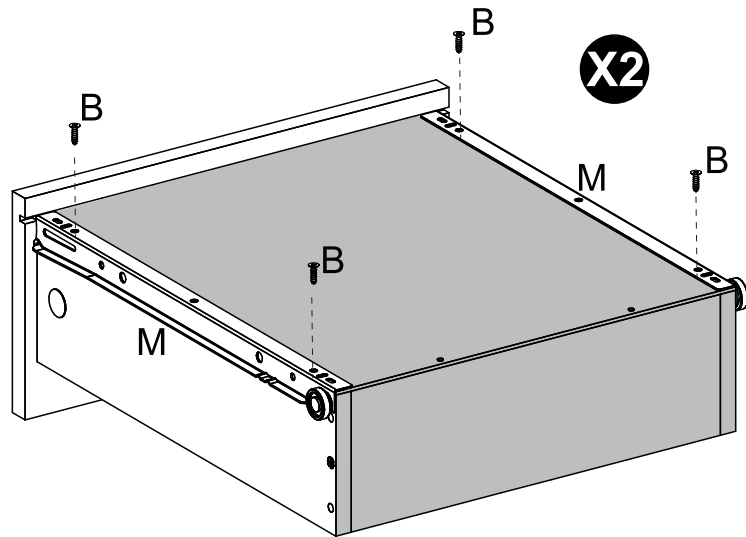


STEP 18




PARTS REQUIRED

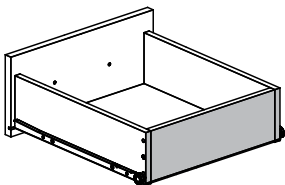

HARDWARE REQUIRED





TOOLS REQUIRED

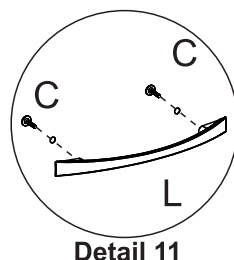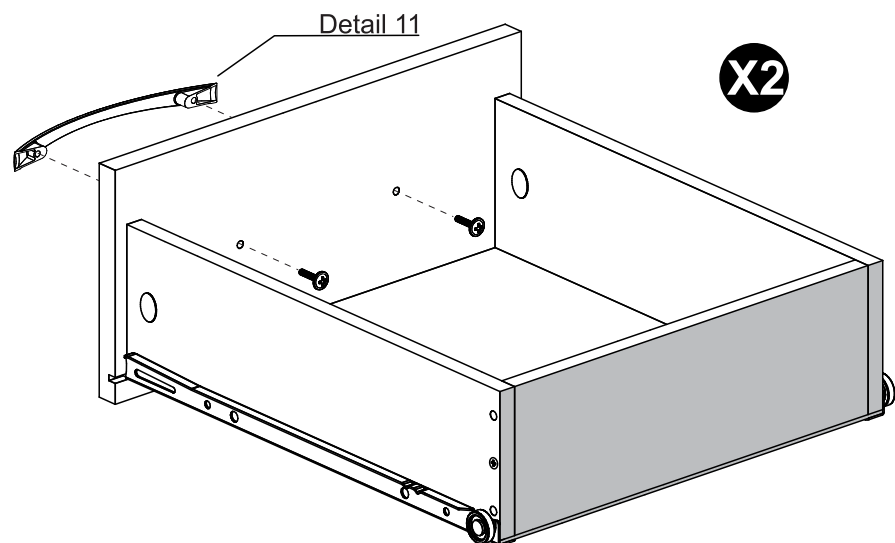

STEP 19


PARTS REQUIRED

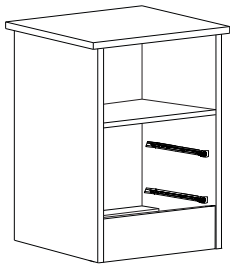



HARDWARE REQUIRED



TOOLS REQUIRED

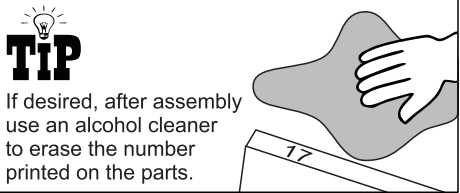


TIP
If desired, after assembly use an alcohol cleaner to erase the number printed on the parts.

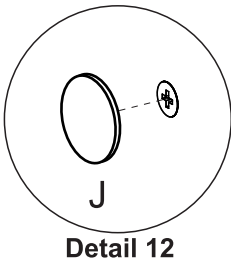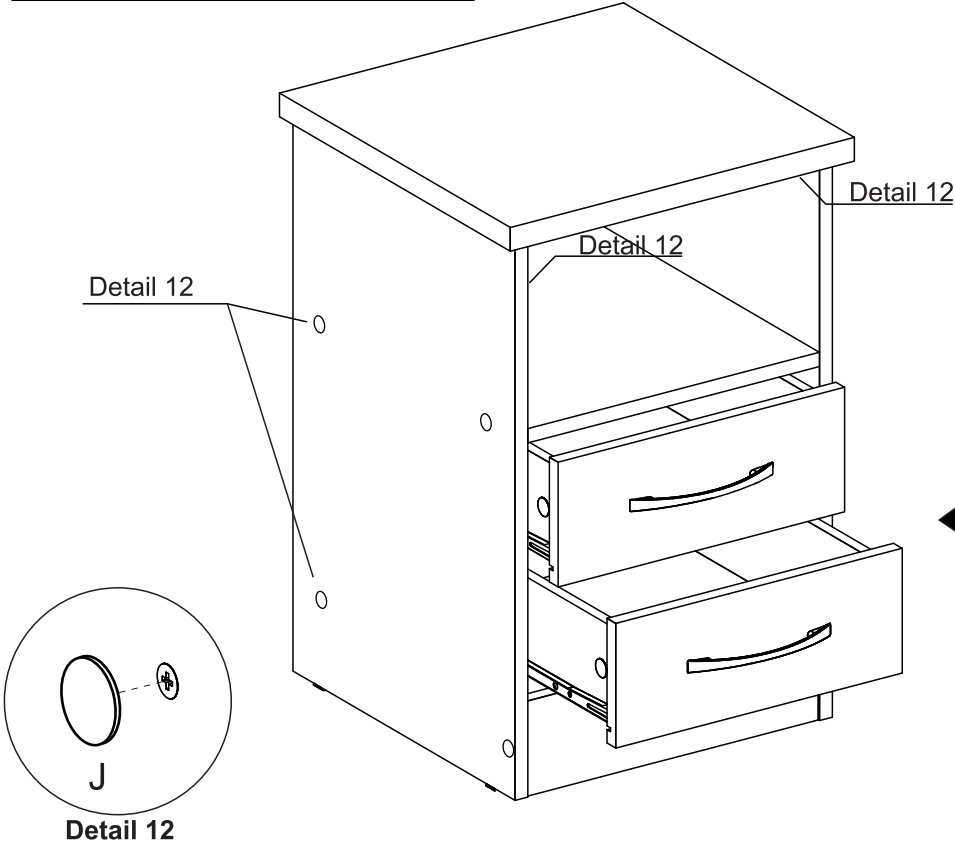


STEP 20

PARTS REQUIRED

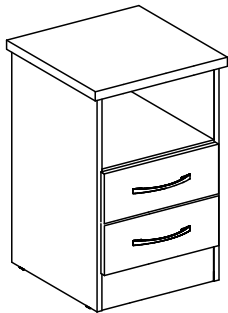

HARDWARE REQUIRED



TOOLS REQUIRED

