


CODY 2 DOOR 1 DRAWER WARDROBE ASSEMBLY INSTRUCTIONS WHITE/PINE EFFECT

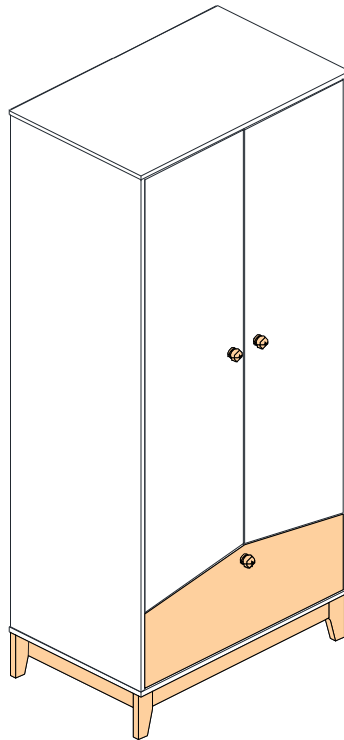


IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

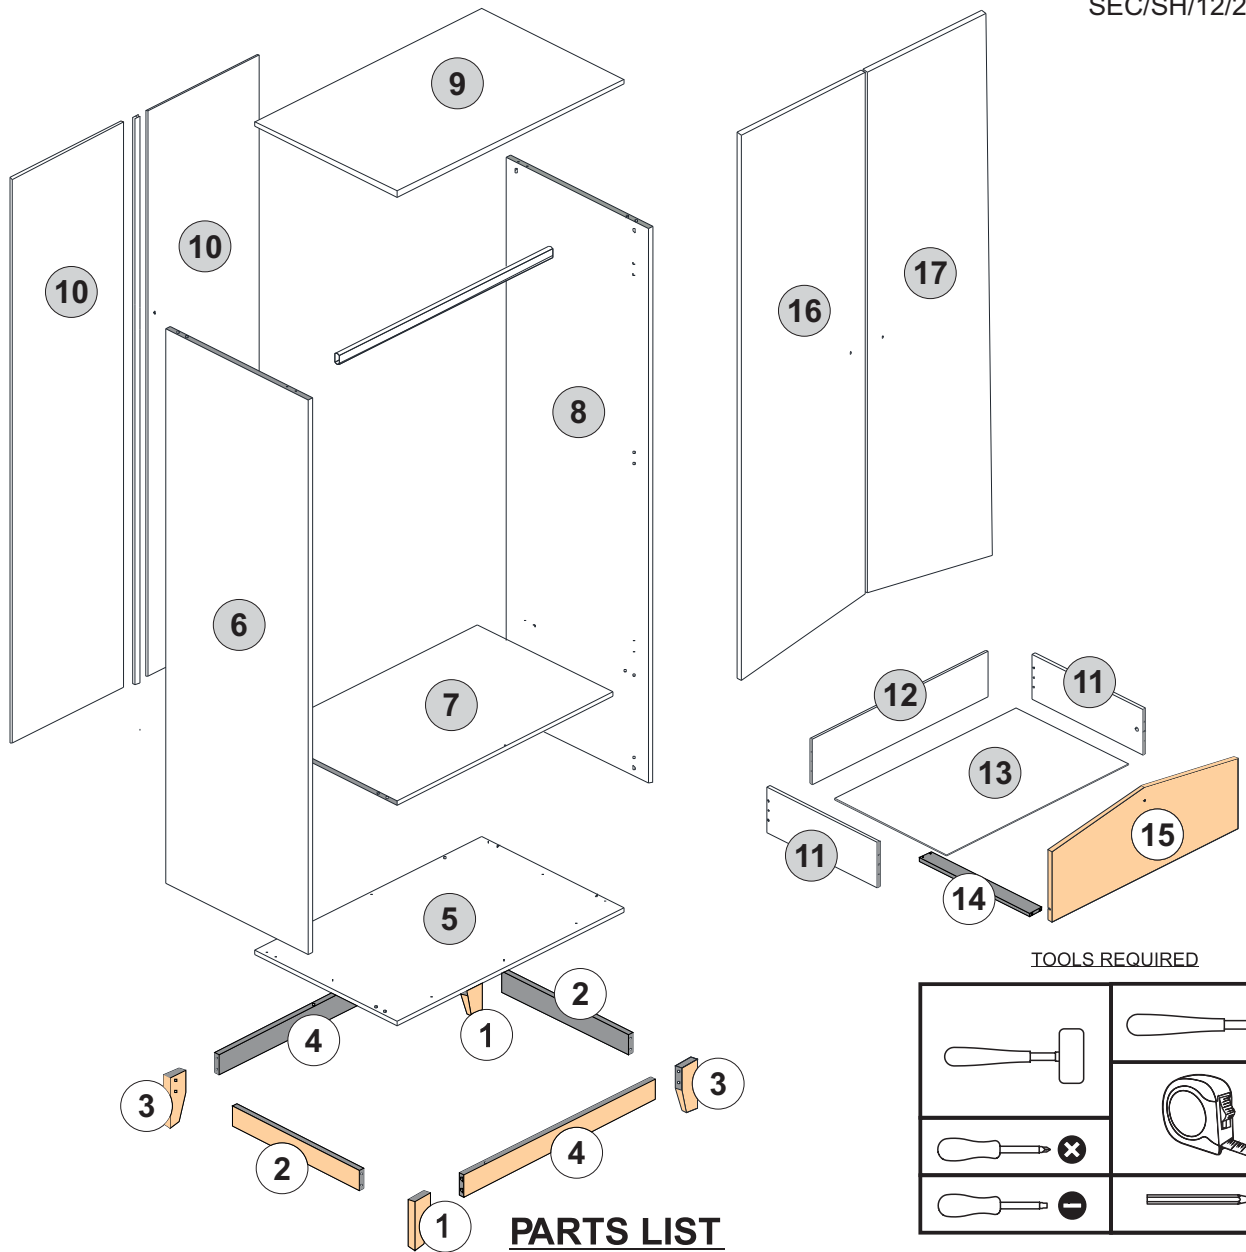


















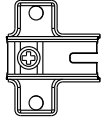
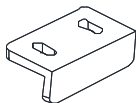
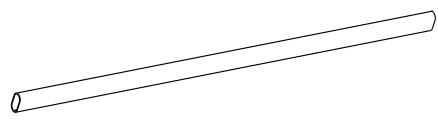
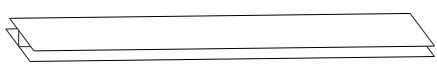
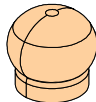


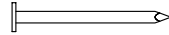PARTS LIST

Please Note:
The below parts have all been stamped with the part number to help identify them during assembly.

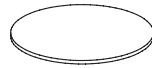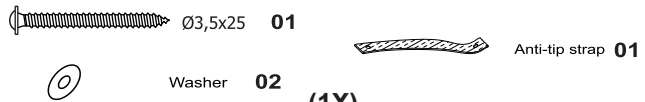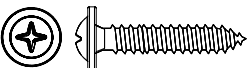
Part Number	Part Code	Part Description	Quantity	Carton
1	S100-101-186-DV1-01	Left Leg	2	2/2
2	S100-101-186-DV1-02	Leg Support Left & Right	2	2/2
3	S100-101-186-DV1-03	Right Leg	2	2/2
4	S100-101-186-DV1-04	Leg Support Front & Back	2	2/2
5	S100-101-186-DV1-05	Base Panel	1	2/2
6	S100-101-186-DV1-06	Left Side Panel	1	1/2
7	S100-101-186-DV1-07	Shelf	1	2/2
8	S100-101-186-DV1-08	Right Side Panel	1	1/2
9	S100-101-186-DV1-09	Top Panel	1	2/2
10	S100-101-186-DV1-10	Back Panel	2	1/2
11	S100-101-186-DV1-11	Drawer Sides	2	2/2
12	S100-101-186-DV1-12	Drawer Back	1	2/2
13	S100-101-186-DV1-13	Drawer Base	1	2/2
14	S100-101-186-DV1-14	Drawer Base Support	1	2/2
15	S100-101-186-DV1-15	Drawer Front	1	2/2
16	S100-101-186-DV1-16	Left Door	1	1/2
17	S100-101-186-DV1-17	Right Door	1	1/2

FITTINGS LIST

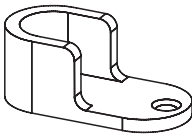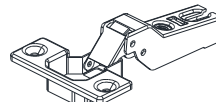
<p>A</p>  <p>Glue (3x)</p>	<p>B</p>  <p>Dowel Ø6,0 x 30mm (26x)</p>	<p>C</p>  <p>Slide 450mm (1x)</p>	<p>D</p>  <p>Flat Head Screw Ø4,0 x 40mm (8x)</p>
<p>E</p>  <p>Nail 10 x 10 (45x)</p>	<p>F</p>  <p>Cam Nut 12mm (6x)</p>	<p>G</p>  <p>Cam Bolt (22x)</p>	<p>H</p>  <p>Screw Ø 6x8 (4x)</p>
<p>I</p>  <p>Flat Head Screw Ø3,0 x 14mm (8x)</p>	<p>J</p>  <p>Hole Plugs (6x)</p>	<p>K</p>  <p>Washer 02 (1X) Anti-tip strap 01</p>	
<p>L</p>  <p>Flat Head Screw Ø4,0 x 30mm (3x)</p>	<p>M</p>  <p>Flat Head Screw Ø4,0 x 14mm (24x)</p>	<p>N</p>  <p>Dowel Ø8,0 x 30mm (8x)</p>	<p>O</p>  <p>Cam Nut 15mm (16x)</p>
<p>P</p>  <p>Flat Head Screw Ø3,5 x 25mm (2x)</p>	<p>Q</p>  <p>Hanging Rail Support (2x)</p>	<p>R</p>  <p>Hinge (6x)</p>	<p>S</p>  <p>Flat Head Screw Ø3,5 x 12mm (4x)</p>
<p>T</p>  <p>Hinge Plate (6x)</p>	<p>U</p>  <p>Door Stop (2x)</p>	<p>V</p>  <p>Hanging Rail 760mm (1x)</p>	
<p>W</p>  <p>Plastic profile 1596 mm (1x)</p>		<p>Y</p>  <p>Handle(3x)</p>	

TIPS FOR FITTINGS CAM-LOCKS

WHEN FITTING CAM NUT. ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE

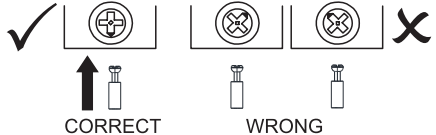


CORRECT **WRONG**

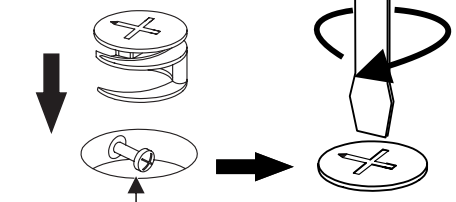

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

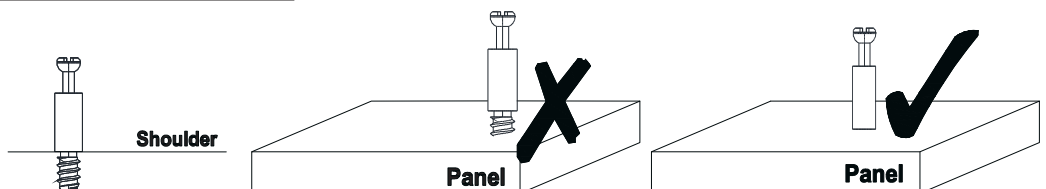

STEP 1

PARTS REQUIRED




1 - LEFT LEG x2

3 - RIGHT LEG x2

HARDWARE REQUIRED

G  08

TOOLS REQUIRED

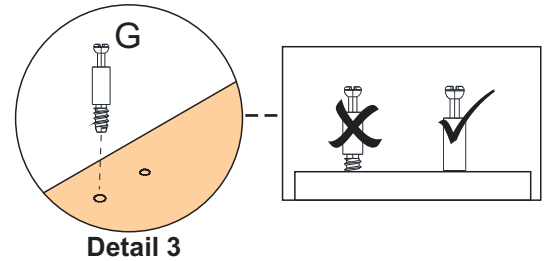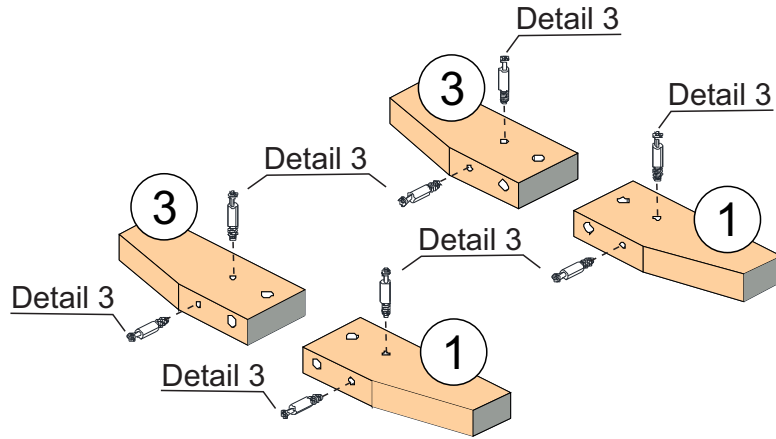


STEP 2


PARTS REQUIRED

2- LEG SUPPORT LEFT+RIGHT x2

4- LEG SUPPORT FRONT+BACK x2




HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

N  Ø8 x 30mm 08

TOOLS REQUIRED

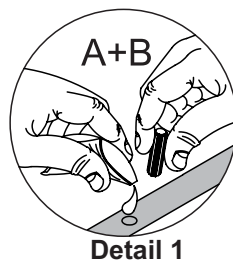
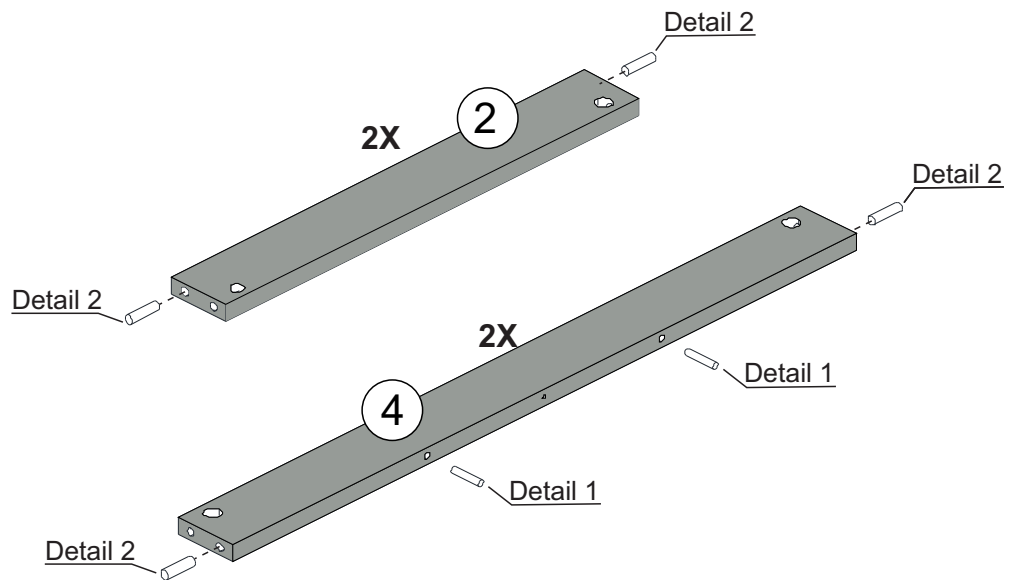




STEP 3




PARTS REQUIRED

7- SHELF x1

HARDWARE REQUIRED

- A  01
- B  Ø6 x 30mm 04
- S  Ø3,5 x 12mm 02
- U  01

TOOLS REQUIRED

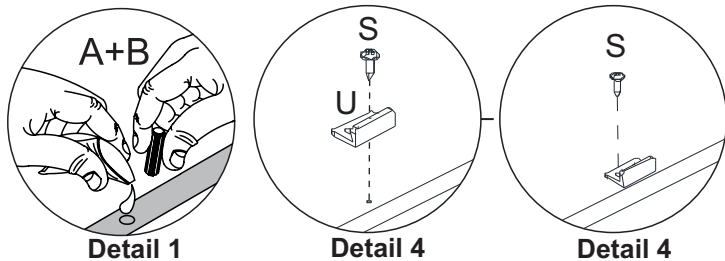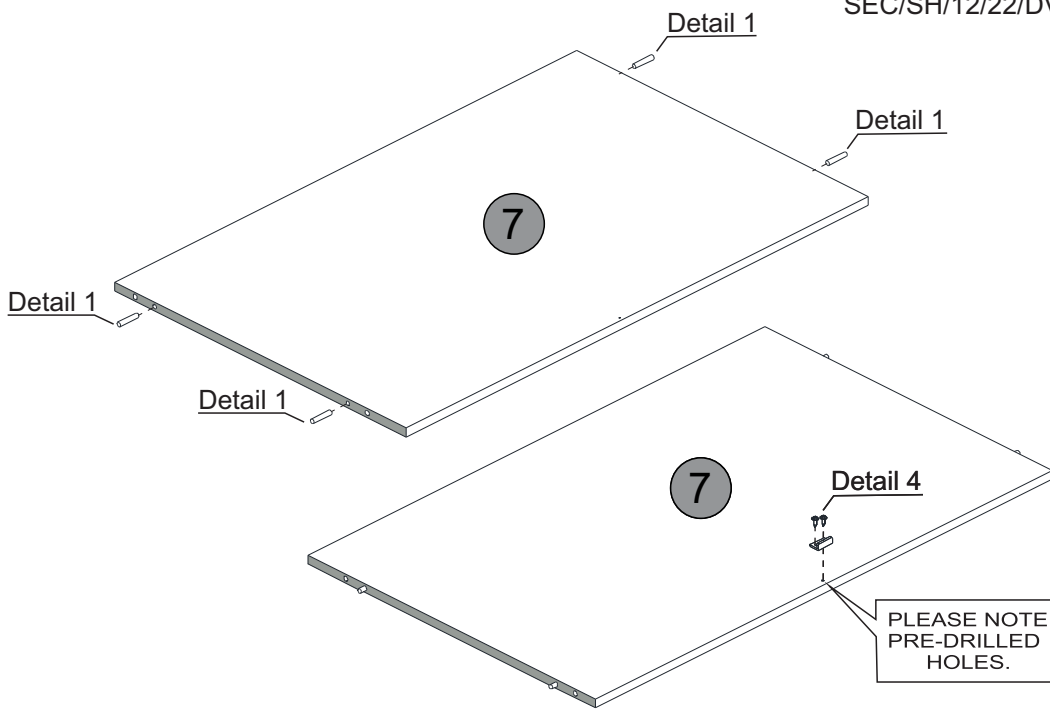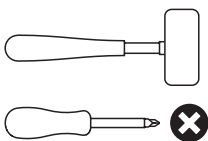




STEP 4




PARTS REQUIRED

9 - TOP PANEL x1

HARDWARE REQUIRED

- G  04
- S  Ø3,5 x 12mm 02
- U  01

TOOLS REQUIRED

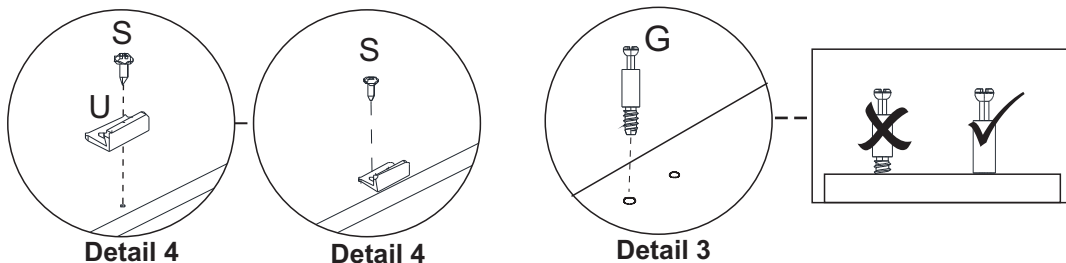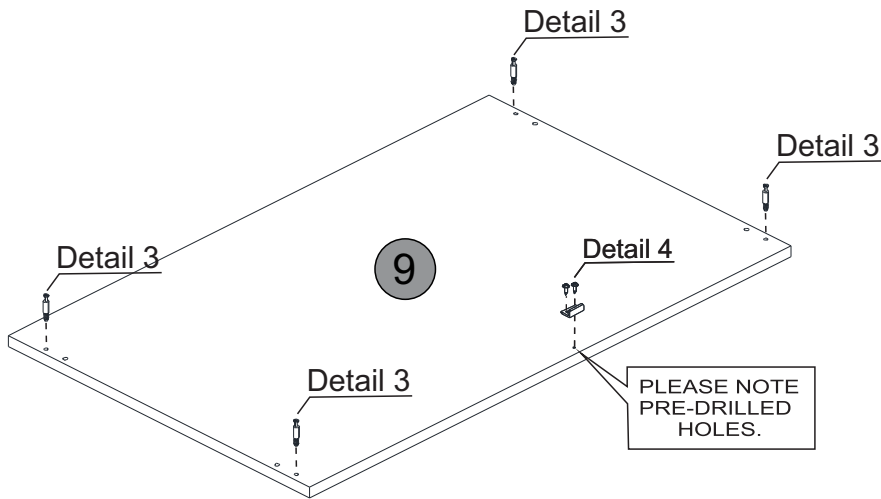



STEP 5


PARTS REQUIRED

6- LEFT SIDE PANEL x1






HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

G  02

TOOLS REQUIRED

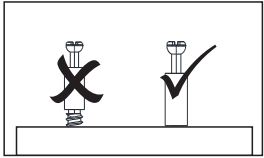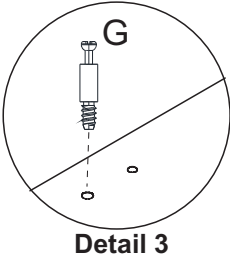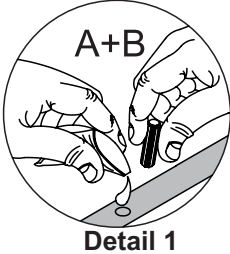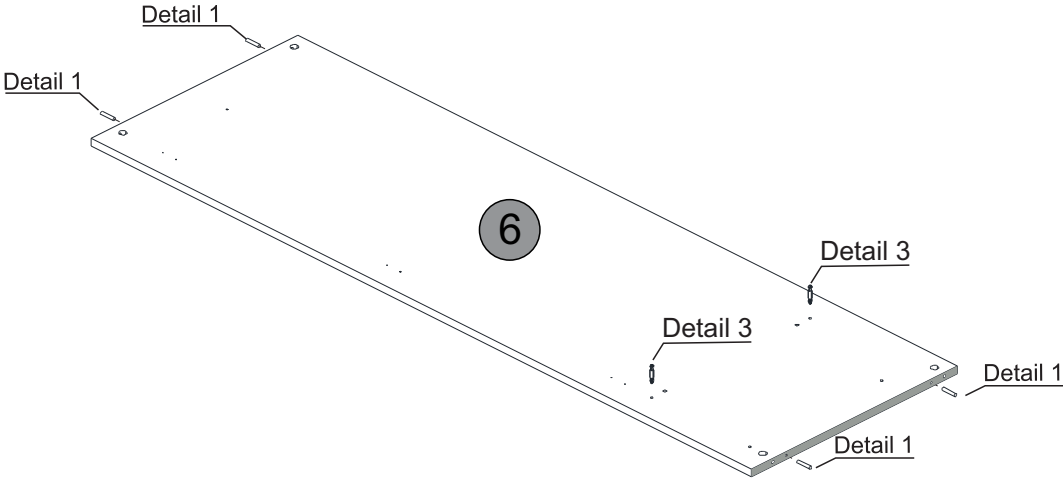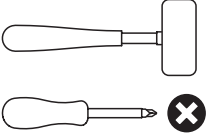


STEP 6

PARTS REQUIRED

6- LEFT SIDE PANEL x1

HARDWARE REQUIRED






I  Ø3,0 x 14mm 02

M  Ø4,0 x 14mm 06

Q  01

T  03

TOOLS REQUIRED

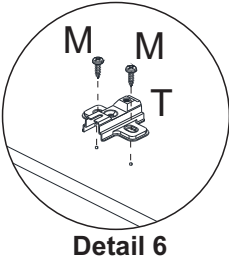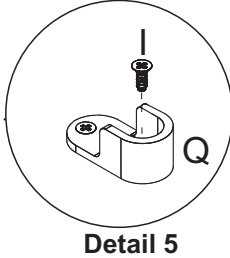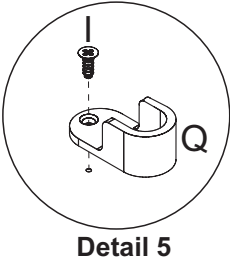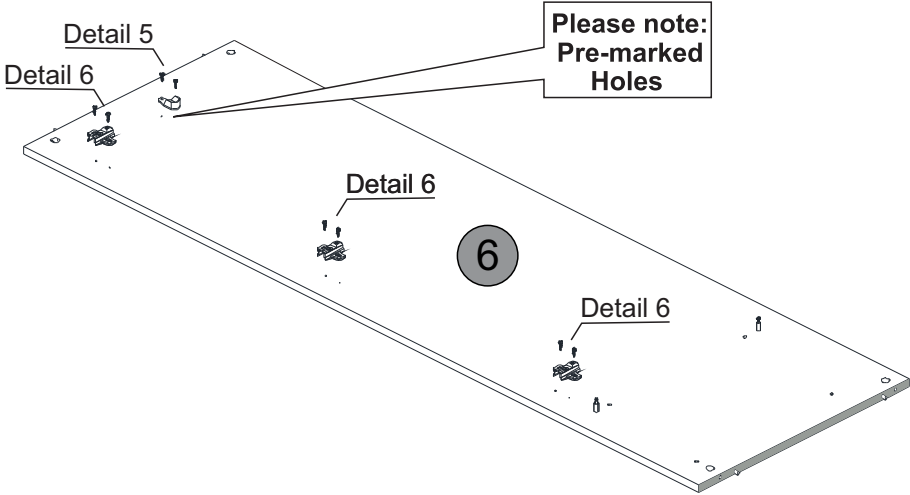

STEP 7

PARTS REQUIRED





6- LEFT SIDE PANEL x1

HARDWARE REQUIRED

C  01
450mm

H  02
Ø6 x 8mm

TOOLS REQUIRED

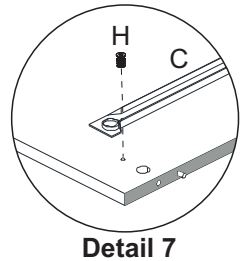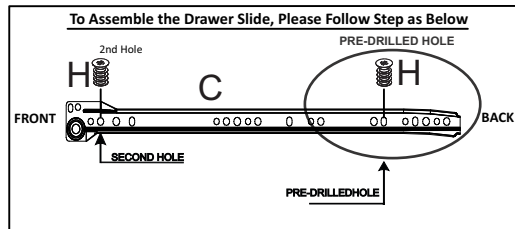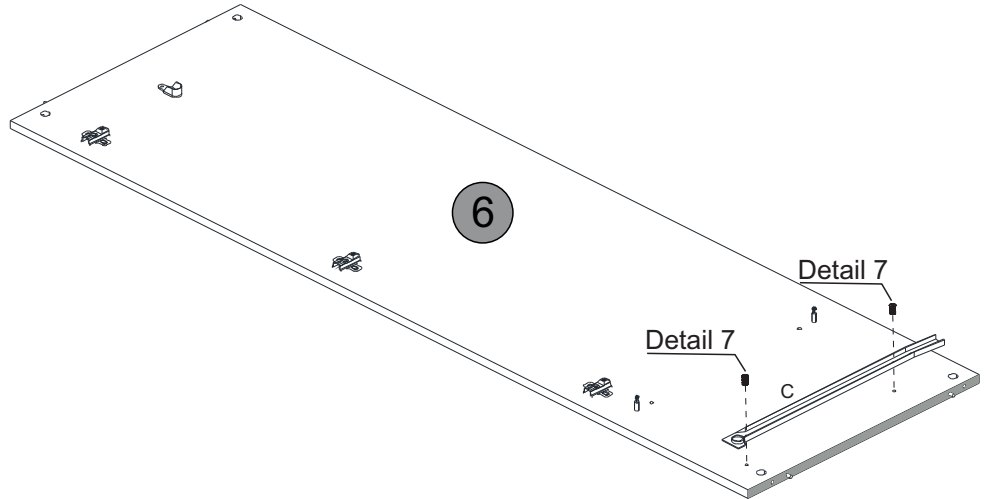



STEP 8

PARTS REQUIRED

8- RIGHT SIDE PANEL x1







HARDWARE REQUIRED

A  01

B  04
Ø6 x 30mm

G  02

TOOLS REQUIRED

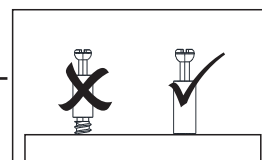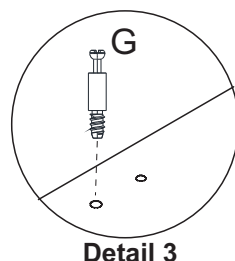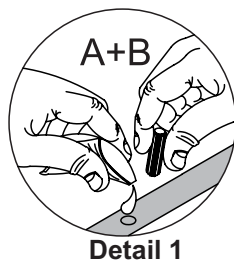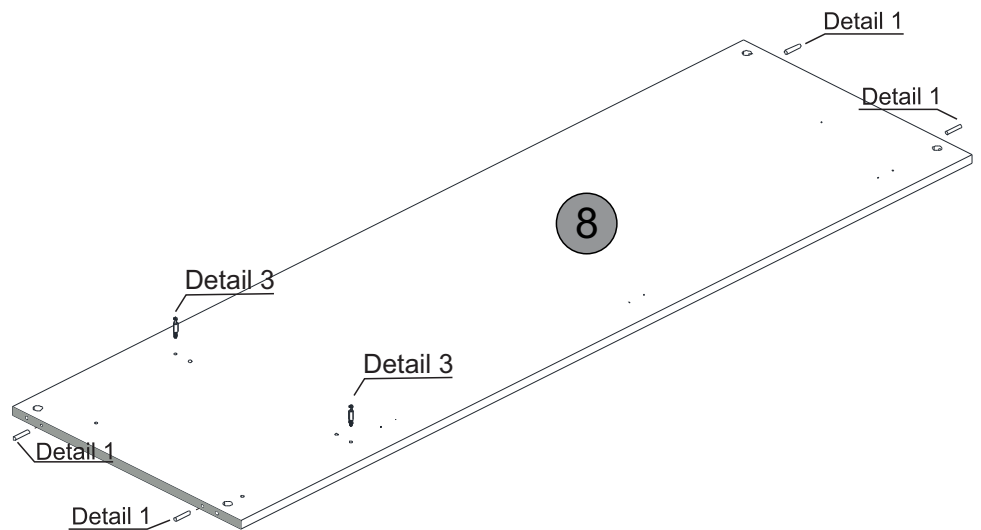

STEP 9

PARTS REQUIRED

8- RIGHT SIDE PANEL x1

HARDWARE REQUIRED




I  02
Ø3.0 x 14mm

M  06
Ø4.0 x 14mm


Q  01

T  03


TOOLS REQUIRED

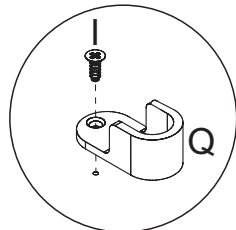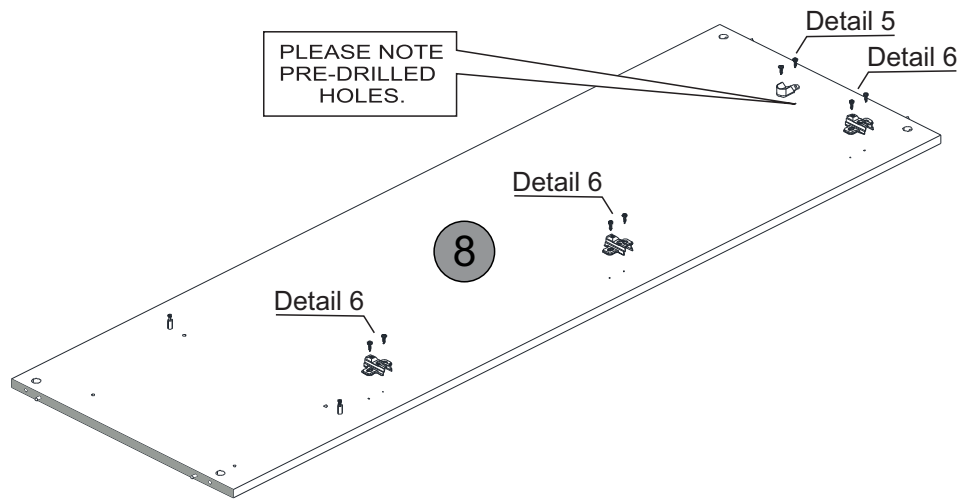

Detail 5

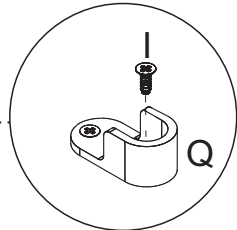

Detail 5

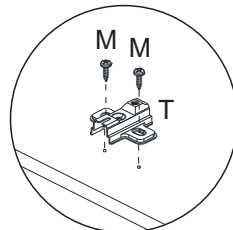

Detail 6

STEP 10

PARTS REQUIRED





8- RIGHT SIDE PANEL x1

HARDWARE REQUIRED

C  01
450mm Right

H  02
Ø6 x 8mm

TOOLS REQUIRED

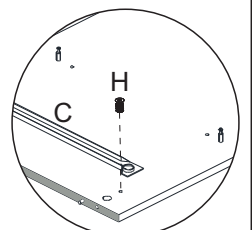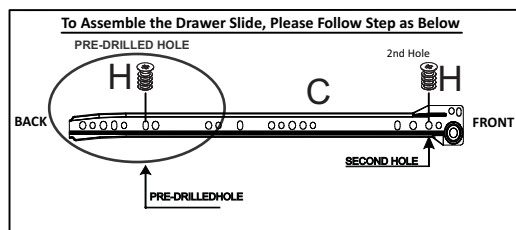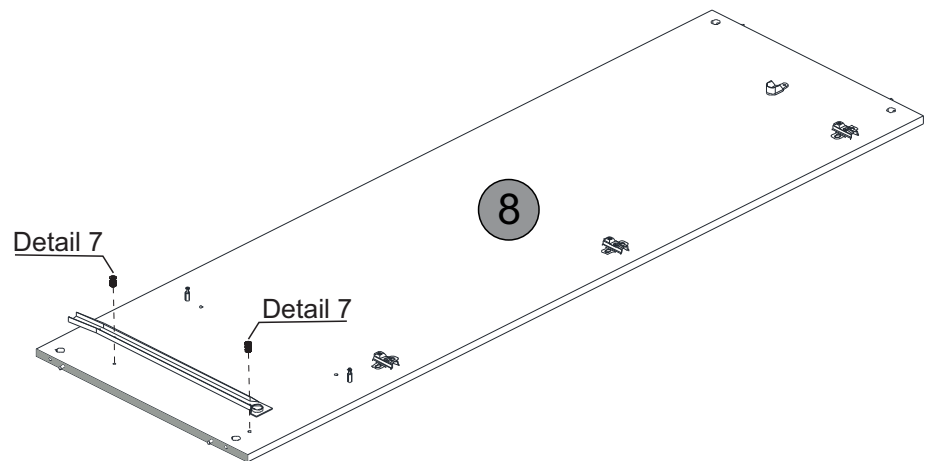



Detail 7

STEP 11




PARTS REQUIRED

1- LEFT FOOT	x2
3- RIGHT FOOT	x2
4- FRONT AND REAR FOOTER	x2


HARDWARE REQUIRED

A		01
O		04


TOOLS REQUIRED

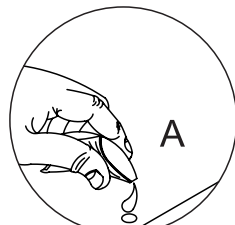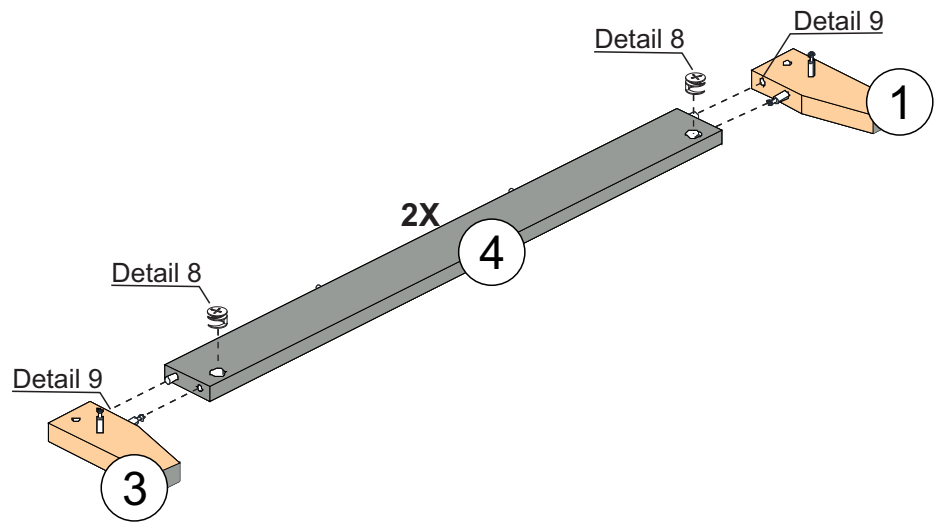

Detail 9

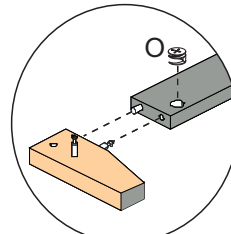


Detail 8

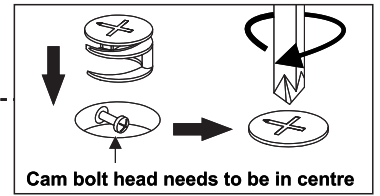



STEP 12

PARTS REQUIRED


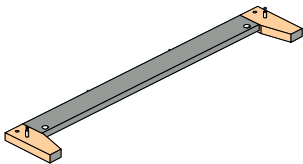
2- SIDE FOOTER	x2
----------------	----




HARDWARE REQUIRED

A		01
O		02


TOOLS REQUIRED

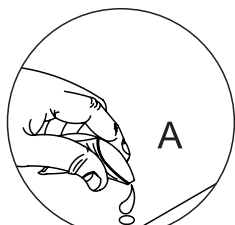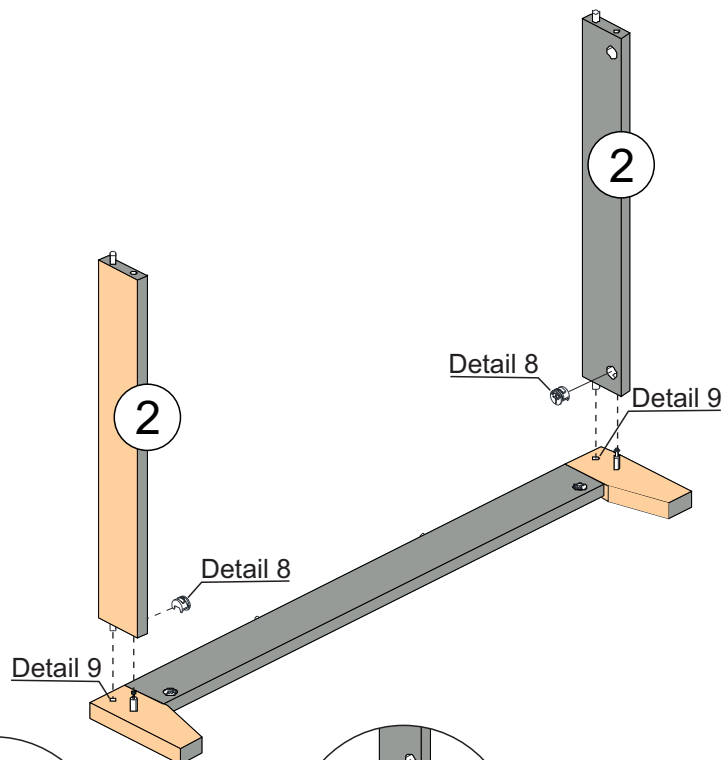

Detail 9

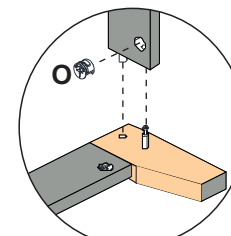


Detail 8

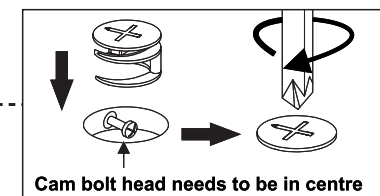


STEP 13




PARTS REQUIRED

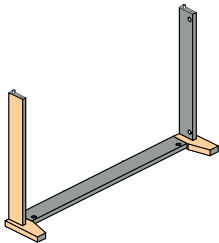


HARDWARE REQUIRED




TOOLS REQUIRED

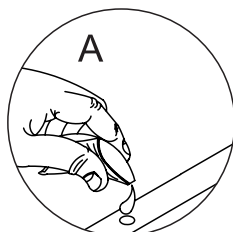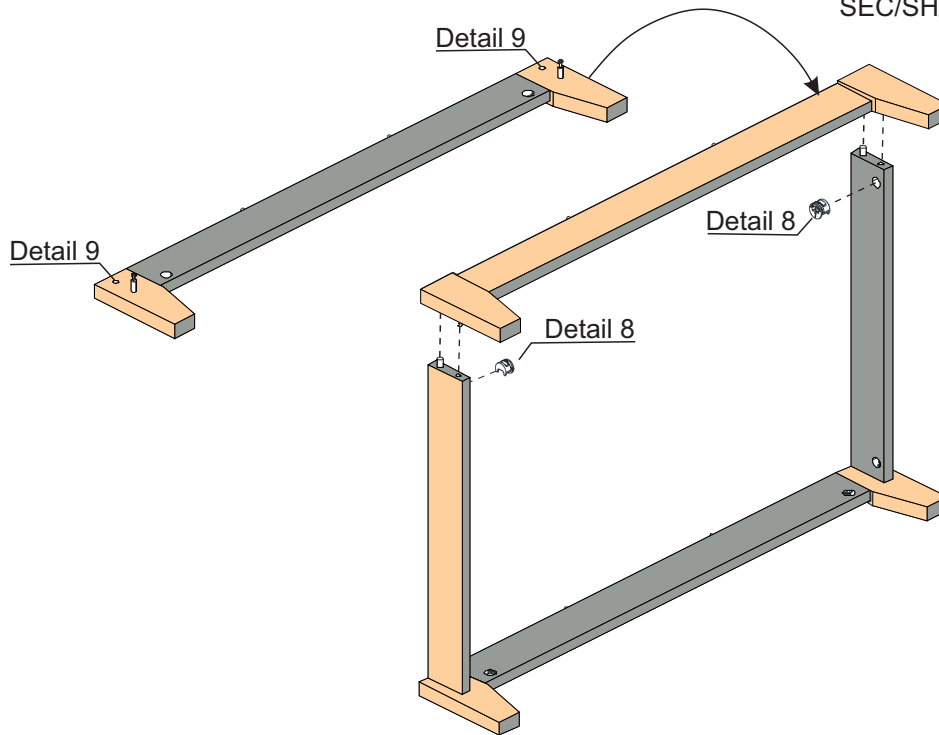

Detail 9

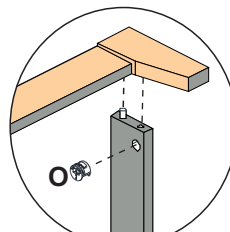


Detail 8


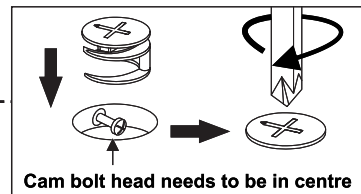


STEP 14




PARTS REQUIRED

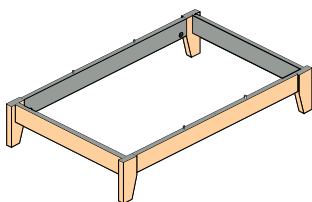


HARDWARE REQUIRED



TOOLS REQUIRED

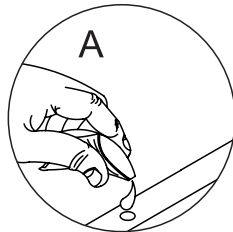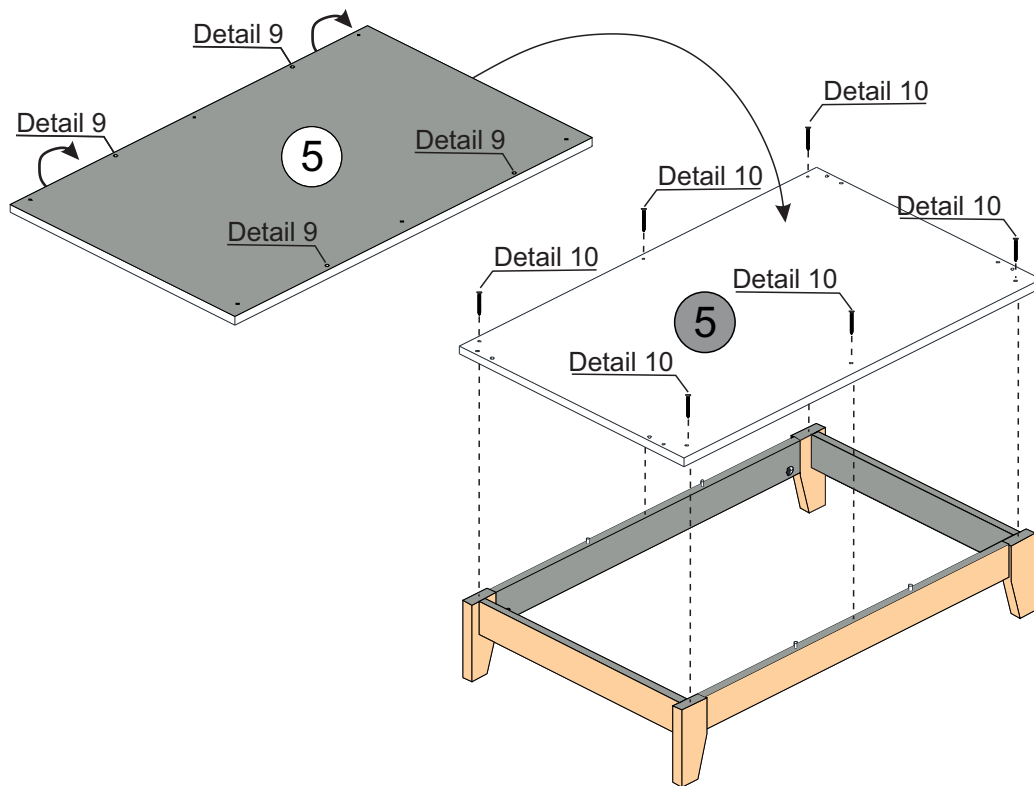


Detail 9

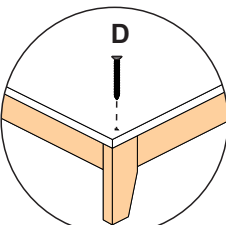


Detail 10

STEP 15




PARTS REQUIRED

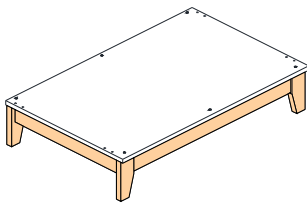

HARDWARE REQUIRED



TOOLS REQUIRED

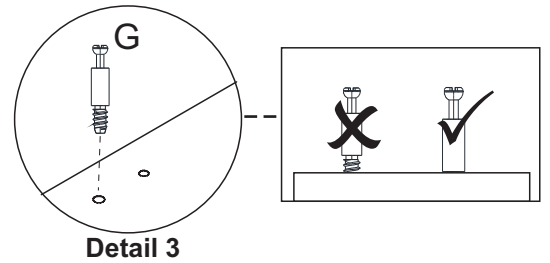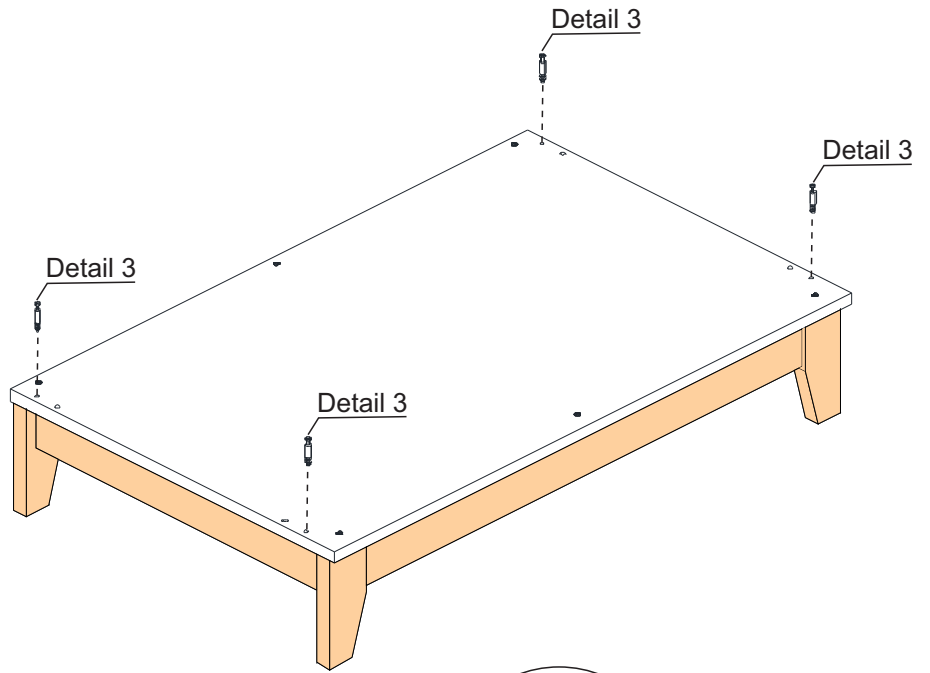

STEP 16




PARTS REQUIRED

6- LEFT SIDE PANEL	x1
7- SHELF	x1


HARDWARE REQUIRED

A		01
F		02


TOOLS REQUIRED

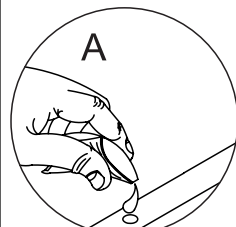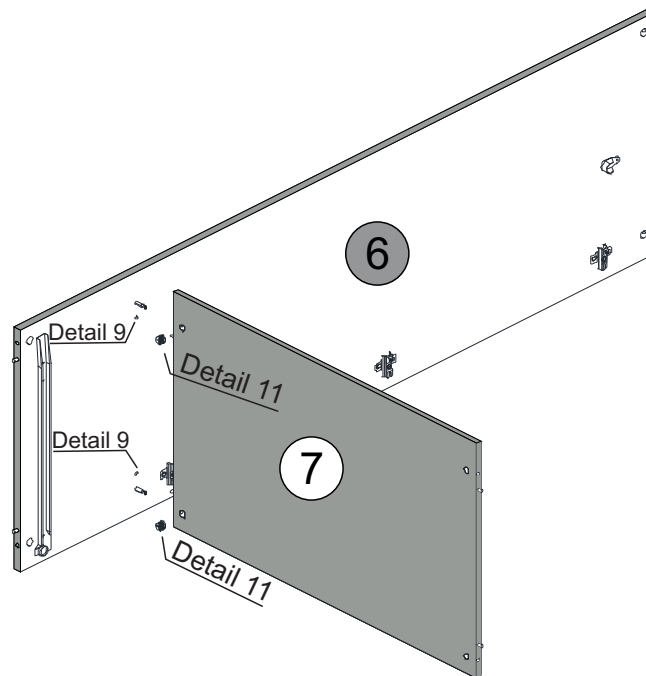

Detail 9

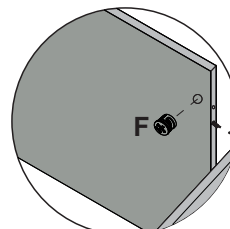


Detail 11

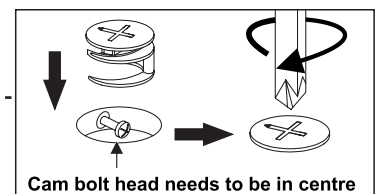

STEP 17

PARTS REQUIRED

8- RIGHT SIDE PANEL x1



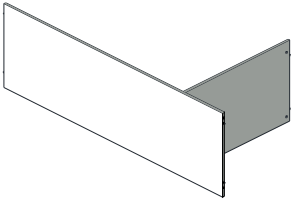


HARDWARE REQUIRED


A  01

F  Ø12mm 02


TOOLS REQUIRED

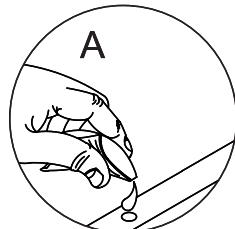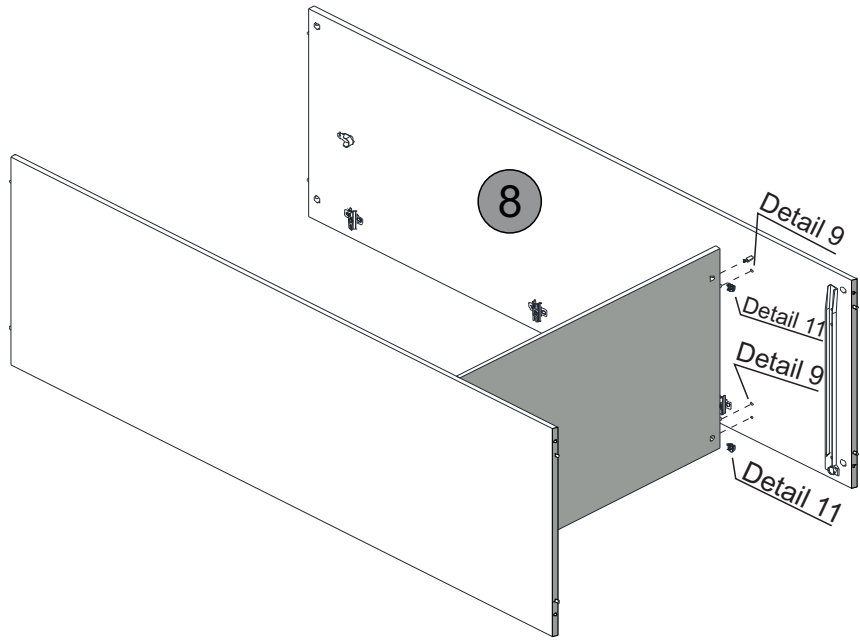

Detail 9

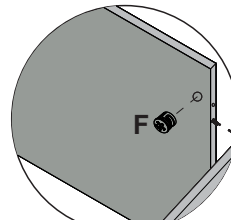


Detail 11

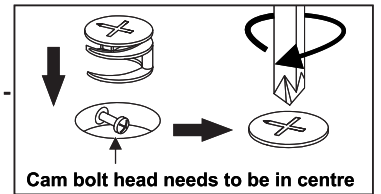


STEP 18

PARTS REQUIRED



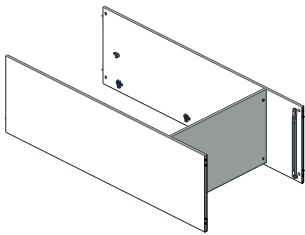


HARDWARE REQUIRED


A  01

O  04


TOOLS REQUIRED

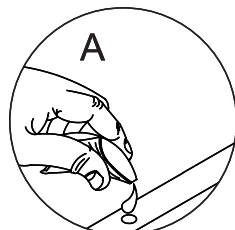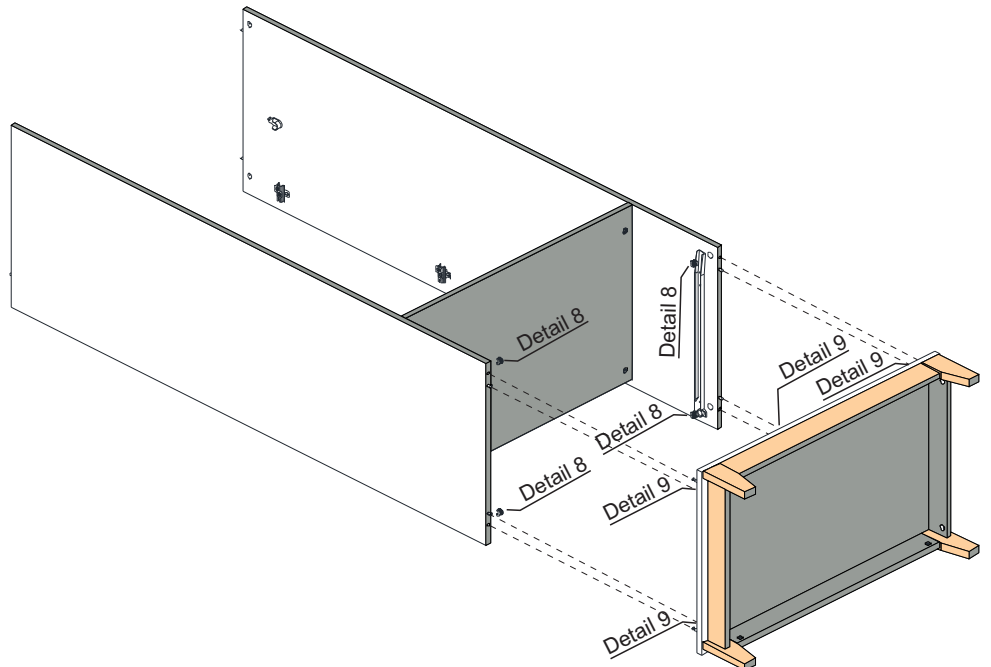

Detail 9

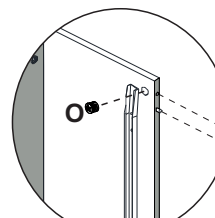


Detail 8

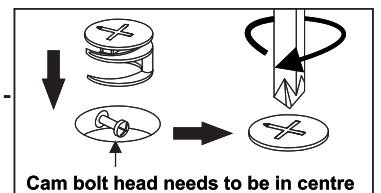

STEP 19

PARTS REQUIRED

9- TOP PANEL x1

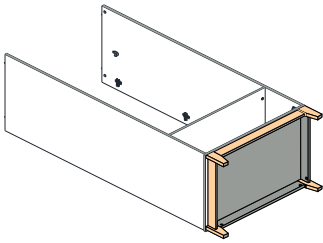




HARDWARE REQUIRED

A  01


O  04

J  04


TOOLS REQUIRED

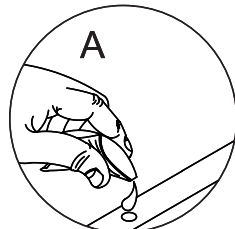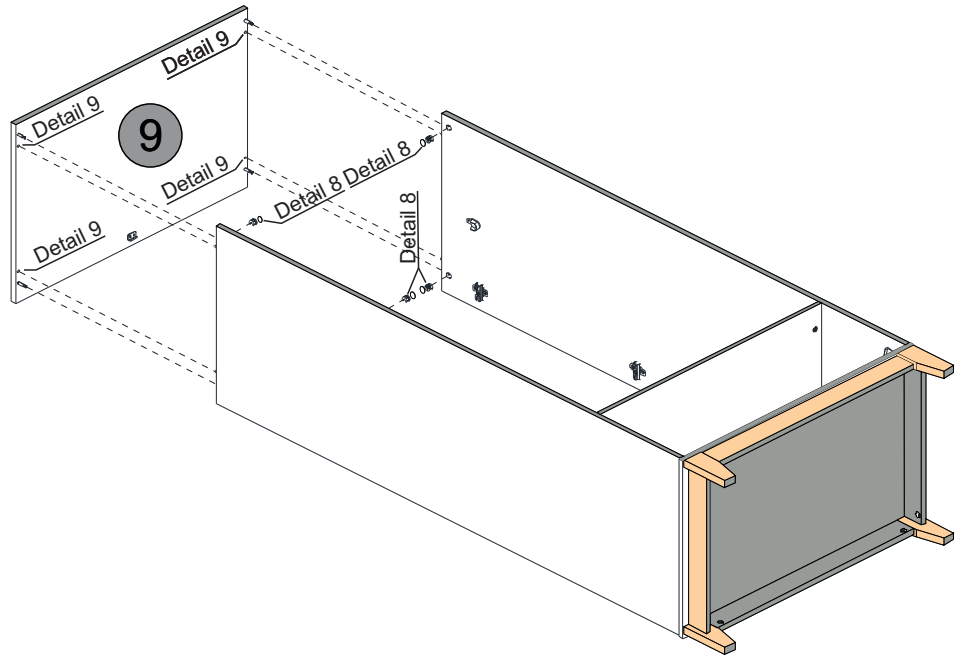

Detail 9

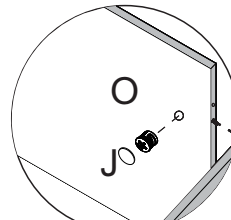


Detail 8

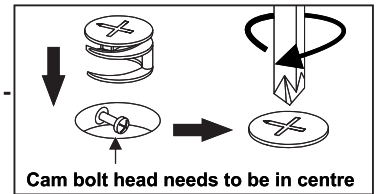


STEP 20


PARTS REQUIRED

10- BACK PANEL x2




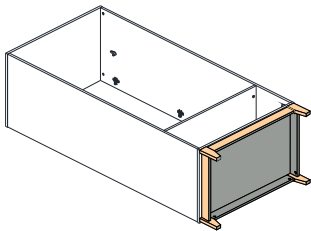


HARDWARE REQUIRED


E  10x10 32

W  01

TOOLS REQUIRED

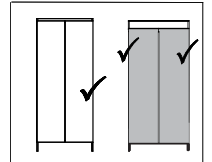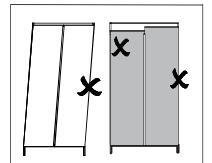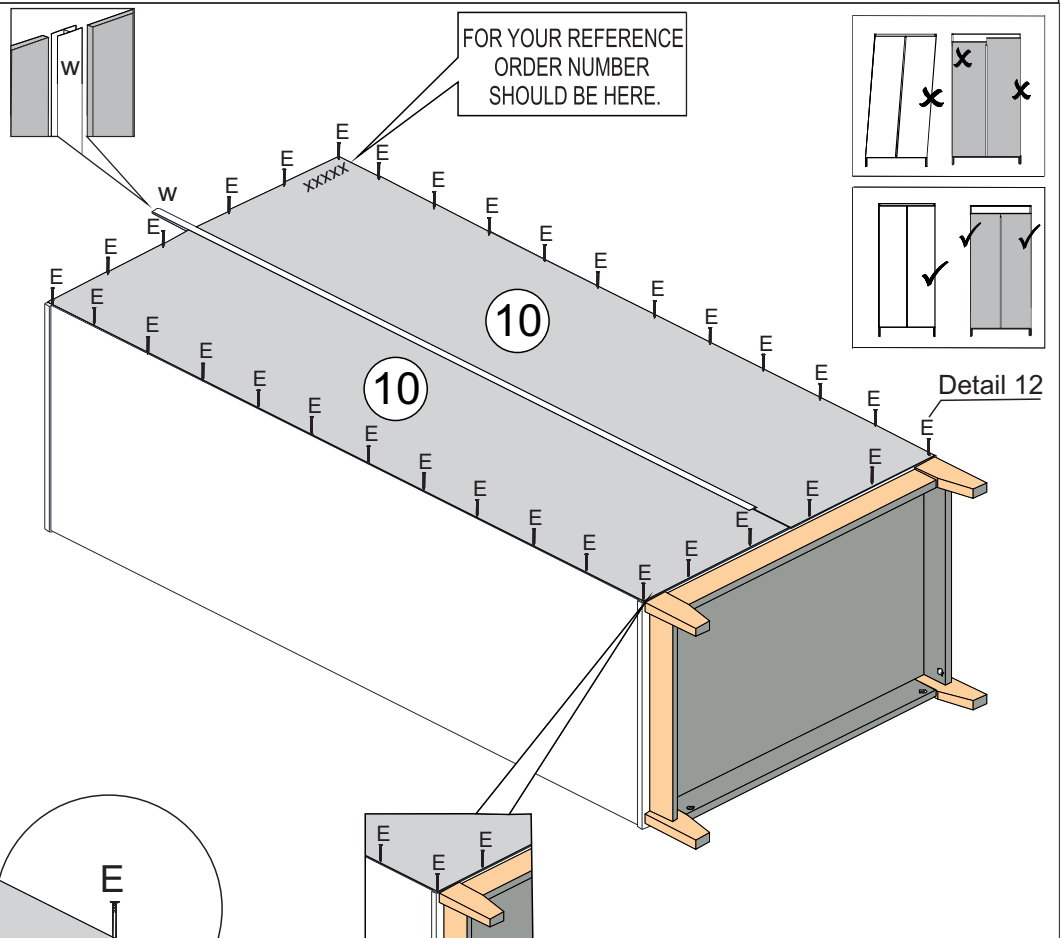


Detail 12

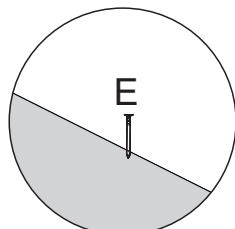


Detail 12

STEP 21




PARTS REQUIRED

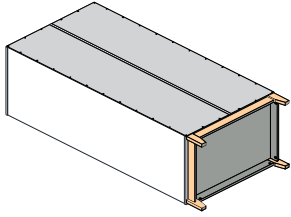

HARDWARE REQUIRED



TOOLS REQUIRED

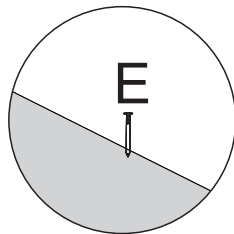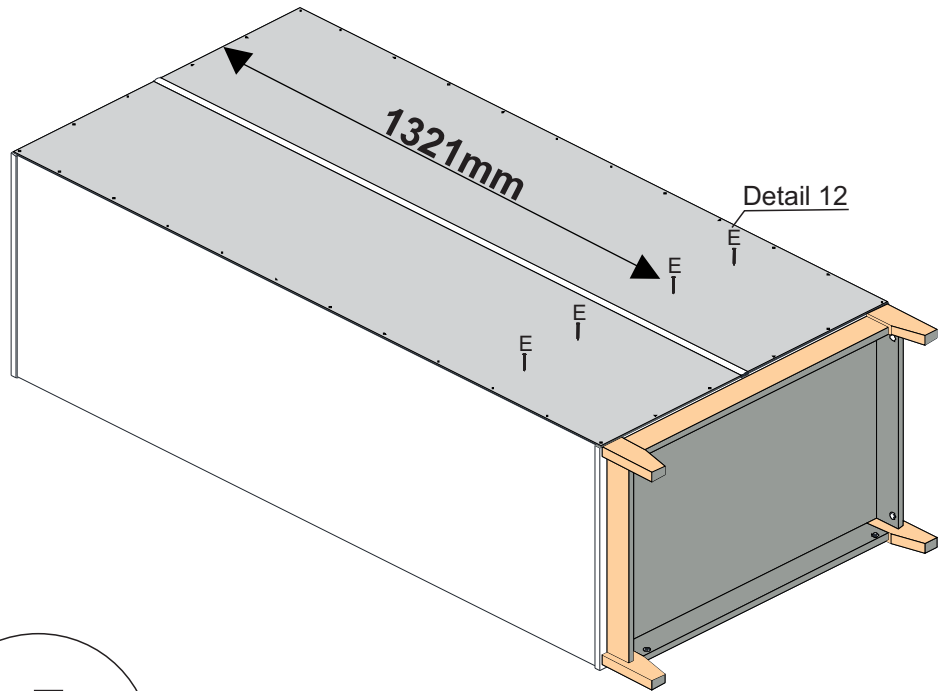



Detail 12

STEP 22




PARTS REQUIRED

- 11- DRAWER SIDES x2
- 12- DRAWER BACK x1
- 14- DRAWER BASE SUPPORT x2

HARDWARE REQUIRED



TOOLS REQUIRED

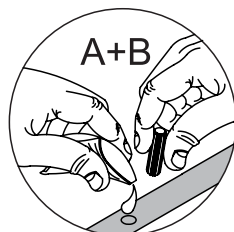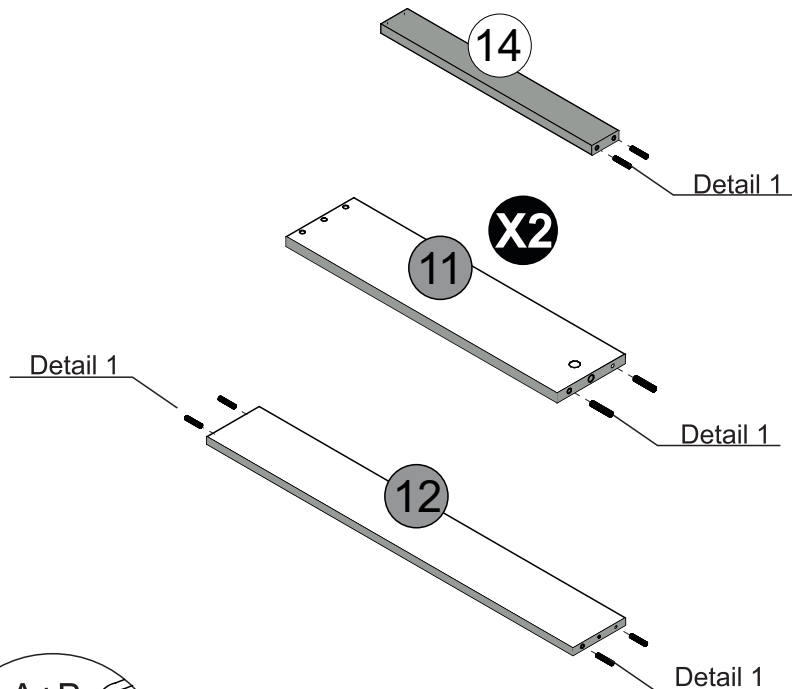

Detail 1

STEP 23



PARTS REQUIRED

15- DRAWER FRONT x1

HARDWARE REQUIRED

G  02

TOOLS REQUIRED

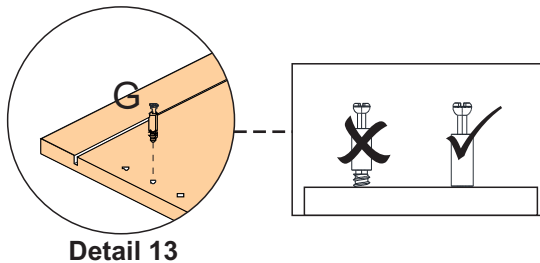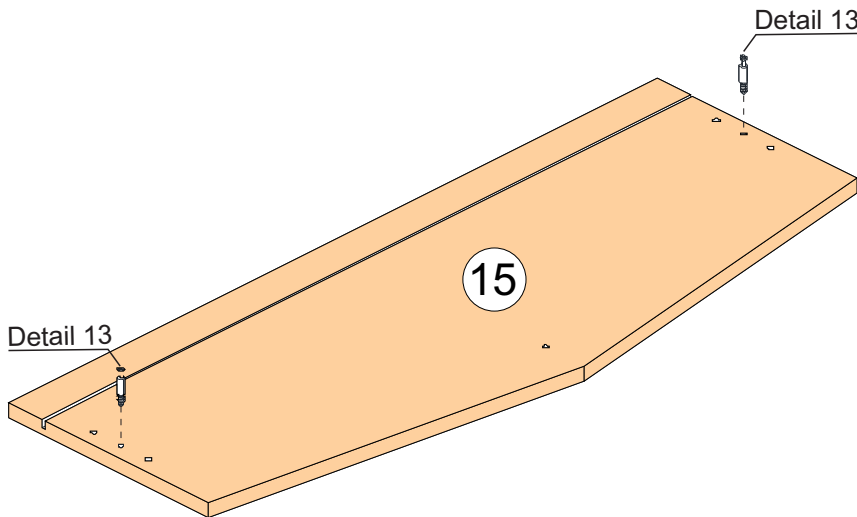


STEP 24

PARTS REQUIRED




11- DRAWER SIDES x2

12- DRAWER BACK x1

HARDWARE REQUIRED

D  Ø4,0 x 40mm 02


TOOLS REQUIRED

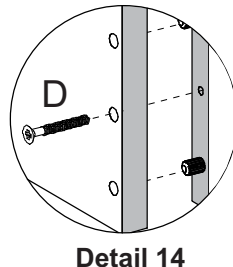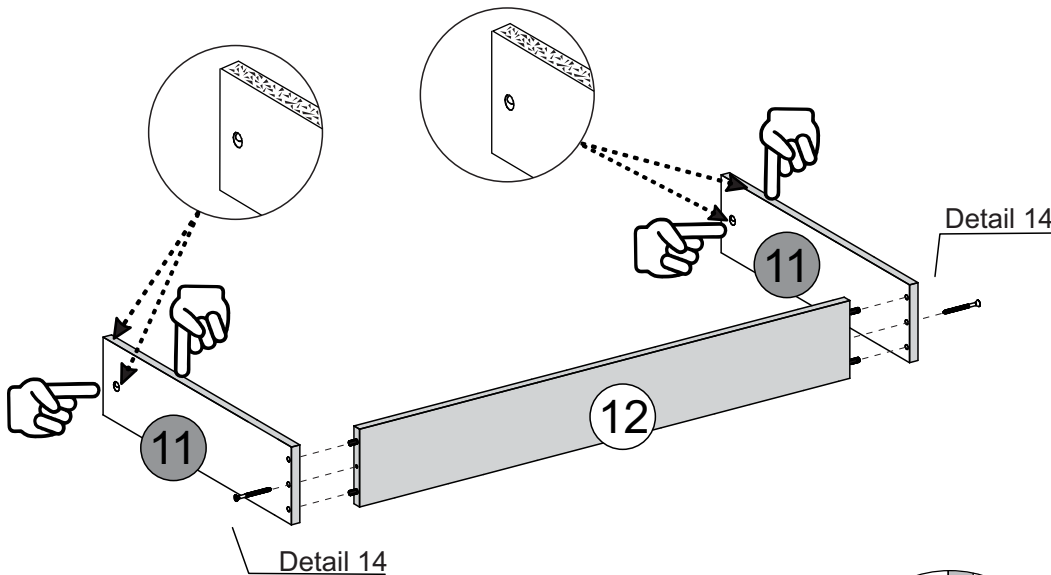

STEP 25

PARTS REQUIRED

15 - DRAWER FRONT x1

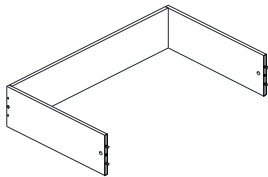




HARDWARE REQUIRED

A 01


F Ø12mm 02

J 02


TOOLS REQUIRED

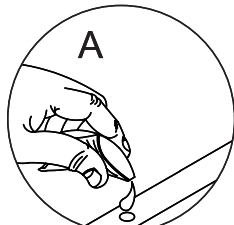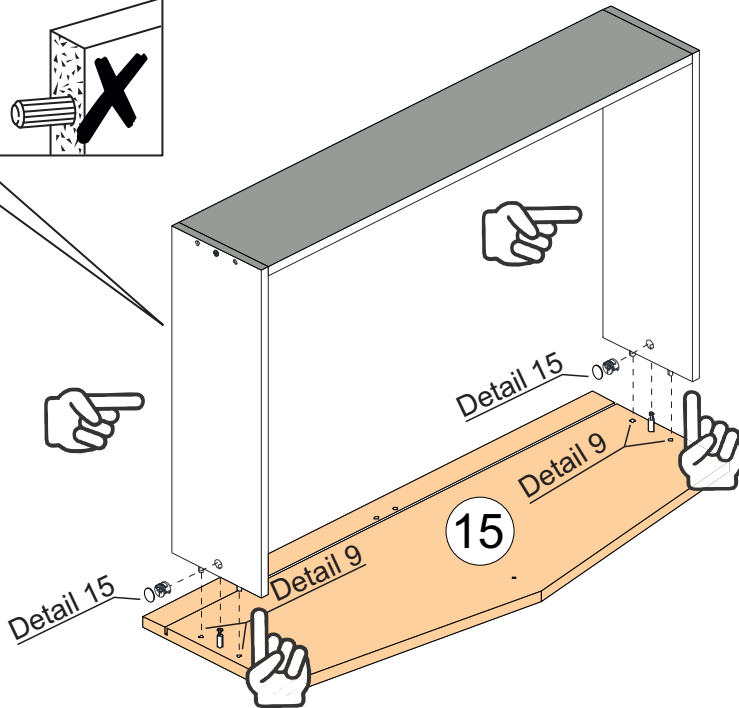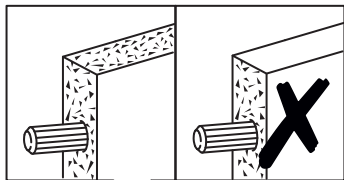

Detail 9

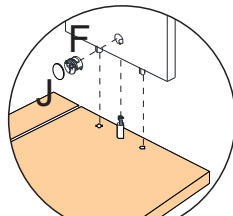

Detail 15

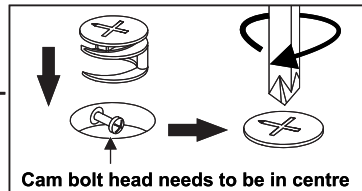


STEP 26

PARTS REQUIRED

13 - DRAWER BASE x1

14 - DRAWER BASE SUPPORT x1



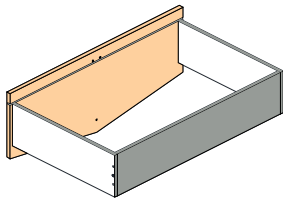


HARDWARE REQUIRED


A 01

E 08



TOOLS REQUIRED

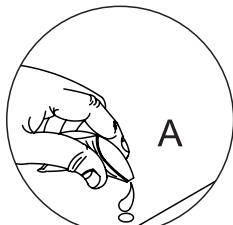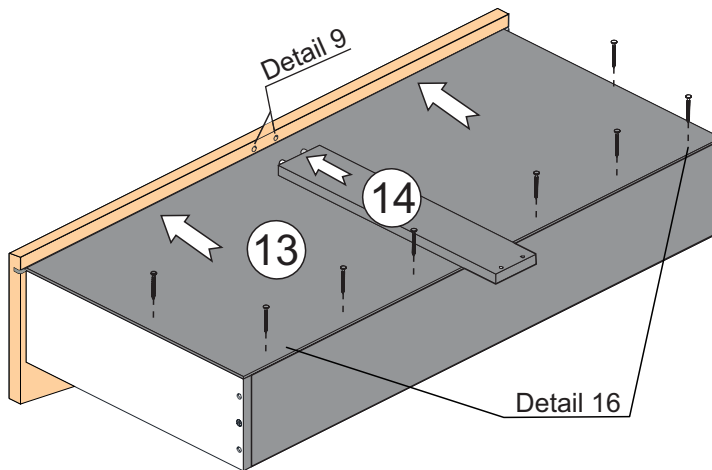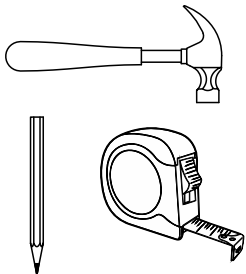

Detail 9

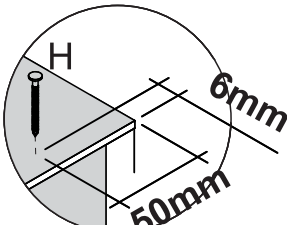


Detail 16



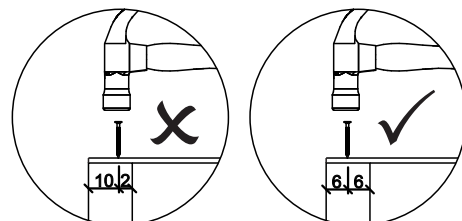
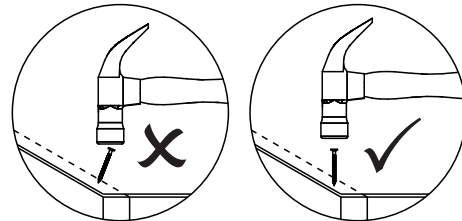


STEP 27



PARTS REQUIRED

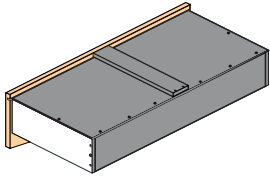

HARDWARE REQUIRED




TOOLS REQUIRED

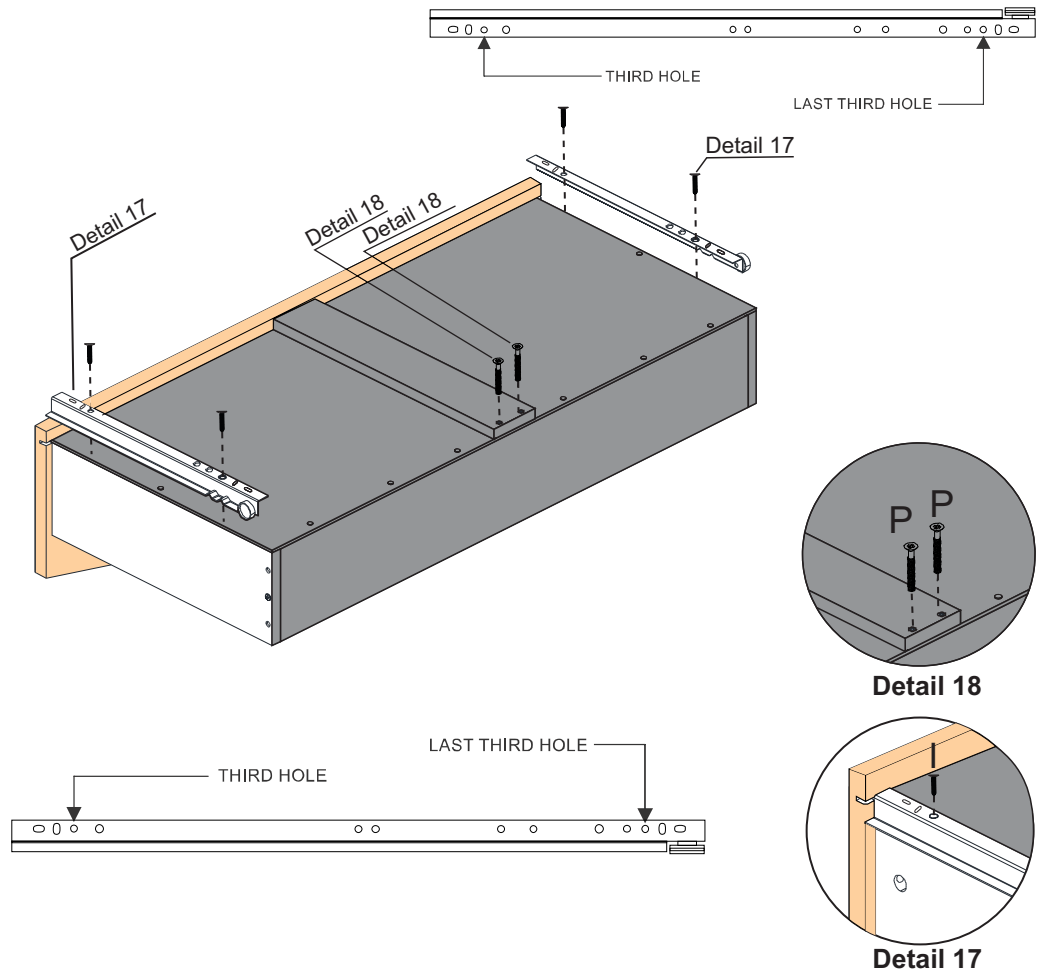



STEP 28




PARTS REQUIRED

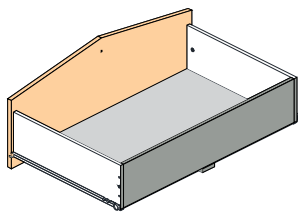

HARDWARE REQUIRED




TOOLS REQUIRED

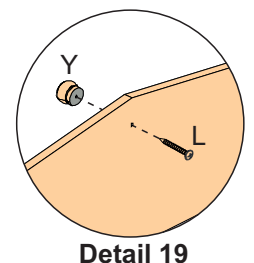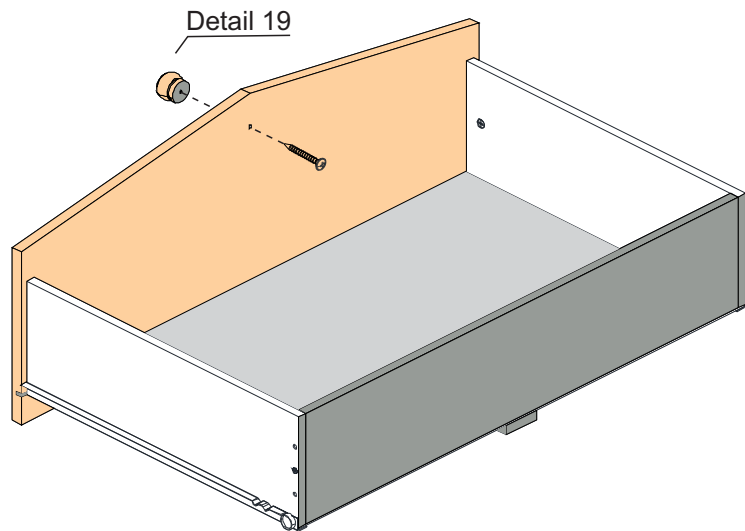

Detail 19


STEP 29

PARTS REQUIRED

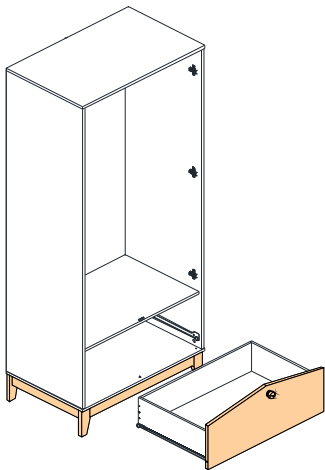


HARDWARE REQUIRED

TOOLS REQUIRED

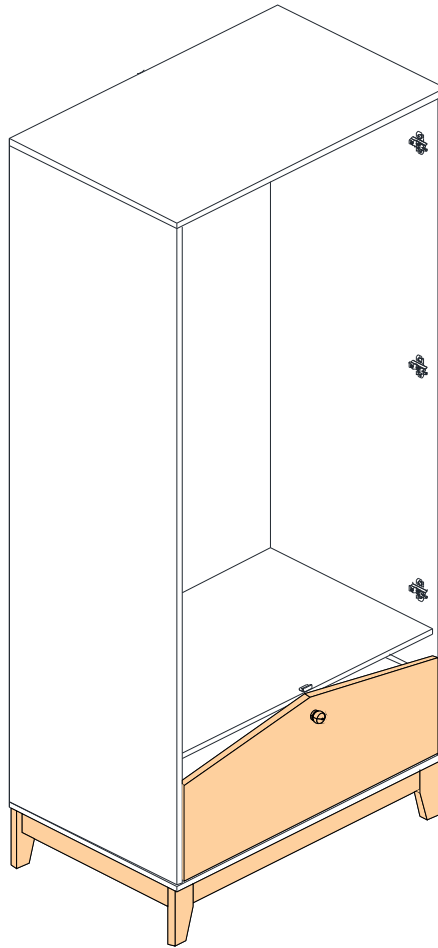


STEP 30




PARTS REQUIRED

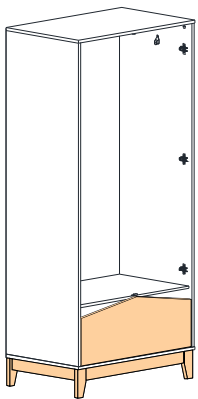

HARDWARE REQUIRED



TOOLS REQUIRED

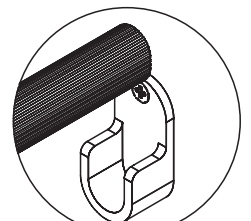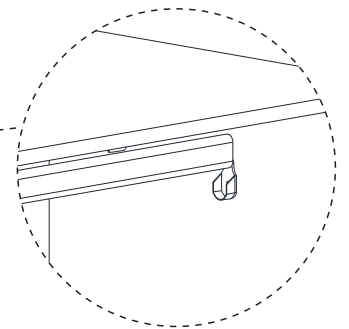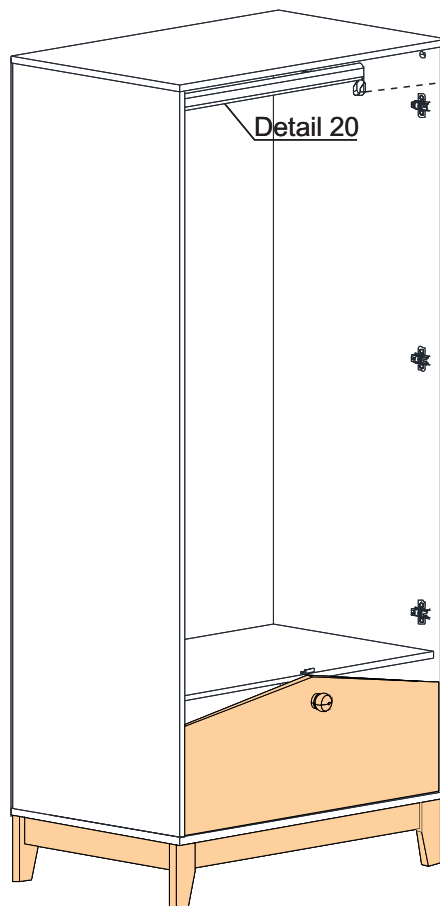



Detail 20

STEP 31




PARTS REQUIRED

16- LEFT DOOR	x1
17- RIGHT DOOR	x1

HARDWARE REQUIRED

M	 12 Ø4,0 x 14mm
R	 06


TOOLS REQUIRED

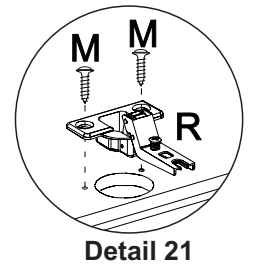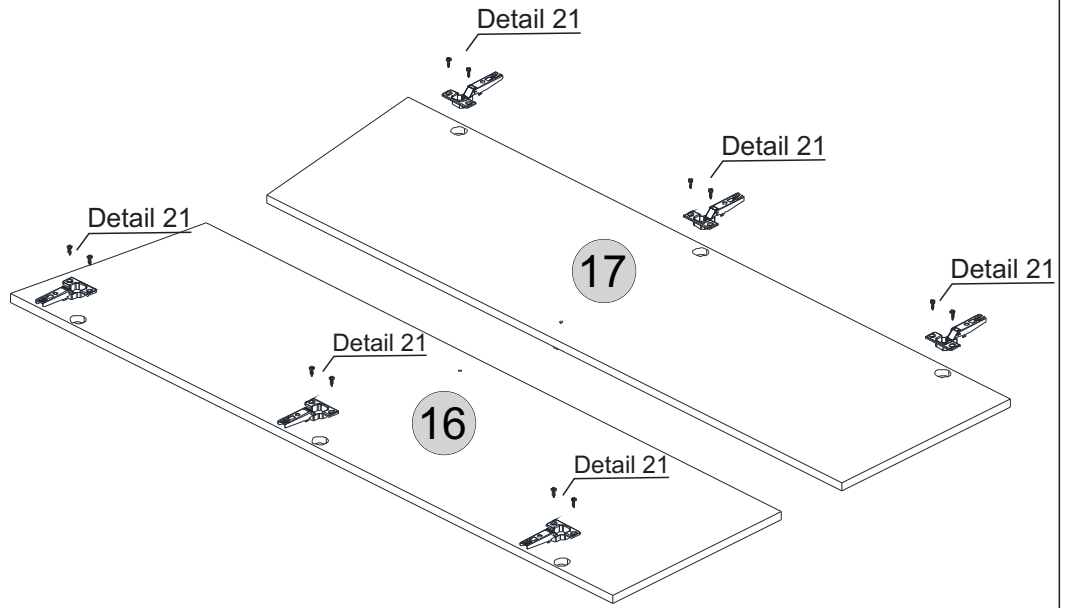



STEP 32

PARTS REQUIRED






16- LEFT DOOR	x1
17- RIGHT DOOR	x1

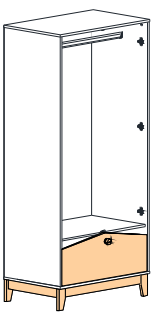

HARDWARE REQUIRED


L	 02 Ø4,0 x 30mm
Y	 02

TOOLS REQUIRED

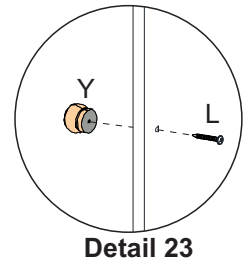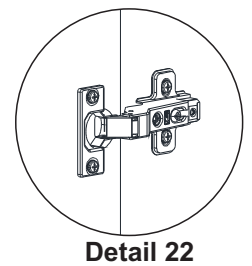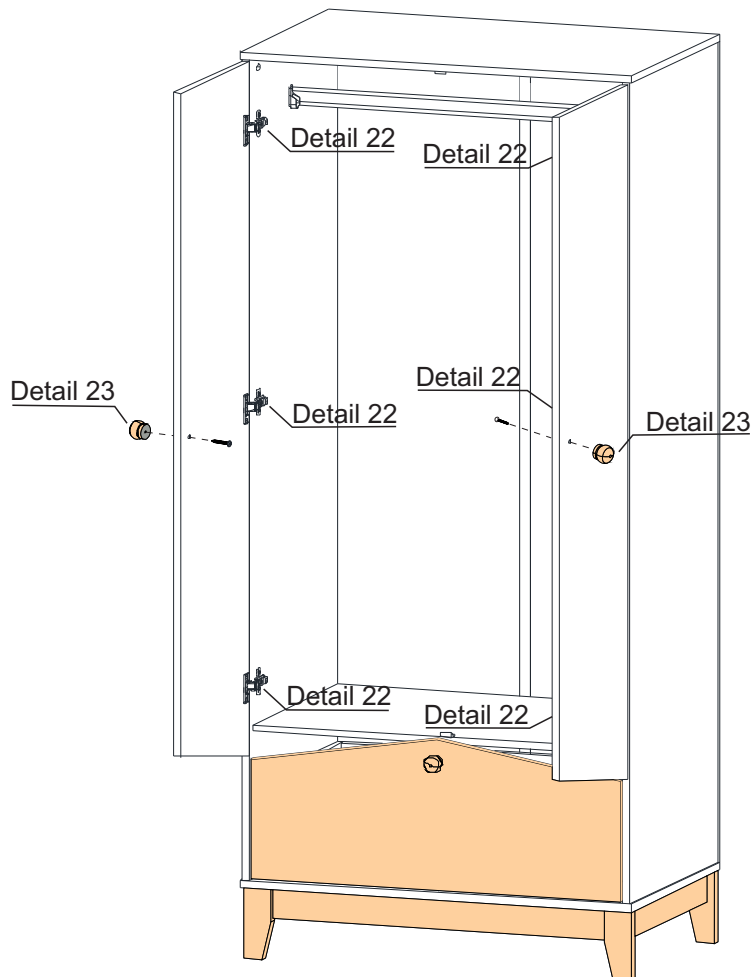


STEP 33






PARTS REQUIRED

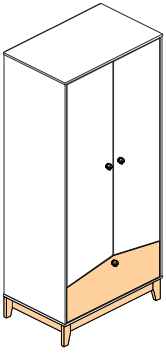

HARDWARE REQUIRED

K  01

TOOLS REQUIRED

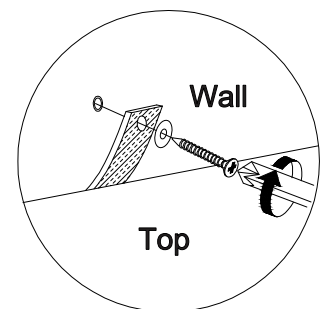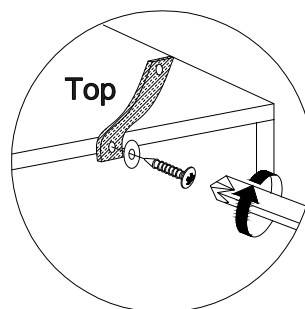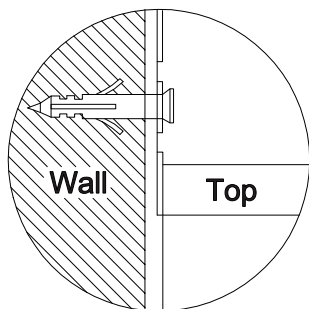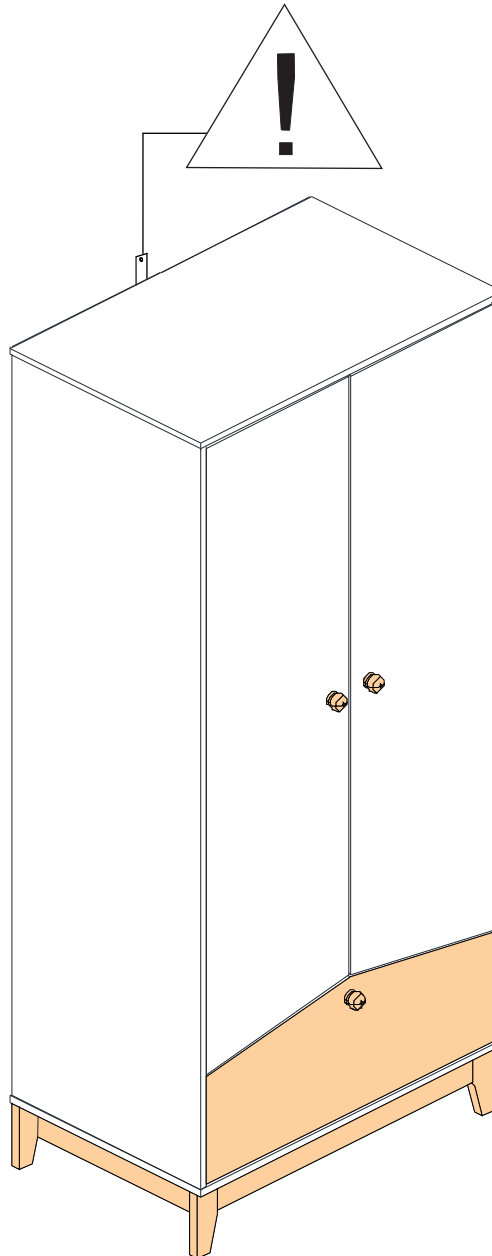


WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

CODY 2+2 DRAWER CHEST ASSEMBLY INSTRUCTIONS WHITE/PINE EFFECT

XXXXXX

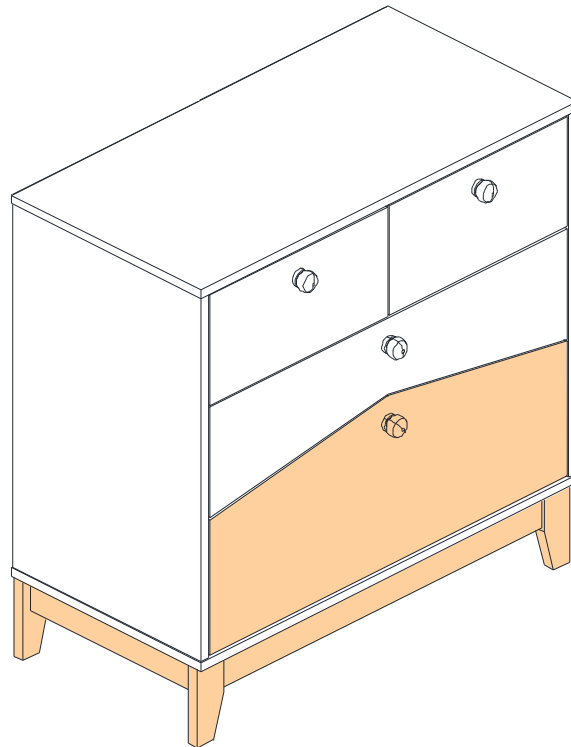

IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.



- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.



* Use of power tools to assemble this product will invalidate any claim and could damage this product making it unsafe!!!
* Please assemble on a clean soft surface to avoid damage.



* Please check contents and read the instructions before commencing assembly.
* Assemble this product following the enclosed instructions carefully.
* Please take care to avoid damaging parts during assembly.

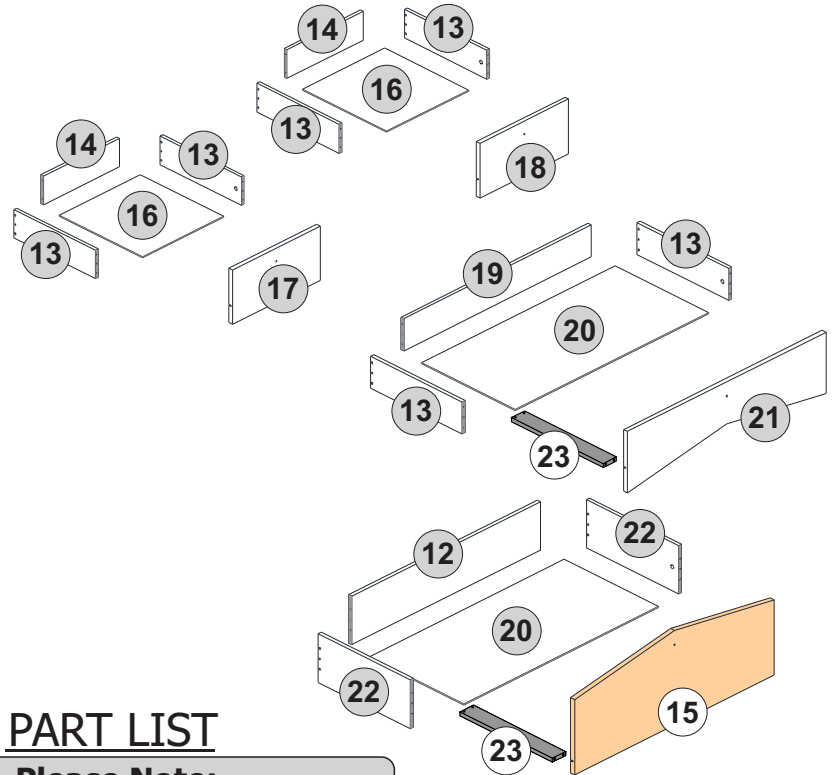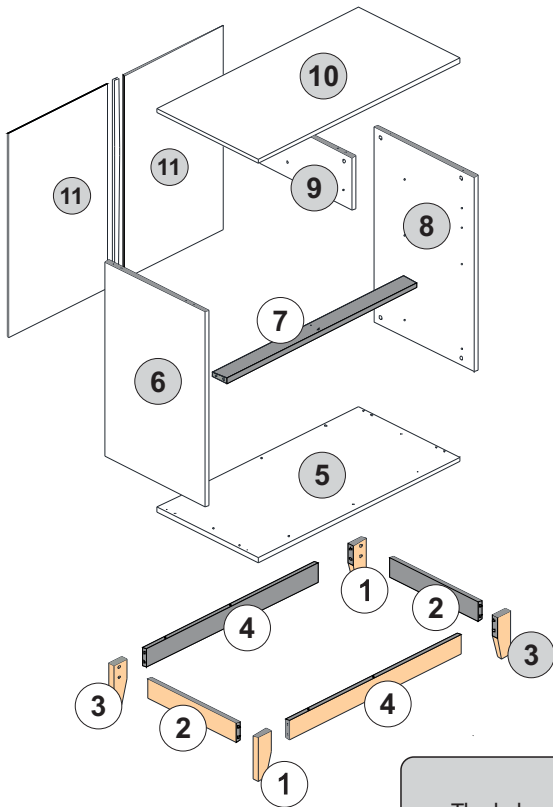



















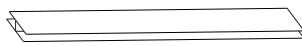
PART LIST

Please Note:


The below parts have all been stamped with the part number/color to help identify them during assembly.

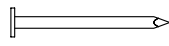Part Number	Part Code	Part Description	Quantity	Carton
1	S100-102-162-DV1-01	Left Leg	2	1/1
2	S100-102-162-DV1-02	Leg Support Left & Right	2	1/1
3	S100-102-162-DV1-03	Right Leg	2	1/1
4	S100-102-162-DV1-04	Leg Support Front & Back	2	1/1
5	S100-102-162-DV1-05	Base Panel	1	1/1
6	S100-102-162-DV1-06	Left Side Panel	1	1/1
7	S100-102-162-DV1-07	Centre Support	1	1/1
8	S100-102-162-DV1-08	Right Side panel	1	1/1
9	S100-102-162-DV1-09	Dividing Panel	1	1/1
10	S100-102-162-DV1-10	Top Panel	1	1/1
11	S100-102-162-DV1-11	Back Panel	2	1/1
12	S100-102-162-DV1-12	Drawer Back (Large)	1	1/1
13	S100-102-162-DV1-13	Drawer Sides	6	1/1
14	S100-102-162-DV1-14	Drawer Back (Small)	2	1/1
15	S100-102-162-DV1-15	Drawer Front Pine (Large)	1	1/1
16	S100-102-162-DV1-16	Drawer Base	2	1/1
17	S100-102-162-DV1-17	Drawer Front (Left)	1	1/1
18	S100-102-162-DV1-18	Drawer Front (Right)	1	1/1
19	S100-102-162-DV1-19	Drawer Back (Medium)	1	1/1
20	S100-102-162-DV1-20	Drawer Base(Large)	2	1/1
21	S100-102-162-DV1-21	Centre Drawer Front	1	1/1
22	S100-102-162-DV1-22	Drawer Sides (Large)	2	1/1
23	S100-102-162-DV1-23	Drawer Base Support	2	1/1



FITTINGS LIST

<p>A</p>  <p style="text-align: center;">Glue (3x)</p>	<p>B</p>  <p style="text-align: center;">2/+ Dowel Ø6,0 x 30mm (53x)</p>	<p>C</p>  <p style="text-align: center;">Slide 350mm (4x)</p>	<p>D</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø4,0 x 40mm (14x)</p>
<p>E</p>  <p style="text-align: center;">5/+ Nail 10 x 10 (52x)</p>	<p>F</p>  <p style="text-align: center;">1/+ Cam Nut 12mm (8x)</p>	<p>G</p>  <p style="text-align: center;">1/+ Cam Bolt (28x)</p>	<p>H</p>  <p style="text-align: center;">1/+ Screw Ø 6x8 (16x)</p>
<p>I</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø3,0 x 14mm (16x)</p>	<p>J</p>  <p style="text-align: center;">2/+ Hole Plugs (8x)</p>	<p>K</p>  <p style="text-align: center;">Washer 02 (1X) Ø3,5x25 01 Anti-tip strap 01</p>	
<p>L</p>  <p style="text-align: center;">1/+ Flan Head Screw Ø4,0 x 30mm (4x)</p>	<p>M</p>  <p style="text-align: center;">2/+ Dowel Ø8,0 x 30mm (8x)</p>	<p>N</p>  <p style="text-align: center;">1/+ Cam Nut 15mm (20x)</p>	<p>O</p>  <p style="text-align: center;">Handle(4x)</p>
<p>P</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø3,5 x 25mm (4x)</p>	<p>Q</p>  <p style="text-align: center;">1/+ Back Panel Bracket (4x)</p>	<p>R</p>  <p style="text-align: center;">Flat Head Screw Ø4,0 x 50mm (1x)</p>	<p>S</p>  <p style="text-align: center;">Plastic profile 456mm (1x)</p>

TOOLS REQUIRED

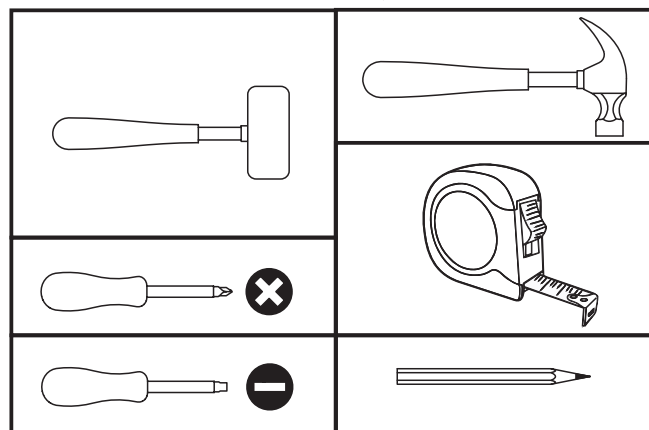


TIPS FOR FITTINGS CAM-LOCKS

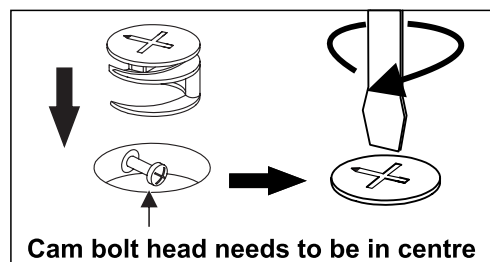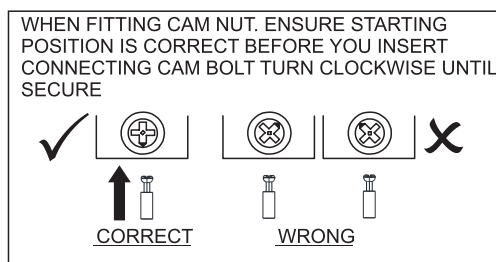

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

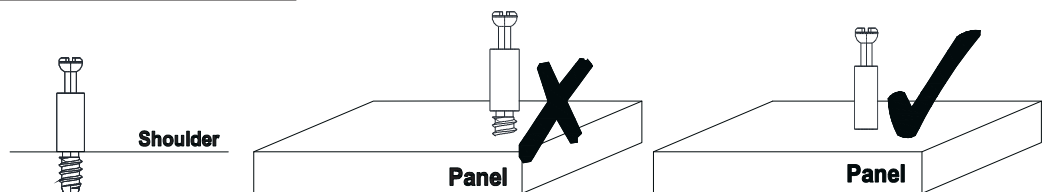

STEP 1

PARTS REQUIRED




1 - LEFT LEG x2

3 - RIGHT LEG x2

HARDWARE REQUIRED

G  08

TOOLS REQUIRED

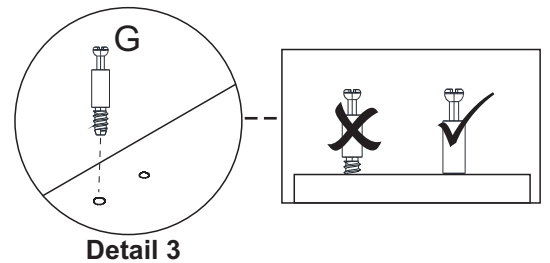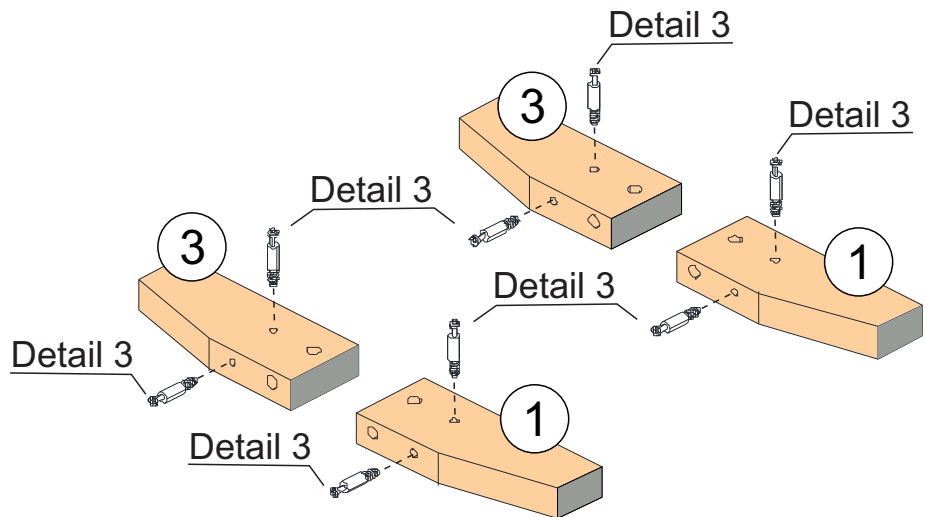

STEP 2


PARTS REQUIRED

2- LEG SUPPORT LEFT+RIGHT x2

4- LEG SUPPORT FRONT+BACK x2




HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

M  Ø8 x 30mm 08

TOOLS REQUIRED

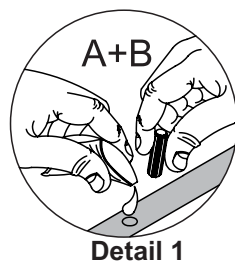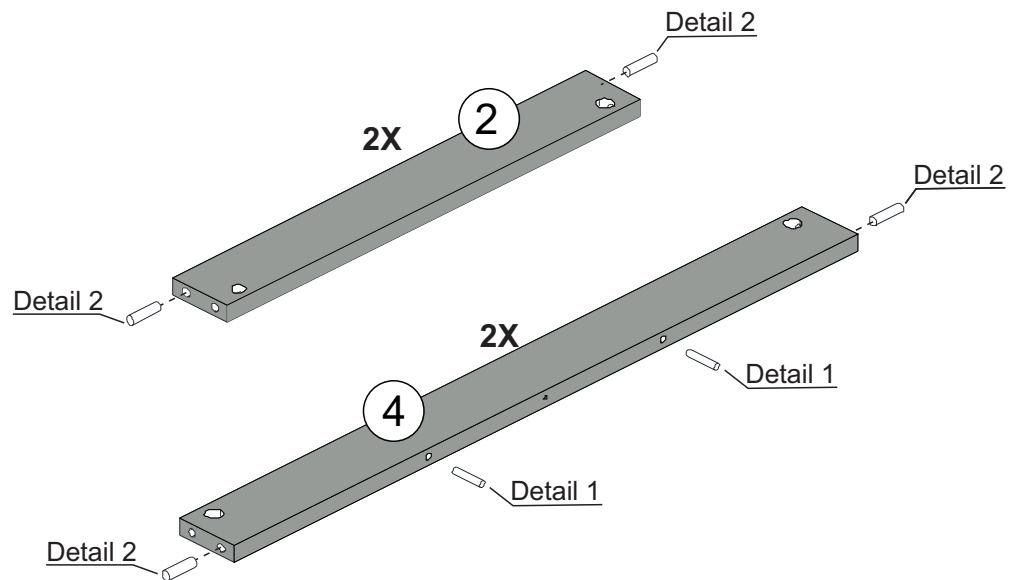

STEP 3


PARTS REQUIRED

7- CENTRE SUPPORT x1




9- DIVIDING PANEL x1

HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 05

TOOLS REQUIRED

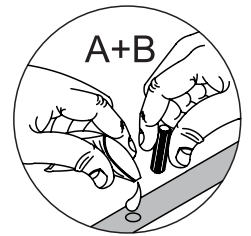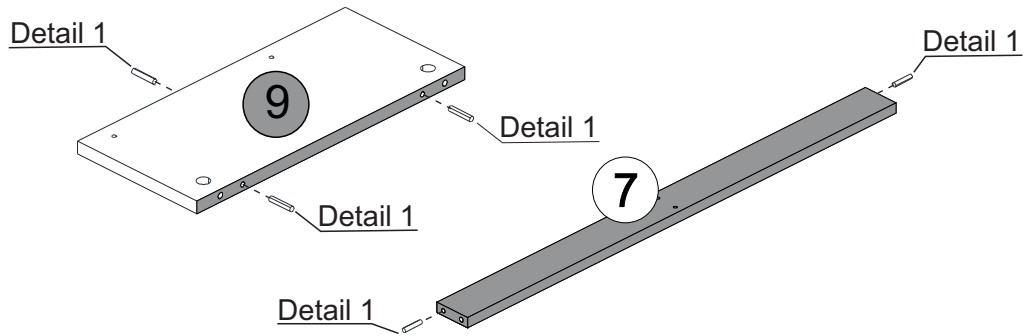

Detail 1

STEP 4

PARTS REQUIRED




9- DIVIDING PANEL x1

HARDWARE REQUIRED

H  Ø6 x 8mm 02

C  Right 350mm 01

TOOLS REQUIRED

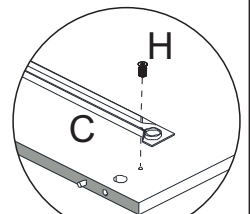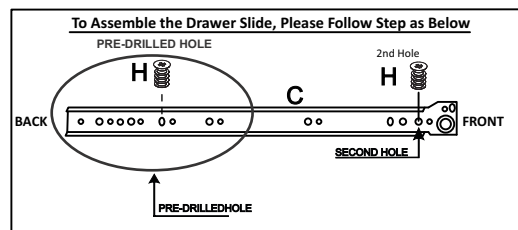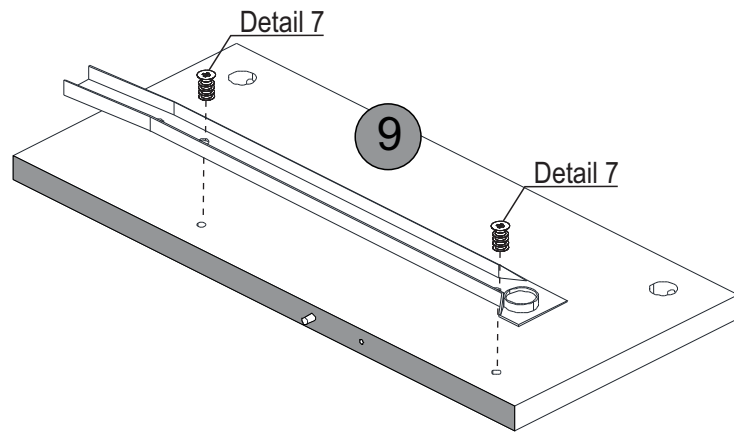

Detail 7

STEP 5

PARTS REQUIRED




9- DIVIDING PANEL x1

HARDWARE REQUIRED

C  Left 01
350mm

H  02
Ø6 x 8mm

TOOLS REQUIRED

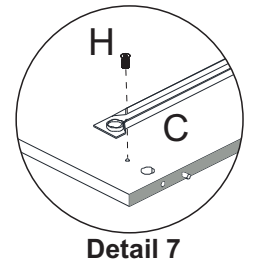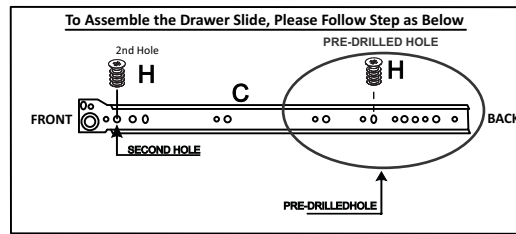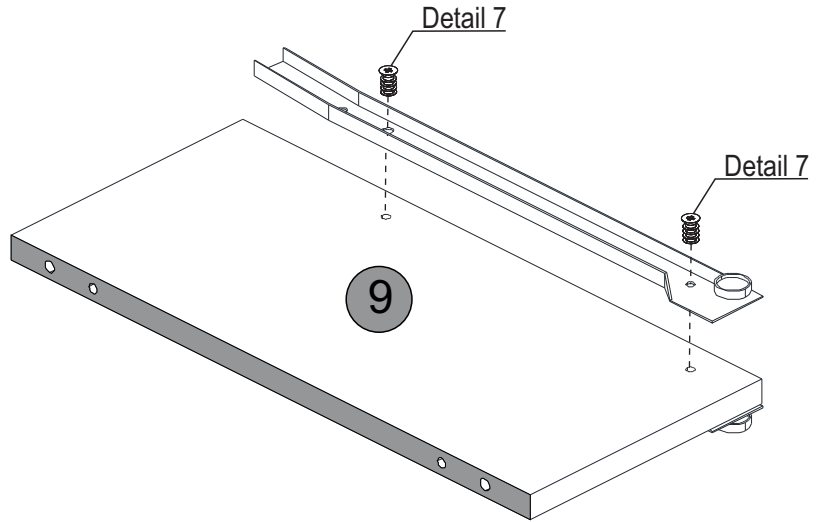

STEP 6



PARTS REQUIRED

10-TOP PANEL x1

HARDWARE REQUIRED

G  06

TOOLS REQUIRED

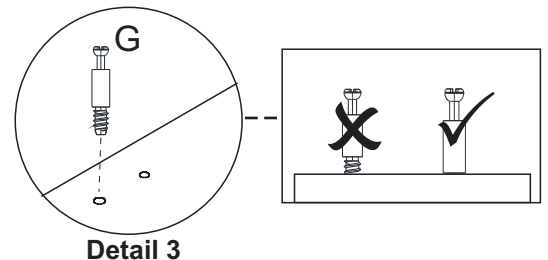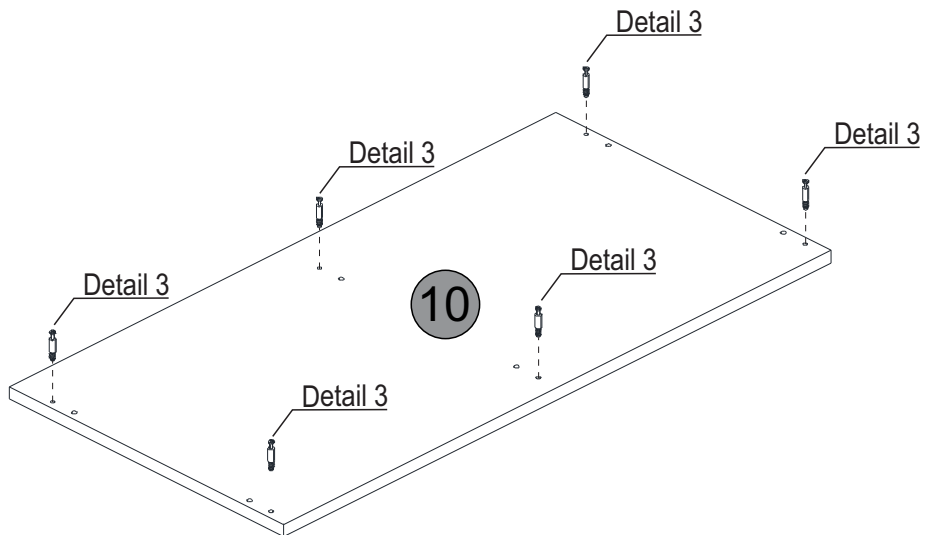


STEP 7

PARTS REQUIRED

6- LEFT SIDE PANEL x1





HARDWARE REQUIRED

A  01


B  04
Ø6 x 30mm

G  01

TOOLS REQUIRED

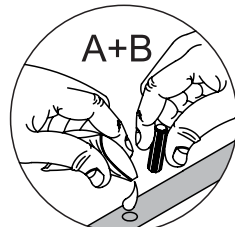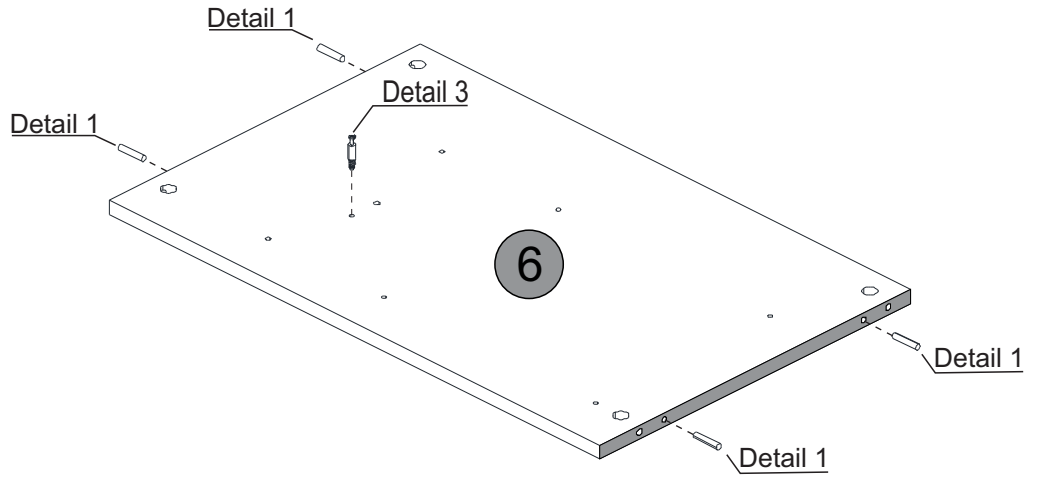

Detail 1

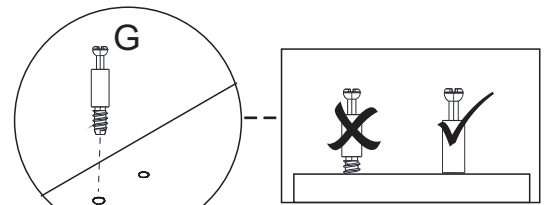

Detail 3

STEP 8

PARTS REQUIRED




6- LEFT SIDE PANEL x1

HARDWARE REQUIRED

C  03
Left
350mm

H  06
Ø6 x 8mm

TOOLS REQUIRED

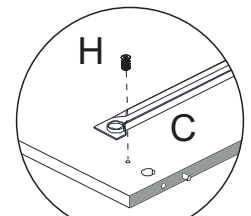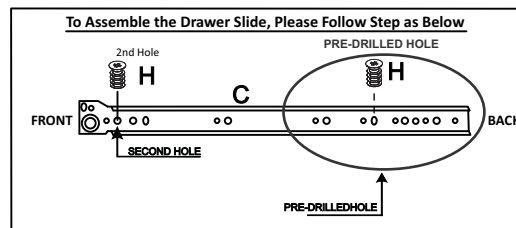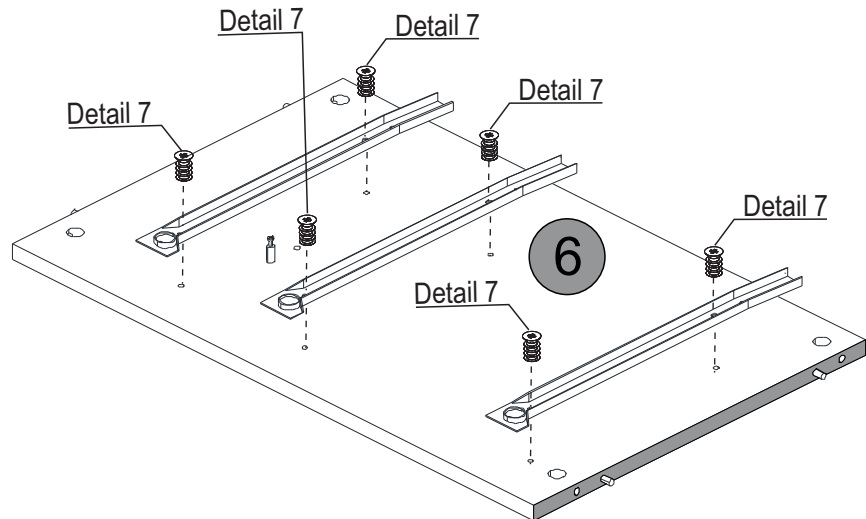

Detail 7


STEP 9

PARTS REQUIRED

8- RIGHT SIDE PANEL x1





HARDWARE REQUIRED

A  01


B  04

G  01

TOOLS REQUIRED

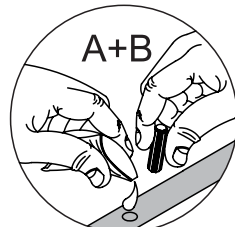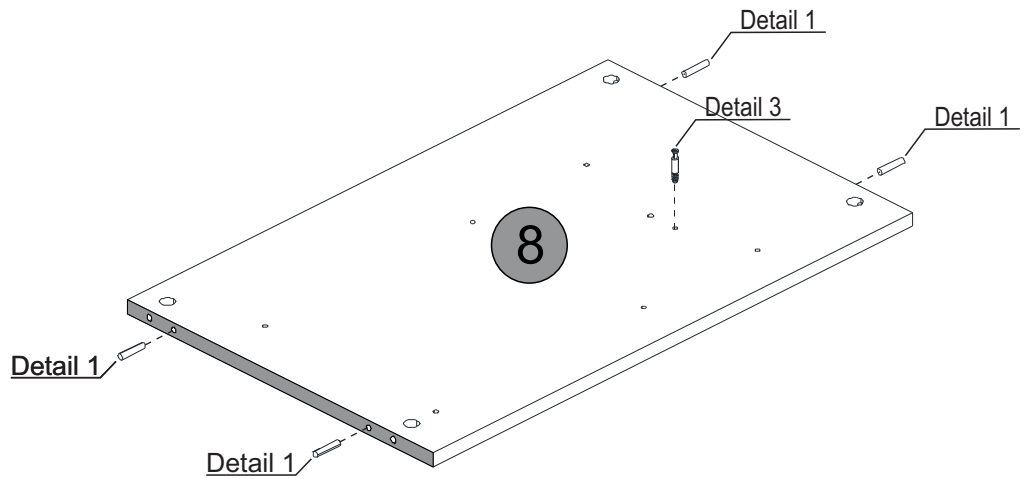

Detail 1

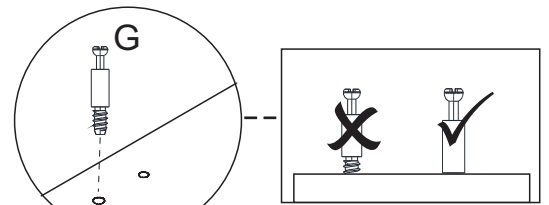

Detail 3

STEP 10

PARTS REQUIRED




8 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED

C  03

H  06

TOOLS REQUIRED

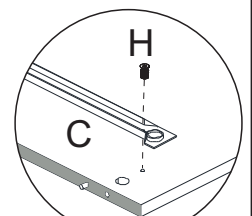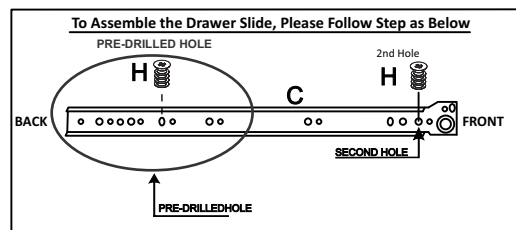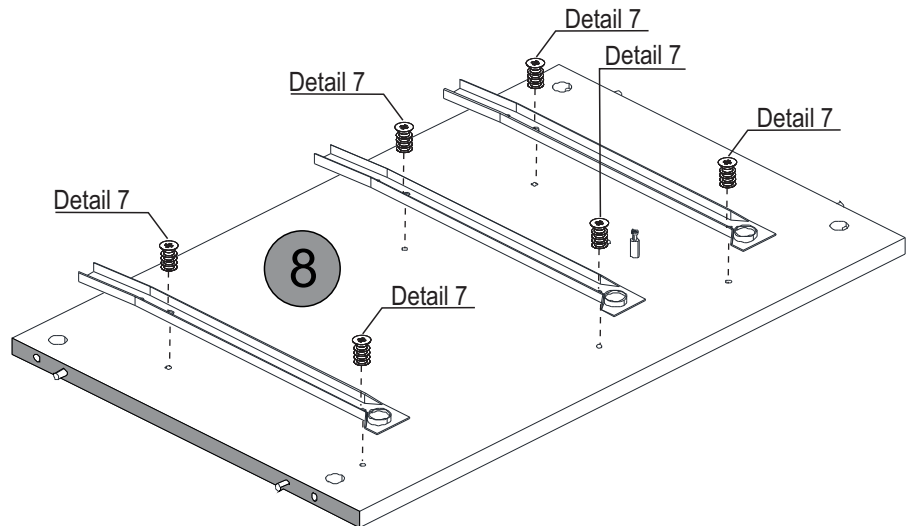



Detail 7

STEP 11




PARTS REQUIRED

1- LEFT LEG	x2
3- RIGHT LEG	x2
4- LEG SUPPORT FRONT & BACK	x2


HARDWARE REQUIRED

A		01
N		04


TOOLS REQUIRED

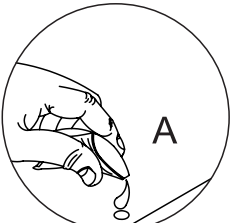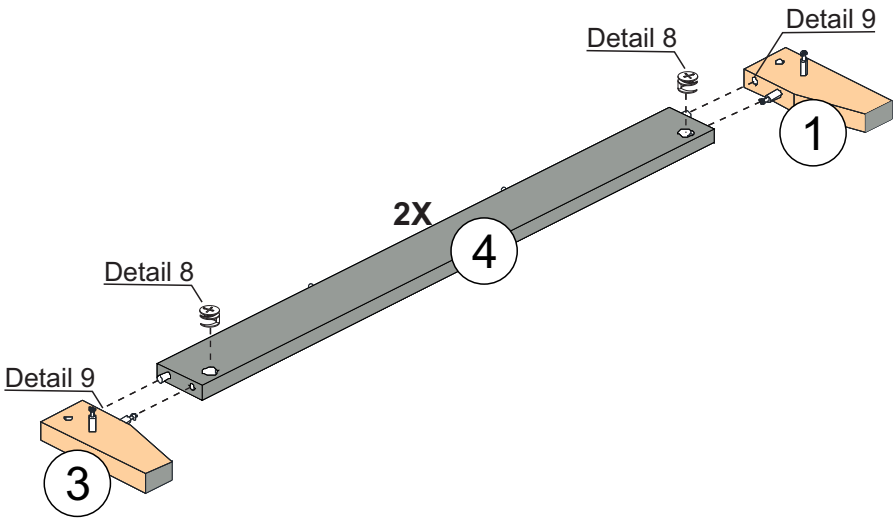

Detail 9

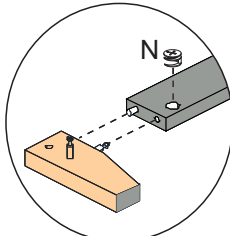


Detail 8

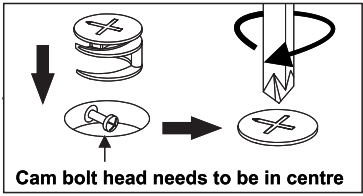



STEP 12

PARTS REQUIRED



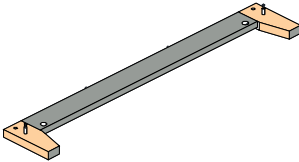
2- LEG SUPPORT LEFT & RIGHT	x2
-----------------------------	----




HARDWARE REQUIRED

A		01
N		02


TOOLS REQUIRED

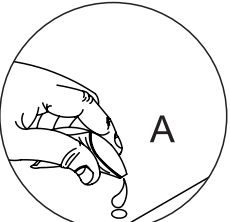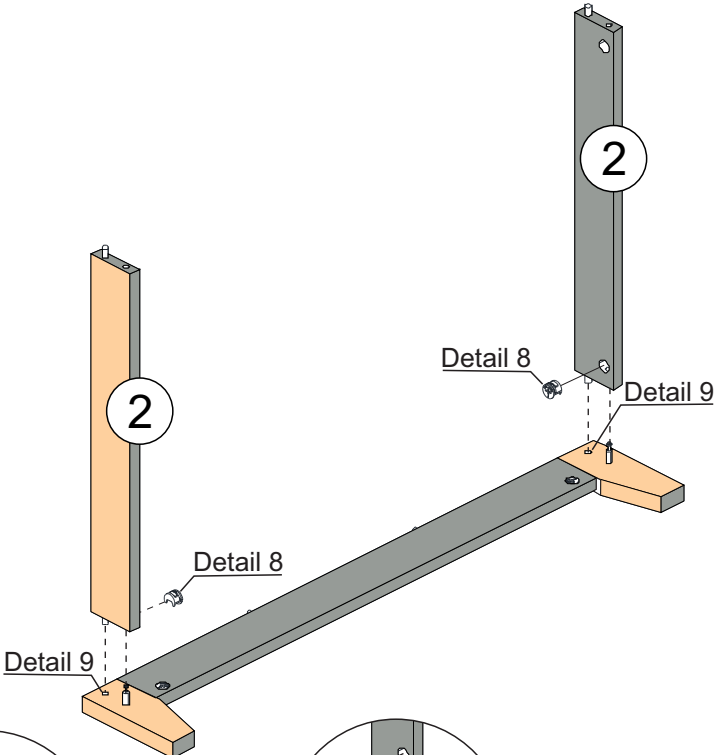

Detail 9

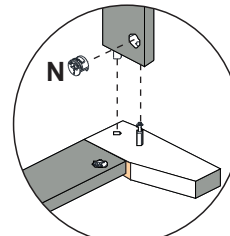


Detail 8

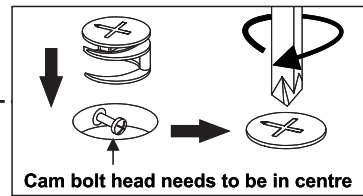


STEP 13




PARTS REQUIRED

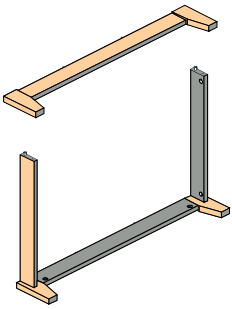


HARDWARE REQUIRED




TOOLS REQUIRED

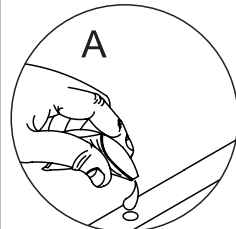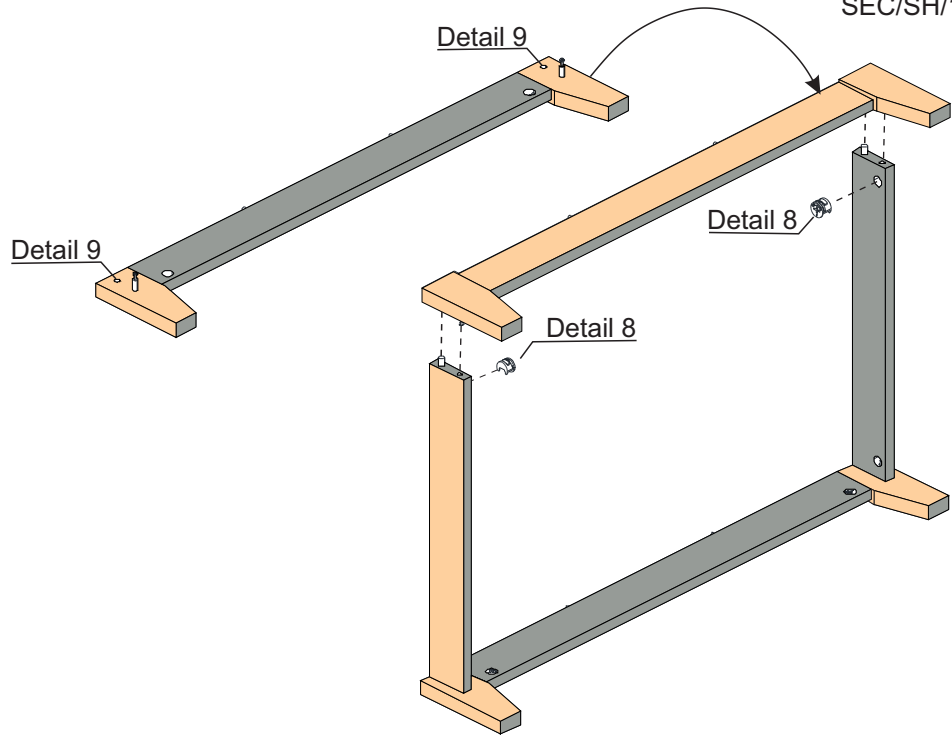

Detail 9

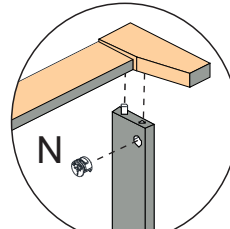


Detail 8


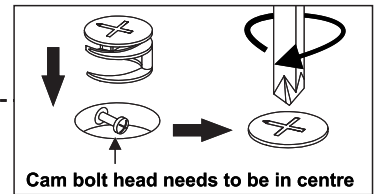


STEP 14




PARTS REQUIRED

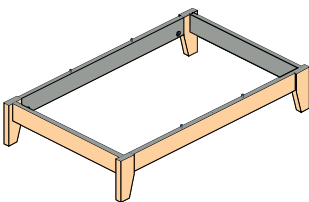


HARDWARE REQUIRED



TOOLS REQUIRED

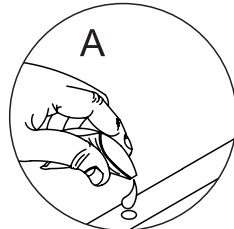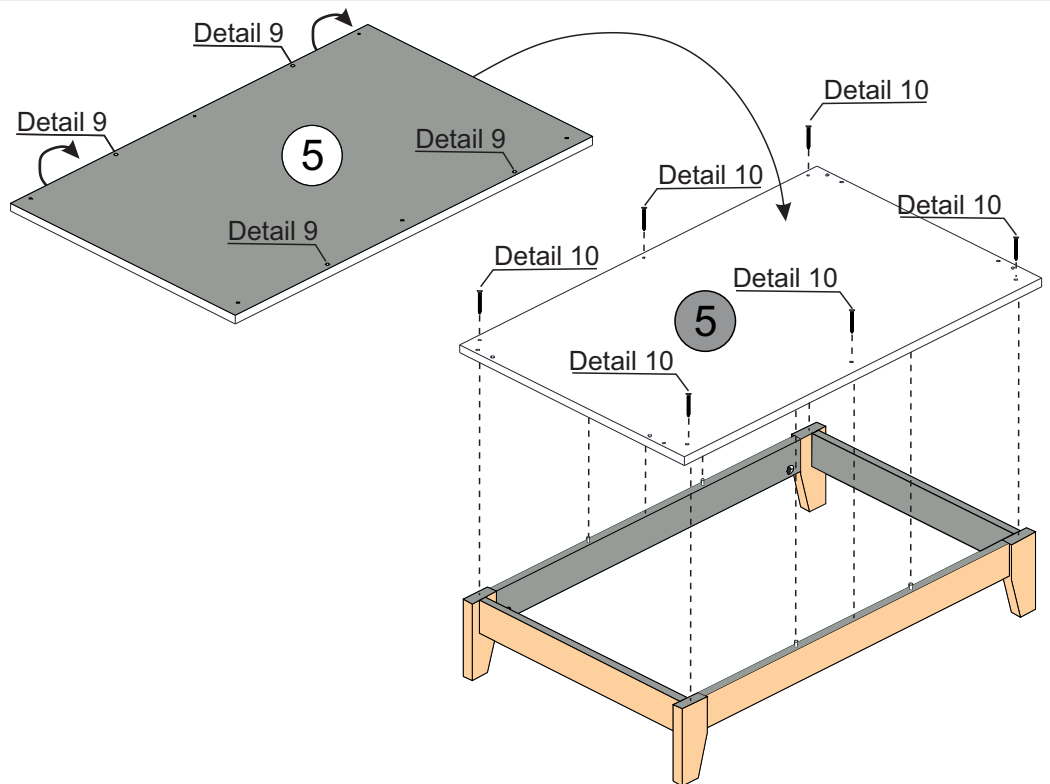


Detail 9

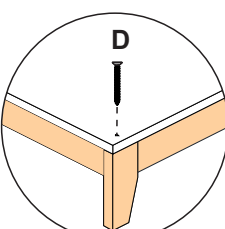

Detail 10

STEP 15




PARTS REQUIRED

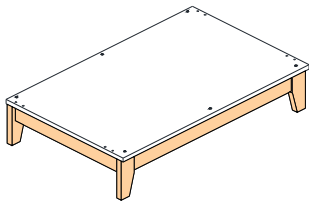

HARDWARE REQUIRED



TOOLS REQUIRED

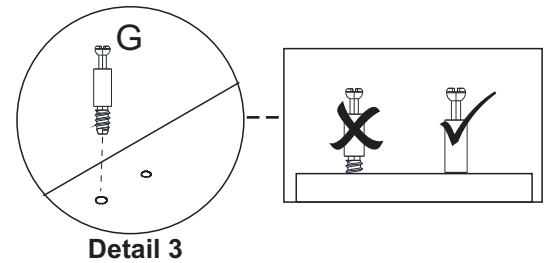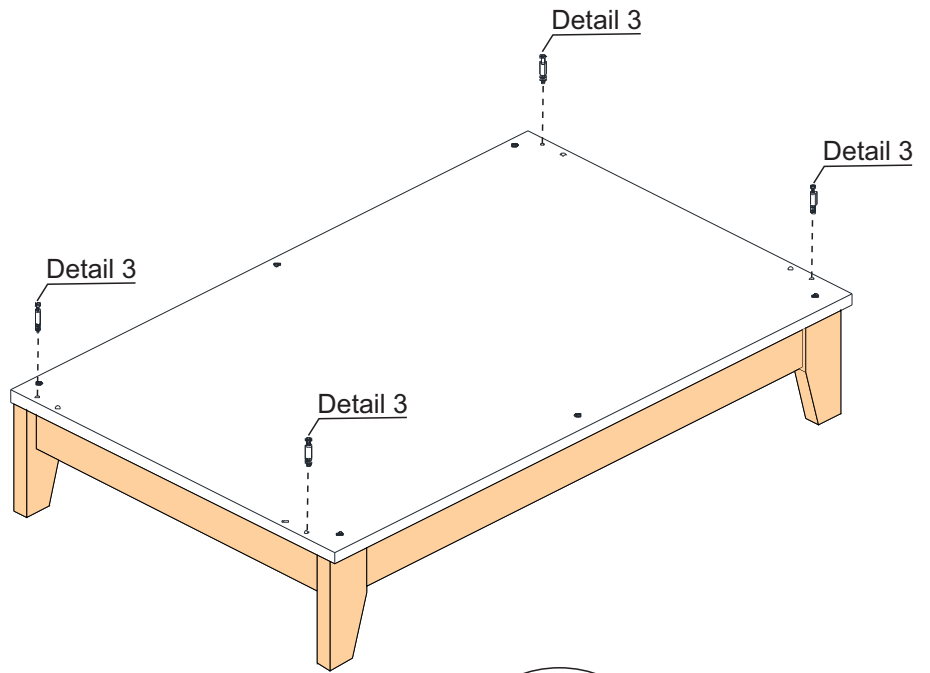

Detail 3

STEP 16


PARTS REQUIRED

6- LEFT SIDE PANEL	x1
--------------------	----




7- CENTRE SUPPORT	x1
-------------------	----

8- RIGHT SIDE PANEL	x1
---------------------	----


HARDWARE REQUIRED




TOOLS REQUIRED

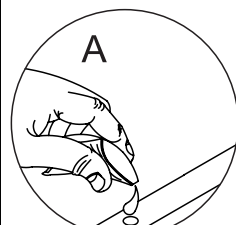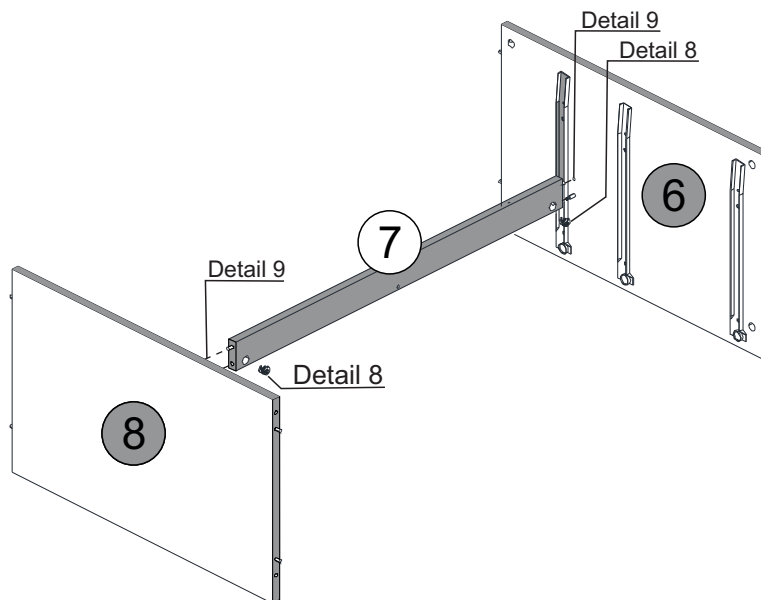

Detail 9

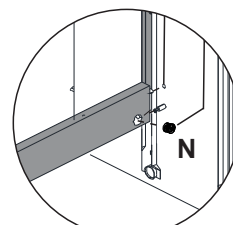

Detail 8

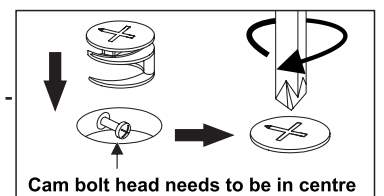



STEP 17




PARTS REQUIRED

9- DIVIDING PANEL	x1
10- TOP PANEL	x1


HARDWARE REQUIRED

A		01
N		02


TOOLS REQUIRED

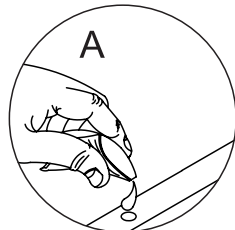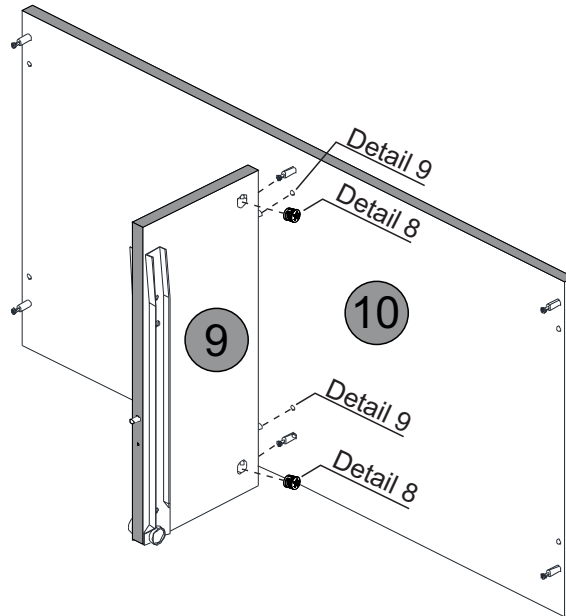

Detail 9

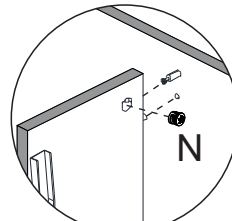


Detail 8

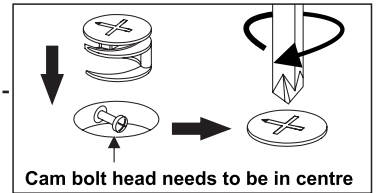




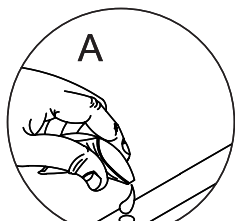
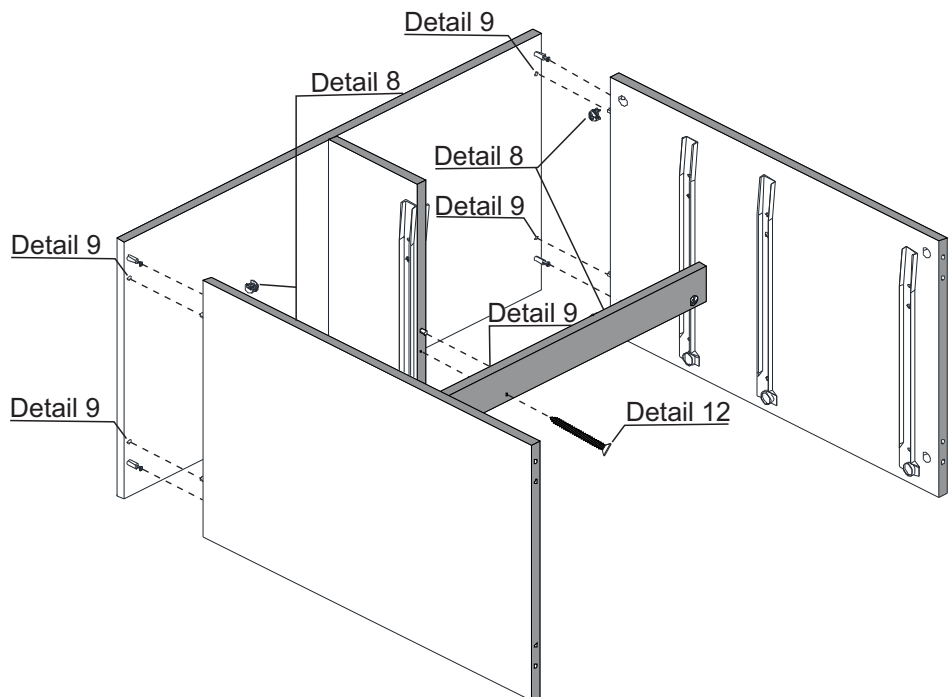
STEP 18

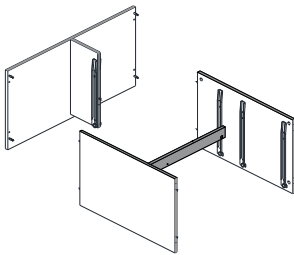PARTS REQUIRED




HARDWARE REQUIRED


A		01
N		04
R	 Ø4,0 x 50mm	01




Detail 9

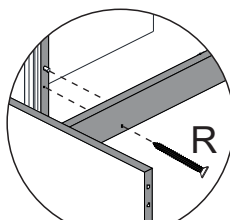

Detail 12

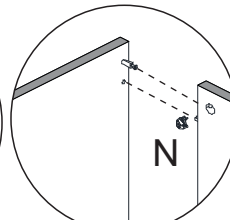


Detail 8

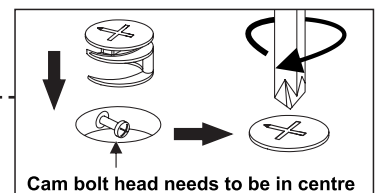

STEP 19




PARTS REQUIRED

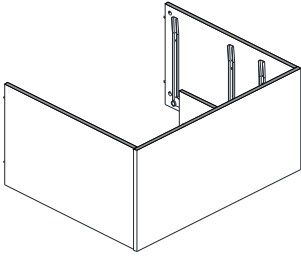


HARDWARE REQUIRED

A		01
N		04


TOOLS REQUIRED

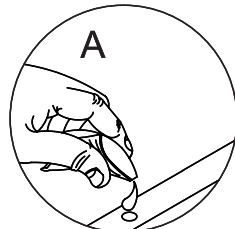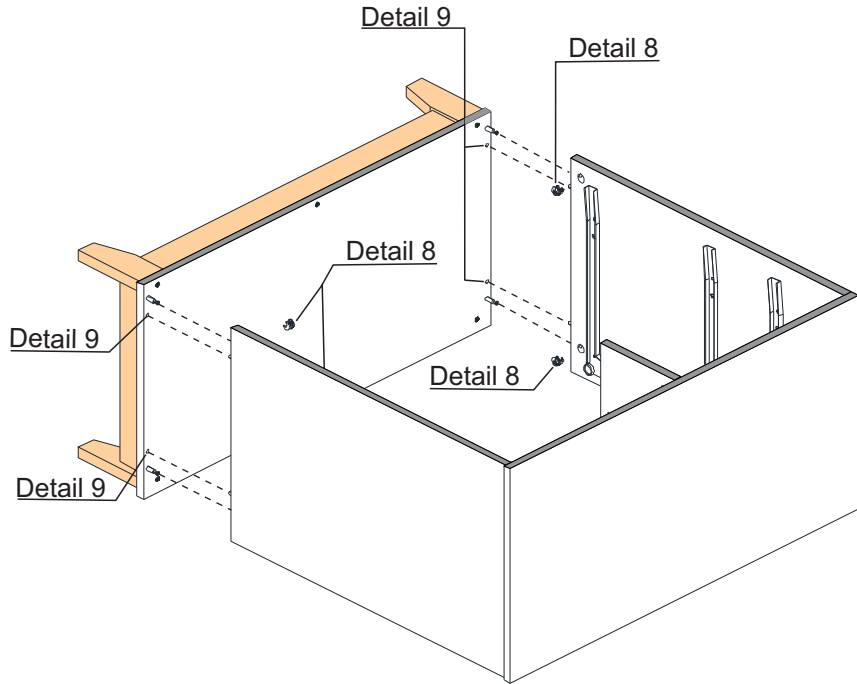

Detail 9

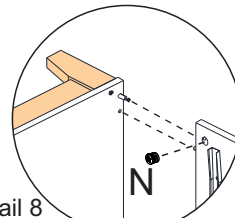


Detail 8

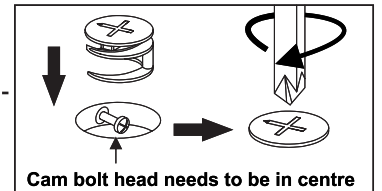

STEP 20

PARTS REQUIRED


11- BACK PANEL	x2
----------------	----

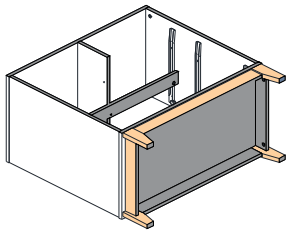





HARDWARE REQUIRED

E		24
Q		04
S		01


TOOLS REQUIRED



FOR YOUR REFERENCE
ORDER NUMBER
SHOULD BE HERE.

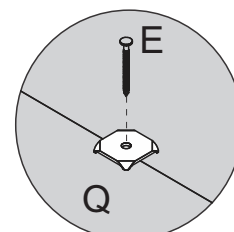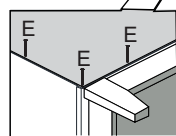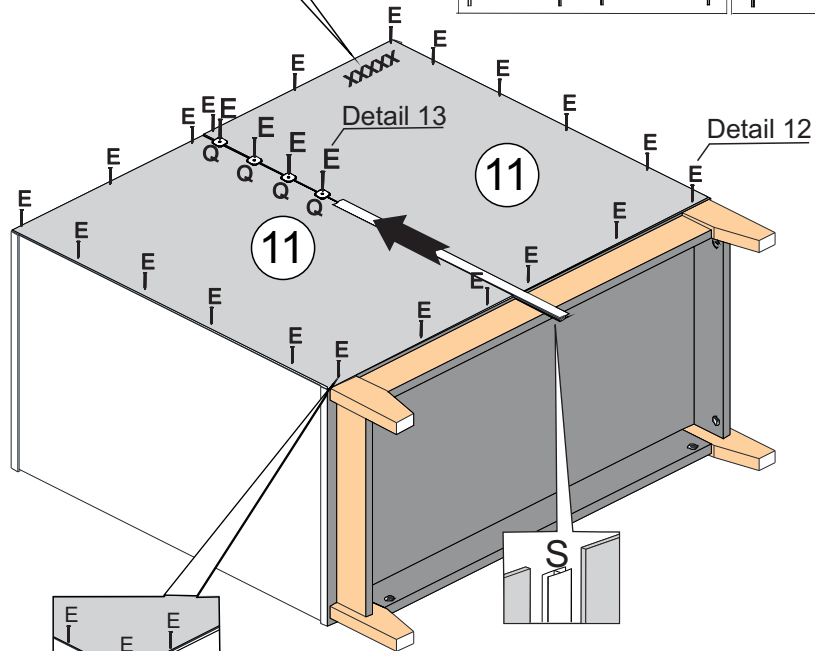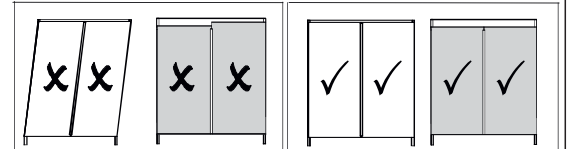

Detail 13

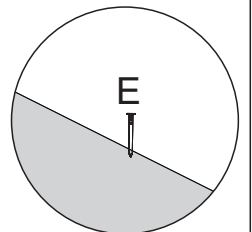

Detail 12

STEP 21



PARTS REQUIRED

- 12- DRAWER BACK(LARGE) x1
- 13- DRAWER SIDES x6
- 14- DRAWER BACK(SMALL) x2
- 19- DRAWER BACK(MEDIUM) x1
- 22- DRAWER SIDES(LARGE) x2
- 23- DRAWER BASE SUPPORT x2

HARDWARE REQUIRED

- A  01
- B  Ø6 x 30mm 36

TOOLS REQUIRED

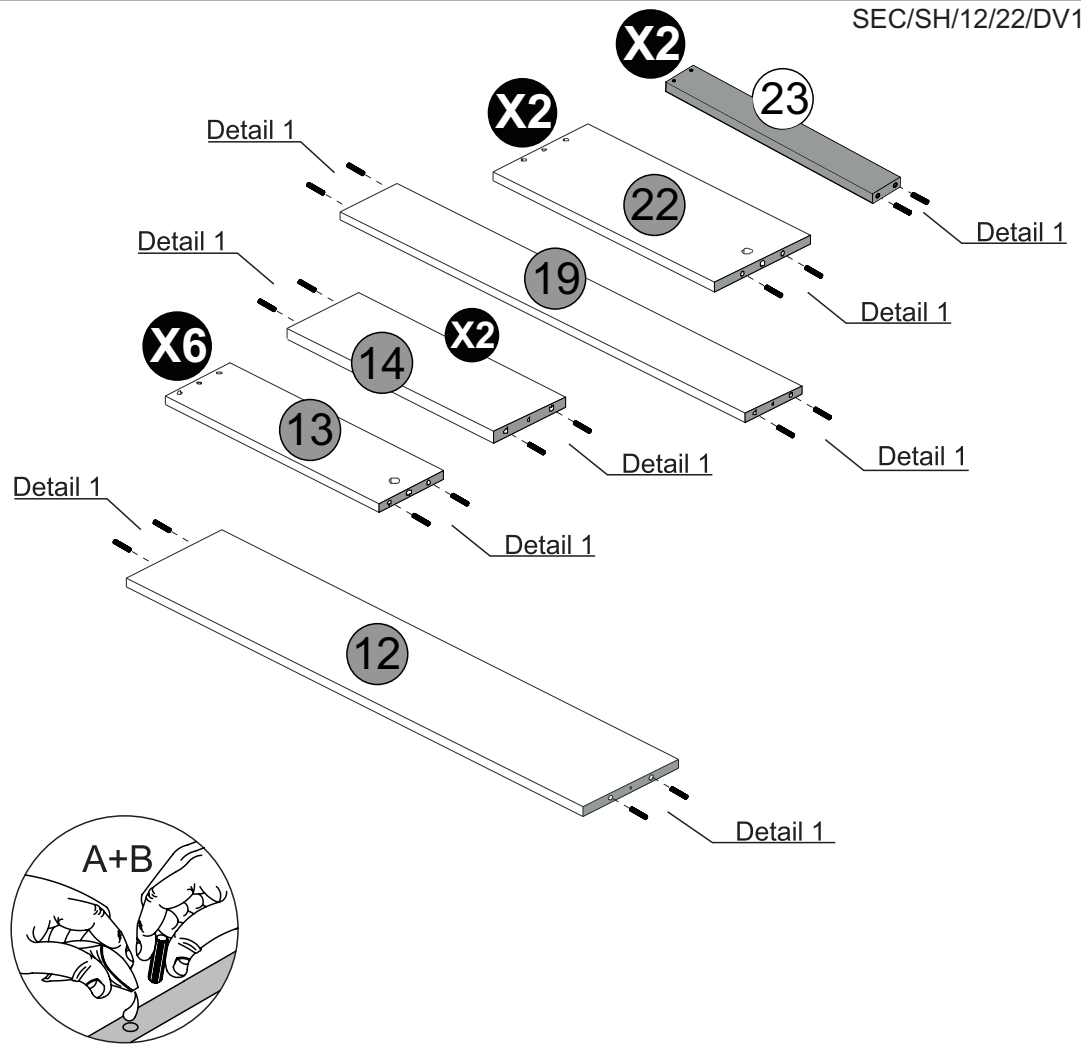


STEP 22


PARTS REQUIRED

- 15- DRAWER FRONT PINE LARGE x1
- 17- DRAWER FRONT(LEFT) x1
- 18- DRAWER FRONT(RIGHT) x1
- 21- CENTRE DRAWER FRONT x1

HARDWARE REQUIRED

- G  08

TOOLS REQUIRED

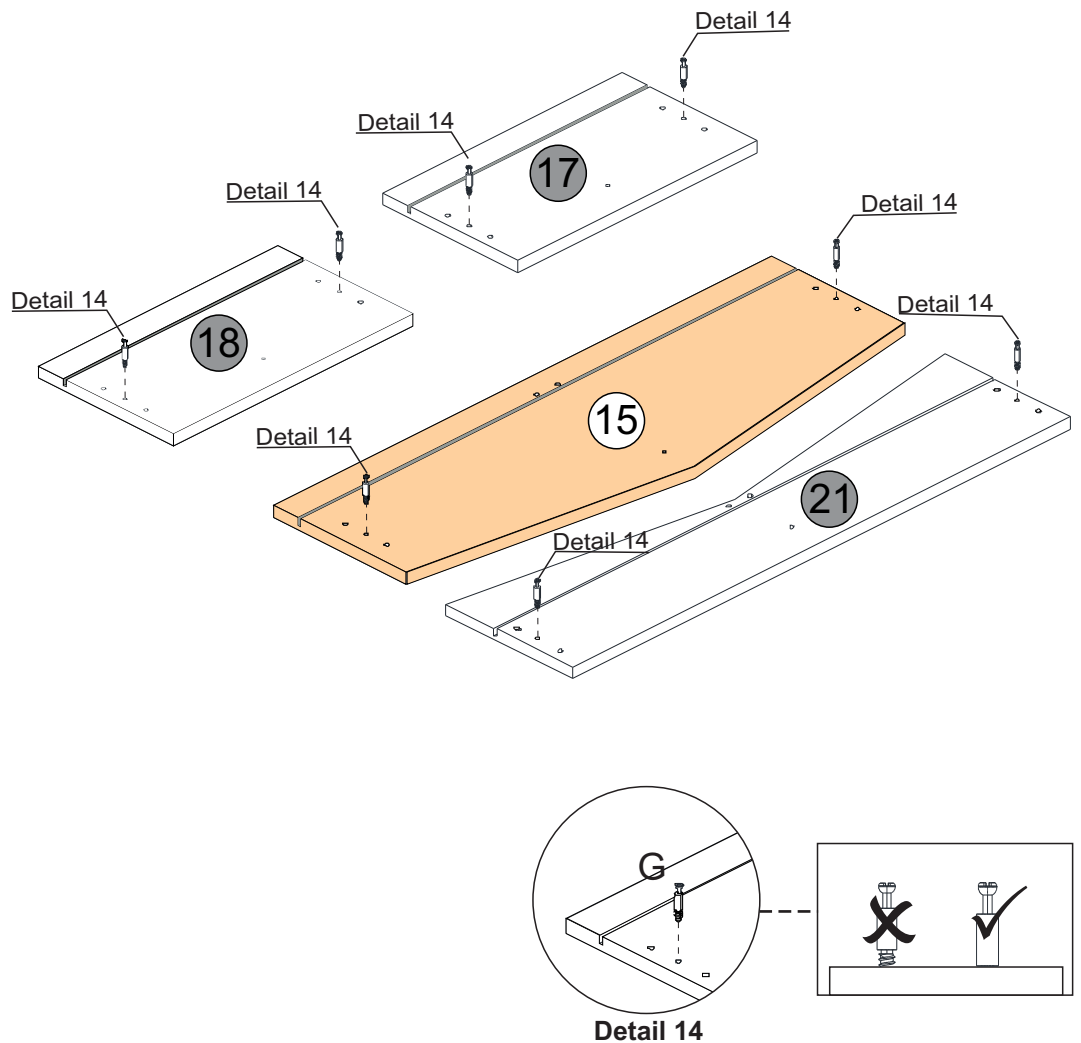


STEP 23

PARTS REQUIRED




13- DRAWER SIDES x4

14- DRAWER BACK(SMALL) x2

HARDWARE REQUIRED

D  04
Ø4,0 x 40mm

TOOLS REQUIRED

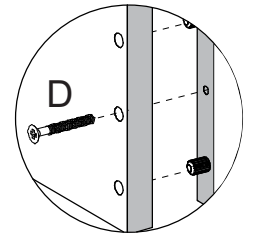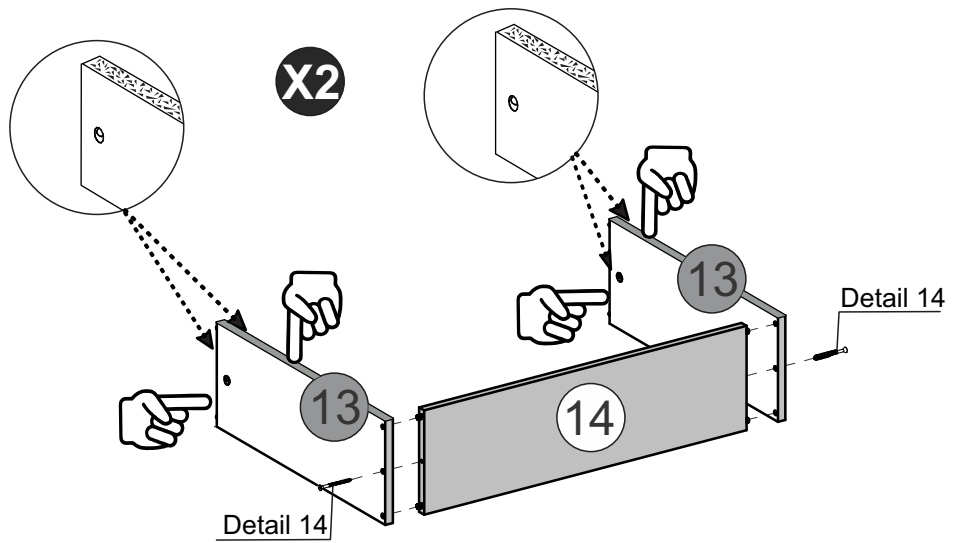


Detail 14

STEP 24

PARTS REQUIRED

17 - DRAWER FRONT(LEFT) x1

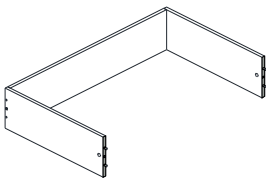




HARDWARE REQUIRED

A  01


F  Ø12mm 02

J  02


TOOLS REQUIRED

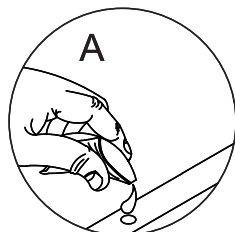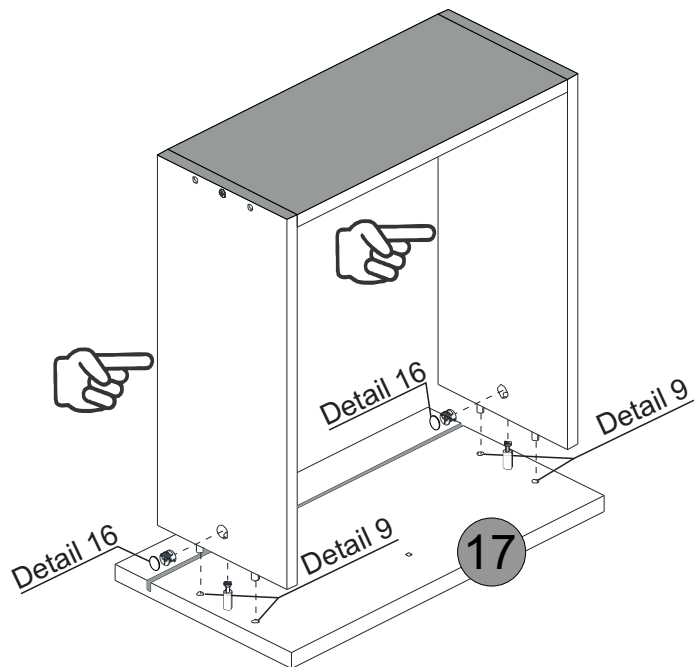

Detail 9

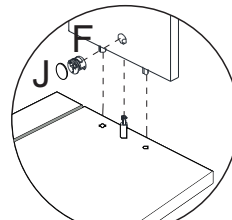


Detail 16

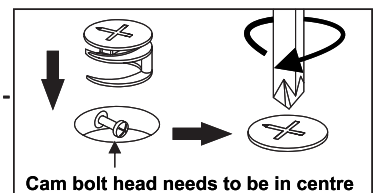

STEP 25

PARTS REQUIRED

18 - DRAWER FRONT(RIGHT) x1

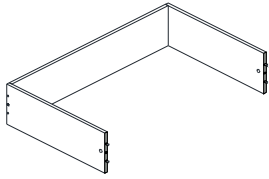




HARDWARE REQUIRED

A  01


F  Ø12mm 02

J  02


TOOLS REQUIRED

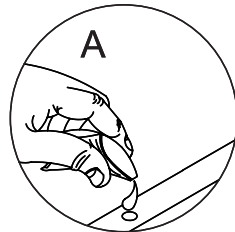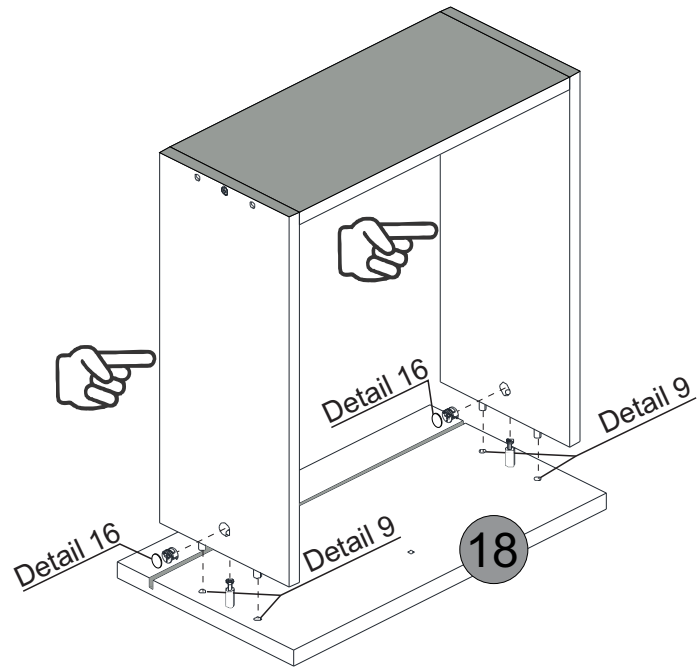

Detail 9

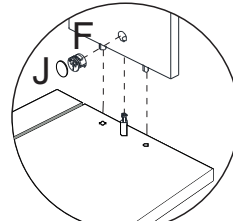

Detail 16

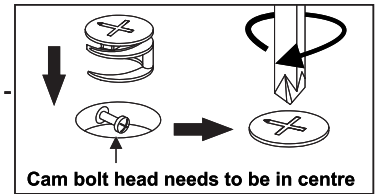


Cam bolt head needs to be in centre

STEP 26

PARTS REQUIRED

16 - DRAWER BASE x2



X2

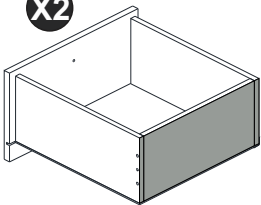



HARDWARE REQUIRED

E  10


TOOLS REQUIRED

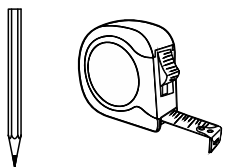

X2

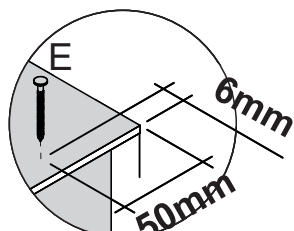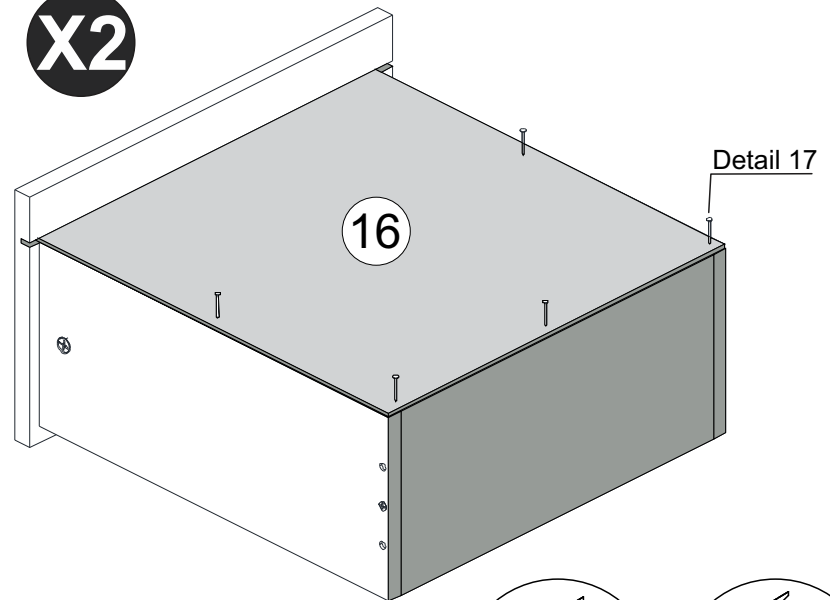


Detail 17

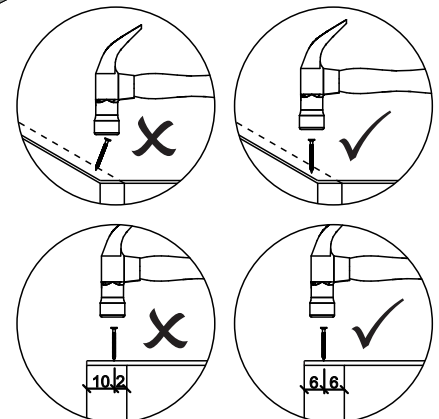


STEP 27





PARTS REQUIRED

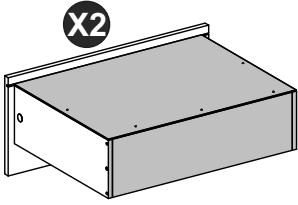

HARDWARE REQUIRED




TOOLS REQUIRED

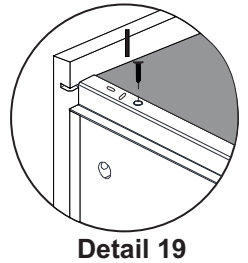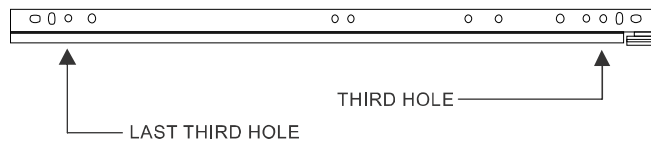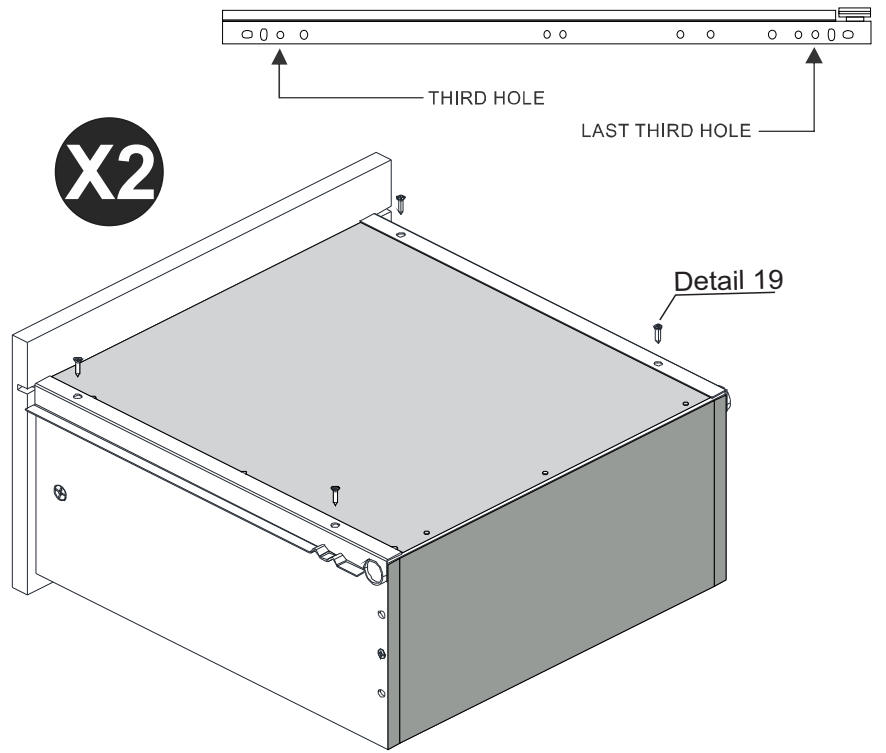


STEP 28




PARTS REQUIRED

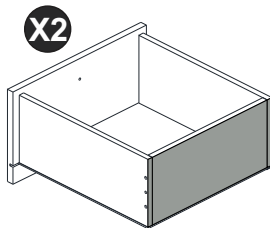

HARDWARE REQUIRED



TOOLS REQUIRED

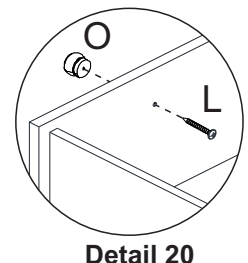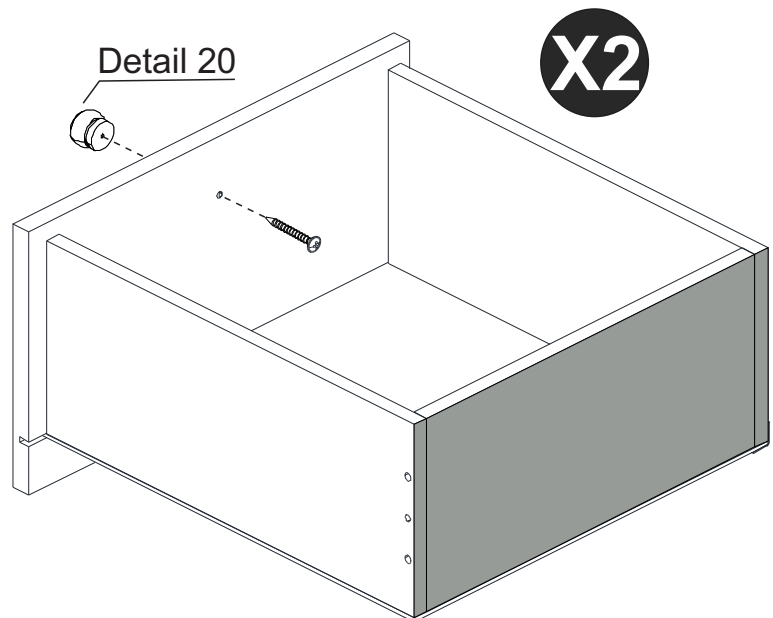


STEP 29

PARTS REQUIRED



13- DRAWER SIDES x2

19- DRAWER BACK(MEDIUM) x1

HARDWARE REQUIRED

D  02
Ø4,0 x 40mm


TOOLS REQUIRED

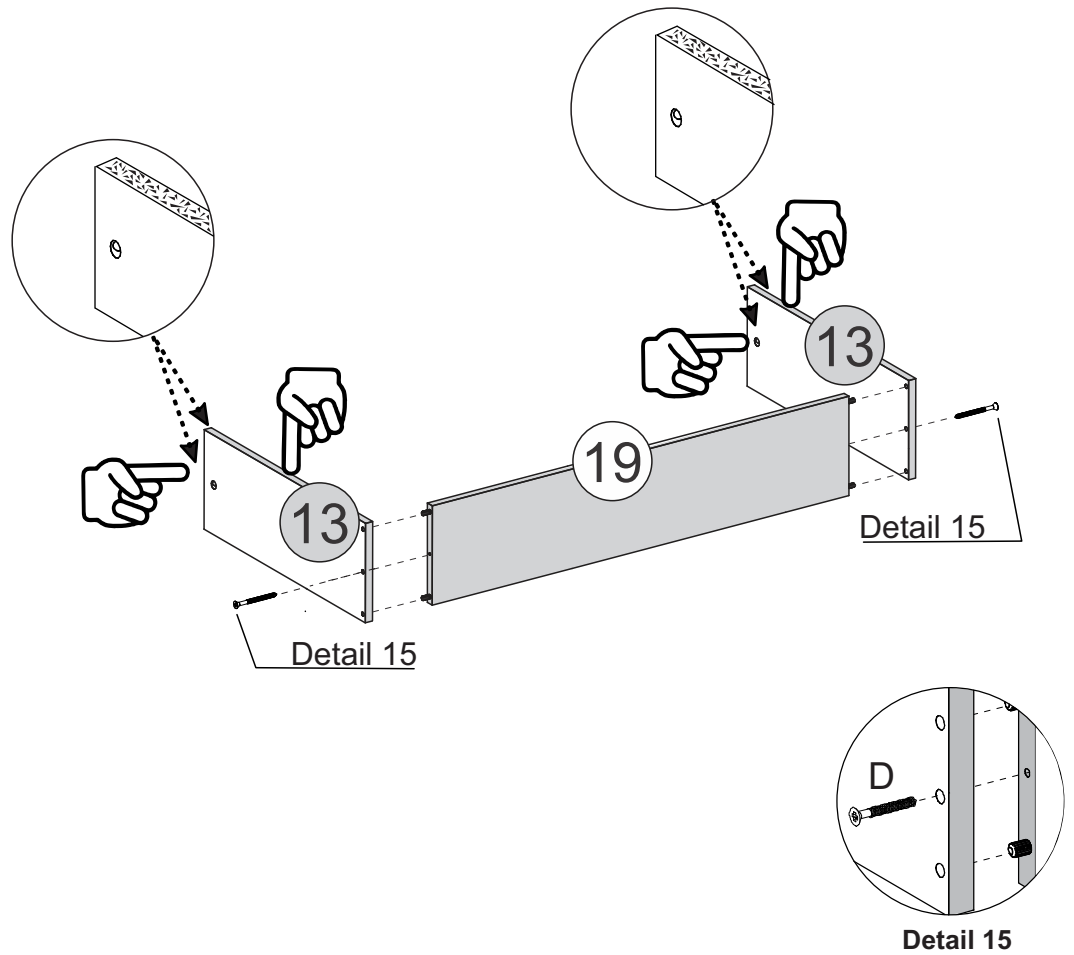

STEP 30

PARTS REQUIRED

21 - CENTRE DRAWER FRONT x1

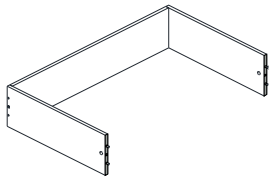



HARDWARE REQUIRED

A  01

F  Ø12mm 02

J  02

TOOLS REQUIRED

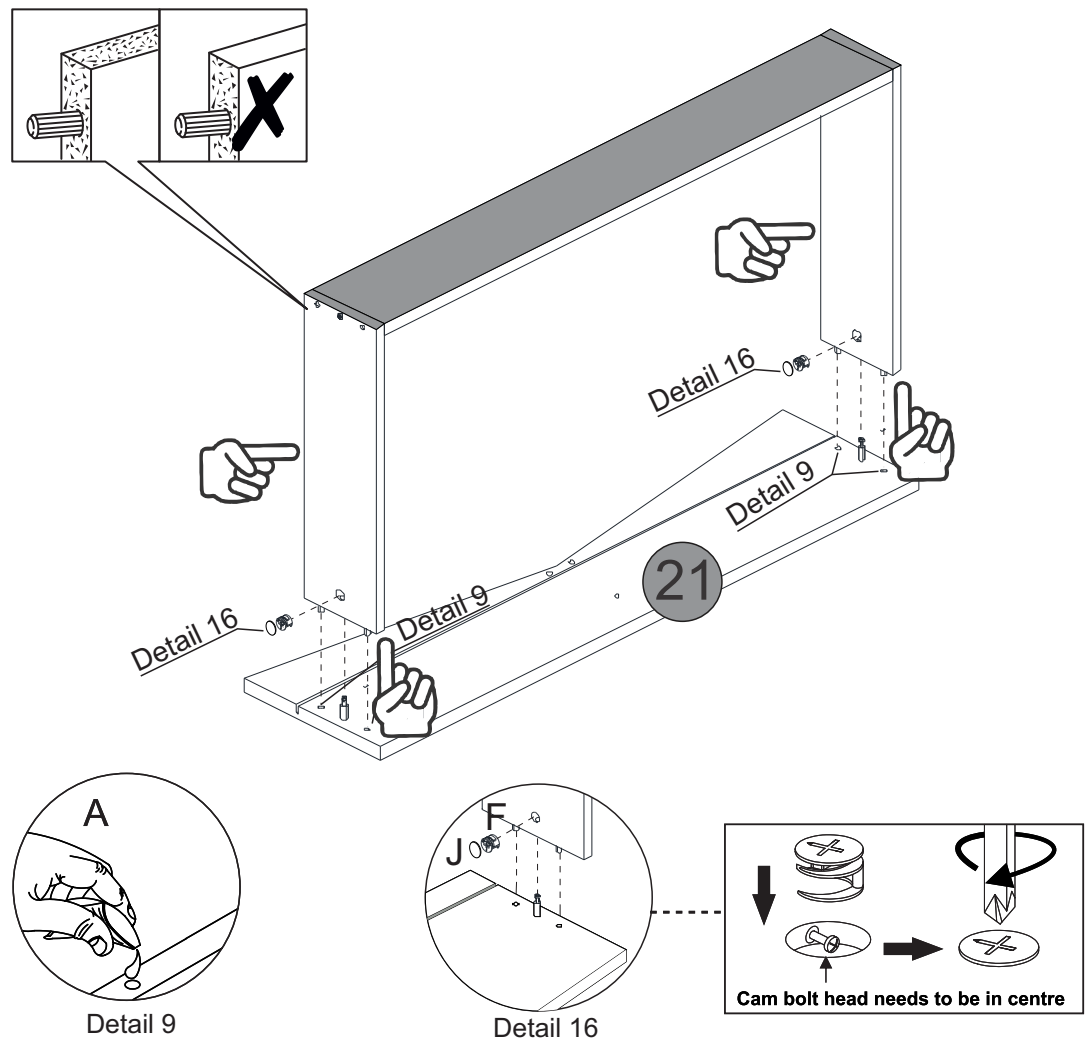


STEP 31


PARTS REQUIRED

20- DRAWER BASE(LARGE) x1

23- DRAWER BASE SUPPORT x1



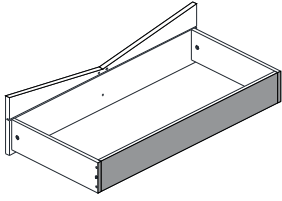


HARDWARE REQUIRED


A  01

E  08





TOOLS REQUIRED

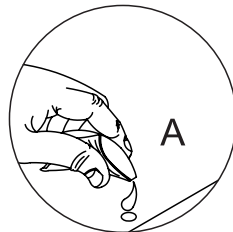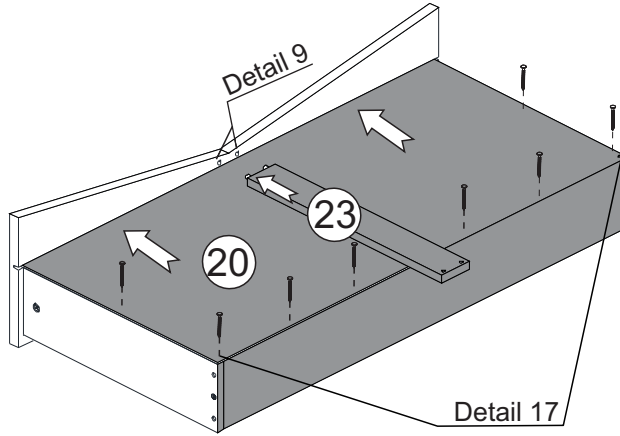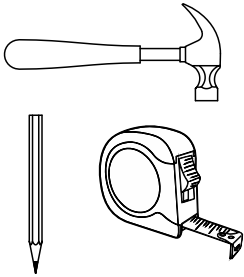

Detail 9

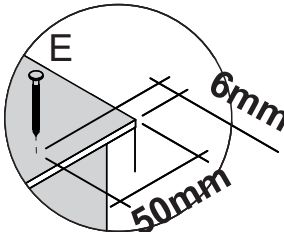


Detail 17

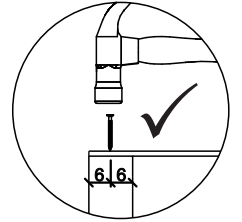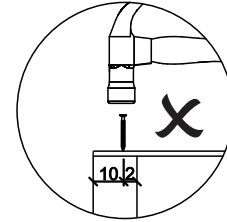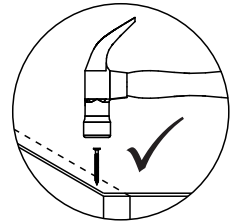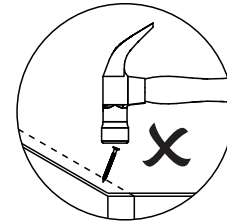

STEP 32


PARTS REQUIRED

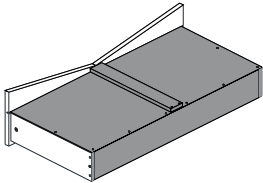

HARDWARE REQUIRED





C LEFT  01

C RIGHT  01


I  04
Ø3,0 x 14mm

P  02
Ø3,5 x 25mm

TOOLS REQUIRED

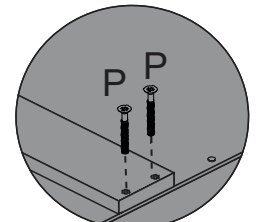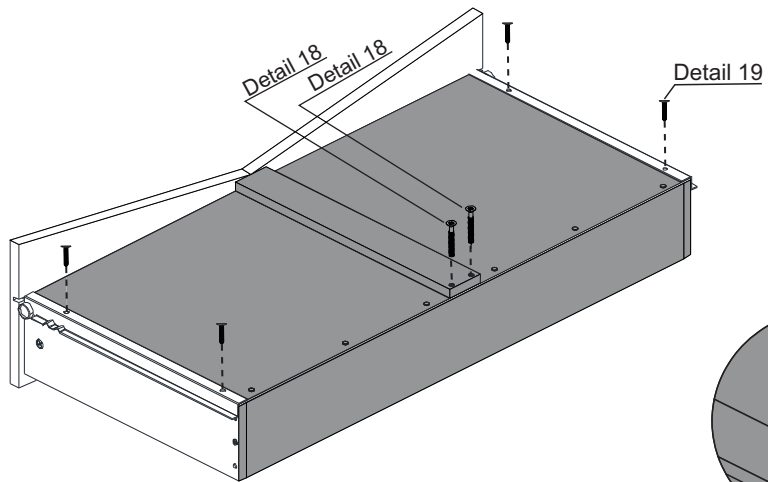


Detail 18

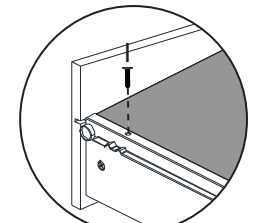



Detail 19

STEP 33




PARTS REQUIRED

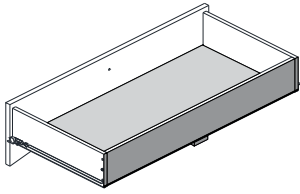

HARDWARE REQUIRED



TOOLS REQUIRED

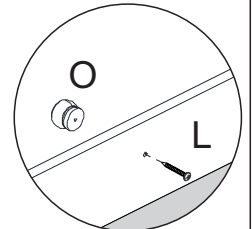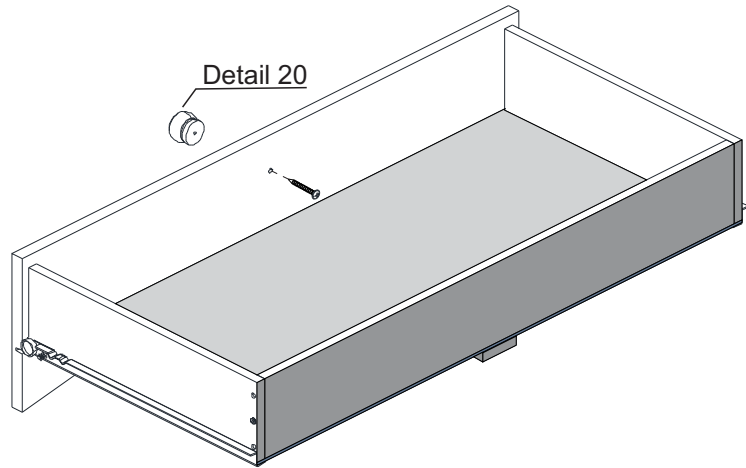

Detail 20


STEP 34

PARTS REQUIRED




22- DRAWER SIDES(LARGE) x2

12- DRAWER BACK(LARGE) x1

HARDWARE REQUIRED



TOOLS REQUIRED

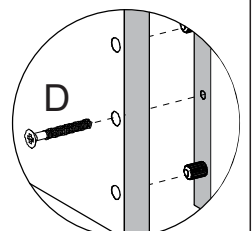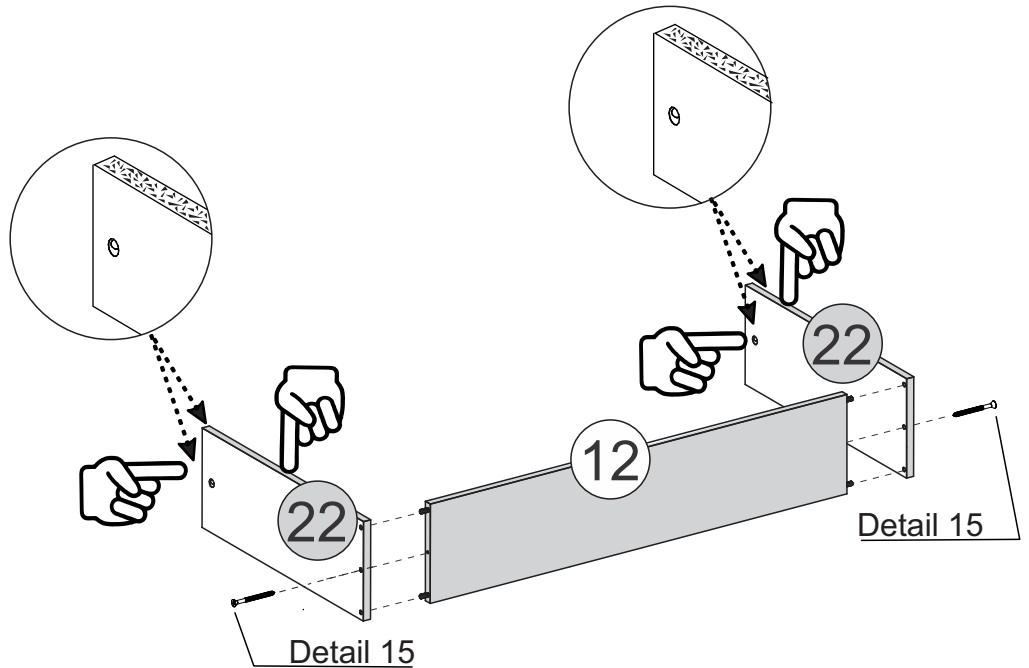


Detail 15

STEP 35

PARTS REQUIRED

15 - DRAWER FRONT PINE(LARGE) x1

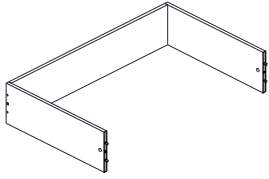





HARDWARE REQUIRED

A 01


F Ø12mm 02

J 02


TOOLS REQUIRED

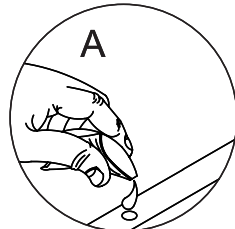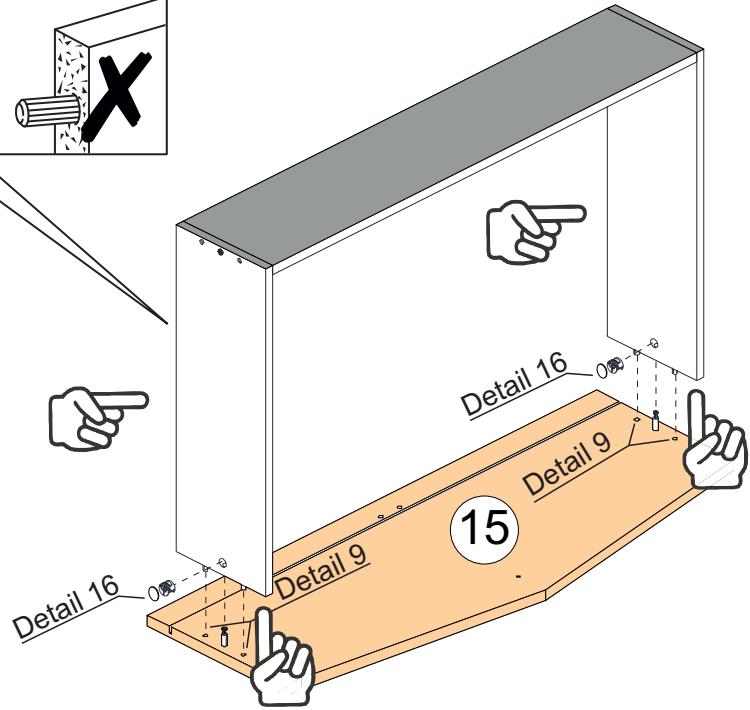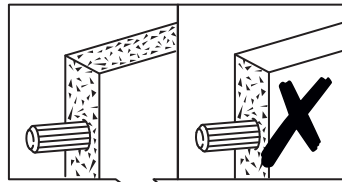

Detail 9

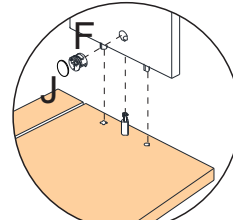

Detail 16

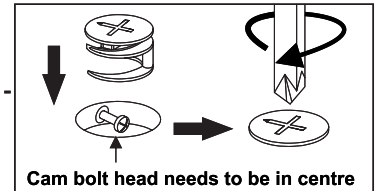


STEP 36

PARTS REQUIRED

20- DRAWER BASE(LARGE) x1

23- DRAWER BASE SUPPORT x1



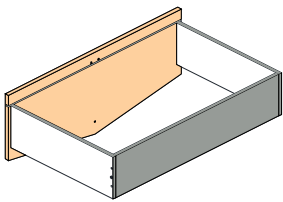


HARDWARE REQUIRED


A 01

E 08



TOOLS REQUIRED

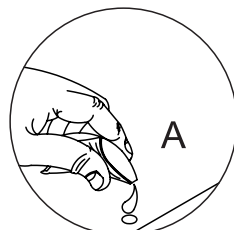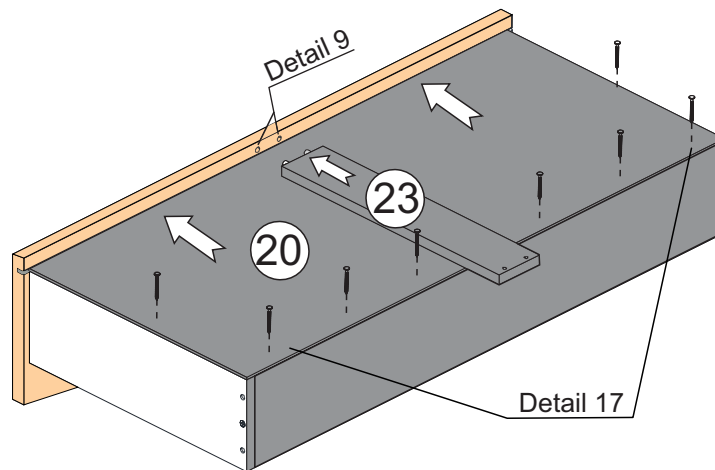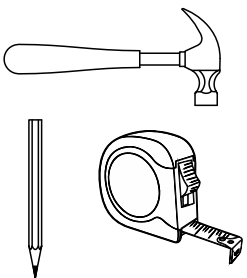

Detail 9

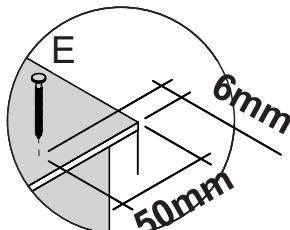


Detail 17

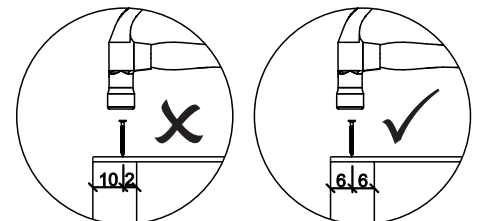
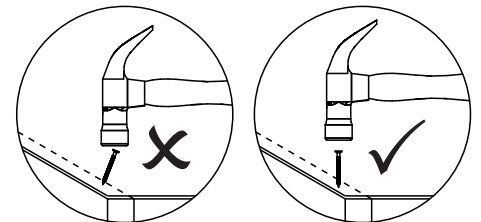


STEP 37




PARTS REQUIRED

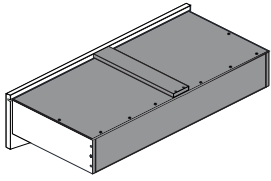


HARDWARE REQUIRED



TOOLS REQUIRED

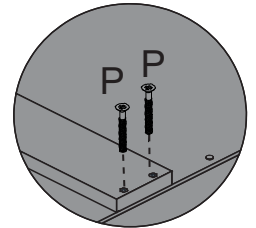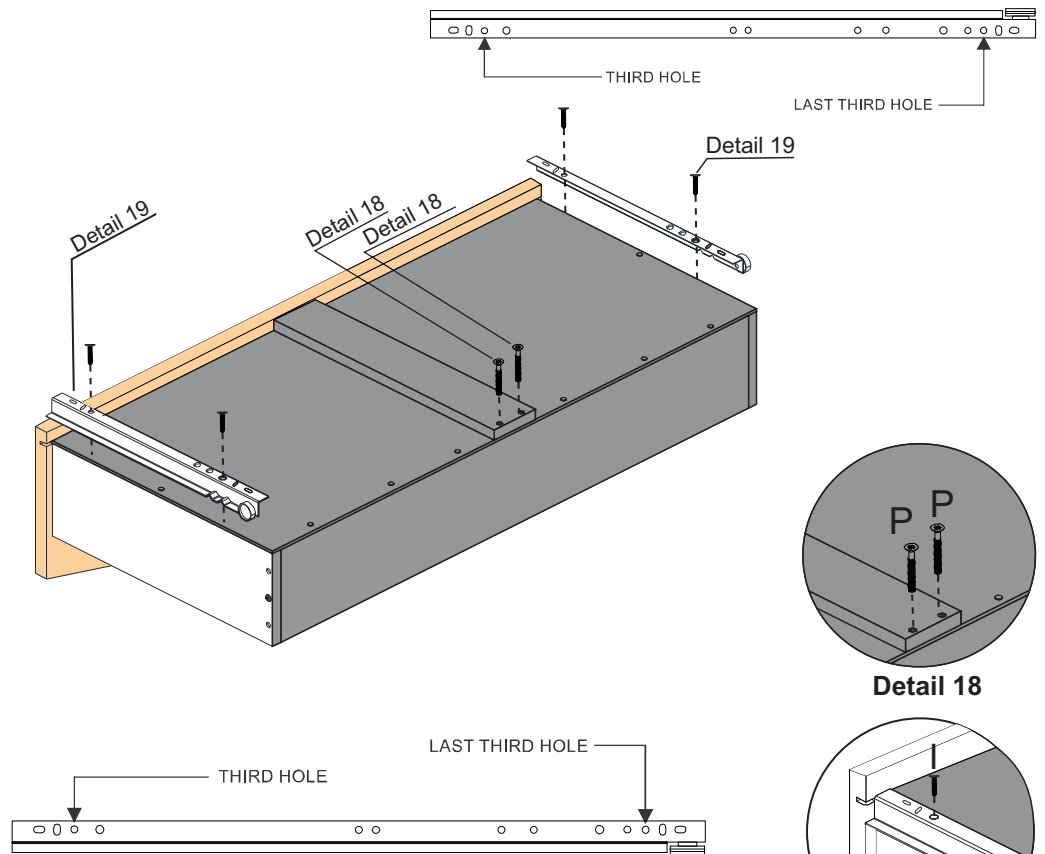


Detail 18

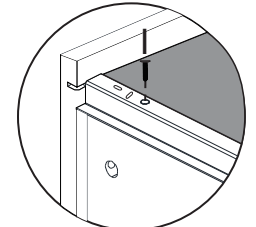



Detail 19

STEP 38




PARTS REQUIRED

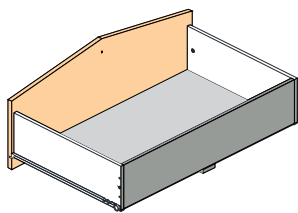

HARDWARE REQUIRED




TOOLS REQUIRED

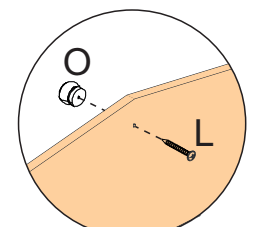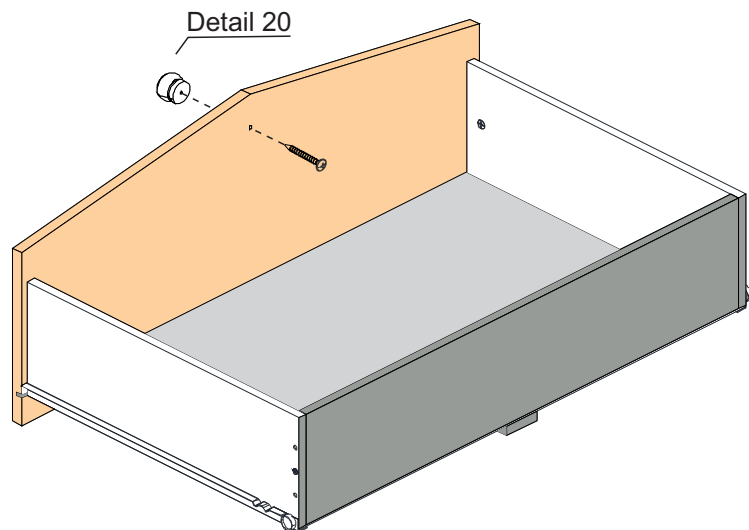


Detail 20

STEP 39

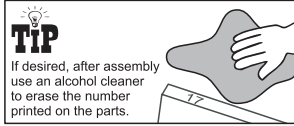


PARTS REQUIRED

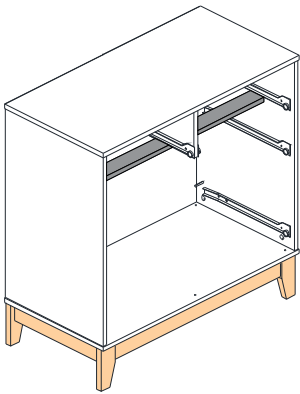


HARDWARE REQUIRED

TOOLS REQUIRED

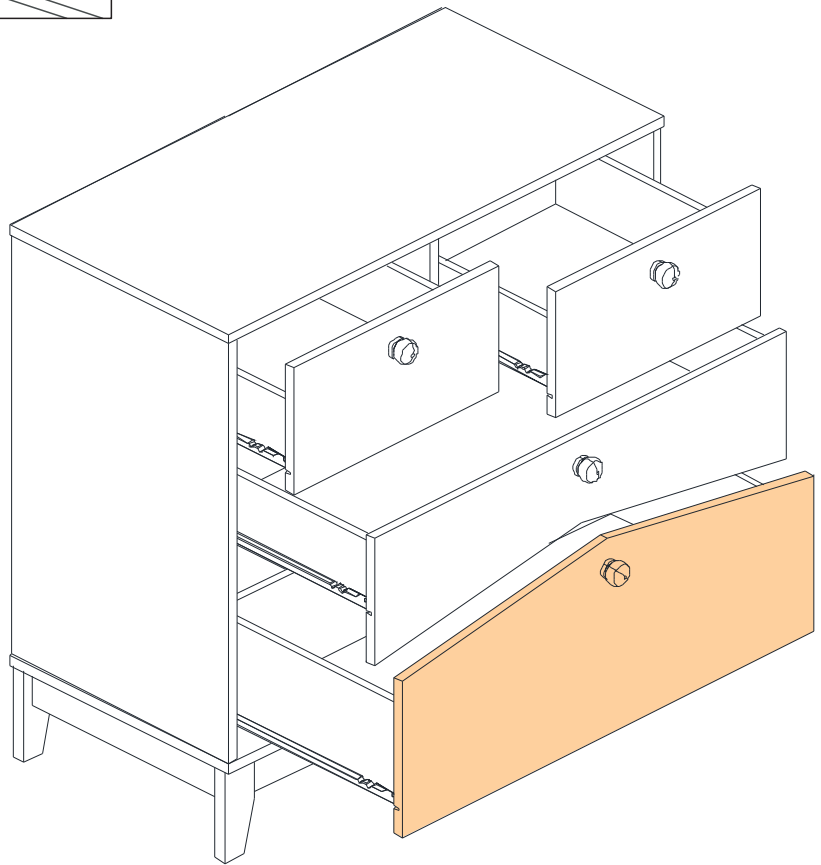


STEP 40




PARTS REQUIRED

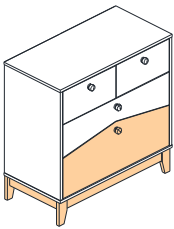

HARDWARE REQUIRED



TOOLS REQUIRED

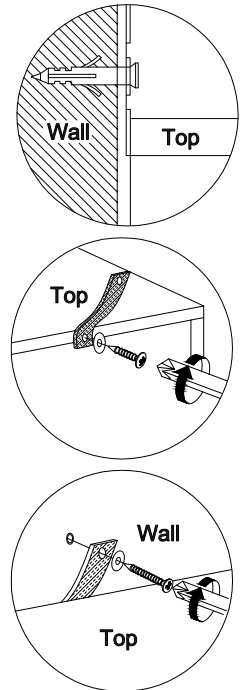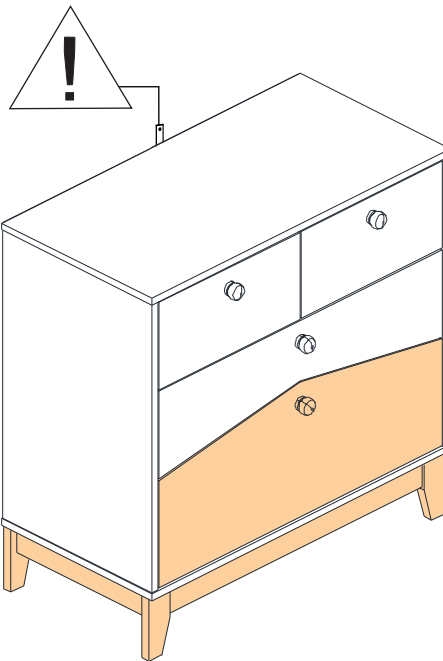


WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

CODY 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS WHITE/PINE EFFECT

XXXXXX

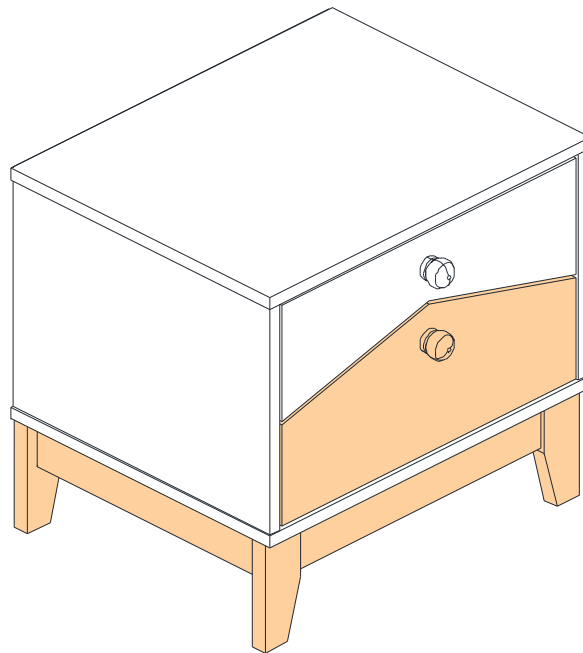

IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.


- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.



* Use of power tools to assemble this product will invalidate any claim and could damage this product making it unsafe!!!
* Please assemble on a clean soft surface to avoid damage.



* Please check contents and read the instructions before commencing assembly.
* Assemble this product following the enclosed instructions carefully.
* Please take care to avoid damaging parts during assembly.

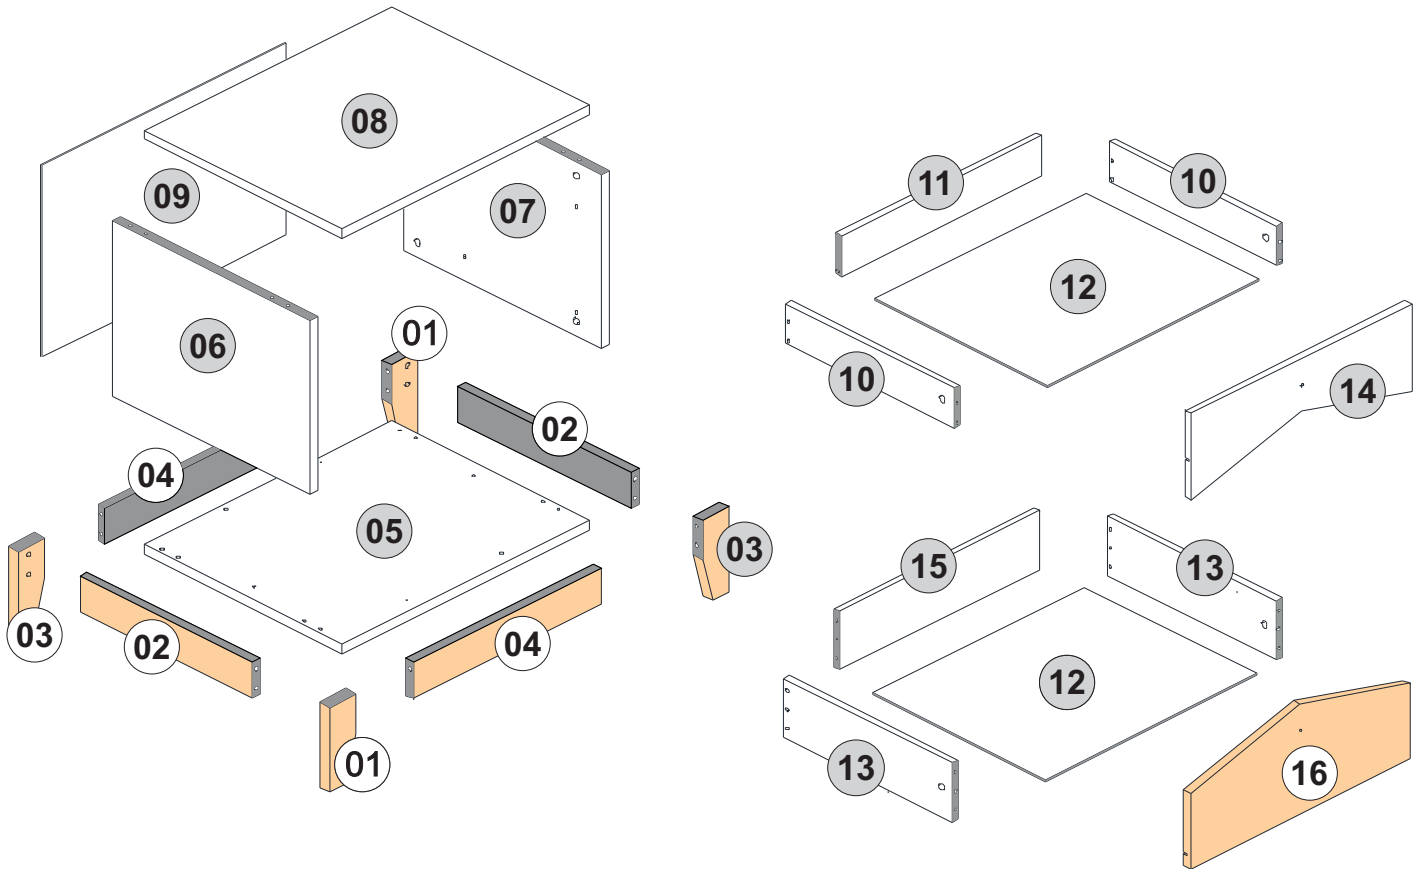









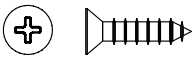





PART LIST

Please Note:

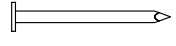
The below parts have all been stamped with the part number/color to help identify them during assembly.

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-103-090-DV1-01	Left Leg	2	1/1
2	S100-103-090-DV1-02	Leg Support Left & Right	2	1/1
3	S100-103-090-DV1-03	Right Leg	2	1/1
4	S100-103-090-DV1-04	Leg Support Front & Back	2	1/1
5	S100-103-090-DV1-05	Base Panel	1	1/1
6	S100-103-090-DV1-06	Left Side Panel	1	1/1
7	S100-103-090-DV1-07	Right Side panel	1	1/1
8	S100-103-090-DV1-08	Top Panel	1	1/1
9	S100-103-090-DV1-09	Back Panel	1	1/1
10	S100-103-090-DV1-10	Drawer Side (Small)	2	1/1
11	S100-103-090-DV1-11	Drawer Back (Small)	1	1/1
12	S100-103-090-DV1-12	Drawer Base	2	1/1
13	S100-103-090-DV1-13	Drawer Side (Large)	2	1/1
14	S100-103-090-DV1-14	Drawer Front White (Small)	1	1/1
15	S100-103-090-DV1-15	Drawer Back (Large)	1	1/1
16	S100-103-090-DV1-16	Drawer Front Pine (Large)	1	1/1



FITTINGS LIST
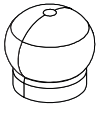
<p>A</p>  <p style="text-align: center;">Glue (2x)</p>	<p>B</p>  <p style="text-align: center;">2/+ Dowel Ø6,0 x 30mm (28x)</p>	<p>C</p>  <p style="text-align: center;">Slide 350mm (2x)</p>	<p>D</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø4,0 x 40mm (8x)</p>
<p>E</p>  <p style="text-align: center;">2/+ Nail 10 x 10 (22x)</p>	<p>F</p>  <p style="text-align: center;">1/+ Cam Nut 12mm (4x)</p>	<p>G</p>  <p style="text-align: center;">1/+ Cam Bolt (20x)</p>	<p>H</p>  <p style="text-align: center;">1/+ Screw Ø 6x8 (8x)</p>
<p>I</p>  <p style="text-align: center;">1/+ Flat Head Screw Ø3,0 x 14mm (8x)</p>	<p>J</p>  <p style="text-align: center;">2/+ Hole Plugs (4x)</p>	<p>K</p>  <p style="text-align: center;">1/+ Flan Head Screw Ø4,0 x 30mm (2x)</p>	<p>L</p>  <p style="text-align: center;">1/+ Cam Nut 15mm (16x)</p>
<p>M</p>  <p style="text-align: center;">2/+ Dowel Ø8,0 x 30mm (8x)</p>	<p>N</p>  <p style="text-align: center;">Handle(2x)</p>		

TOOLS REQUIRED

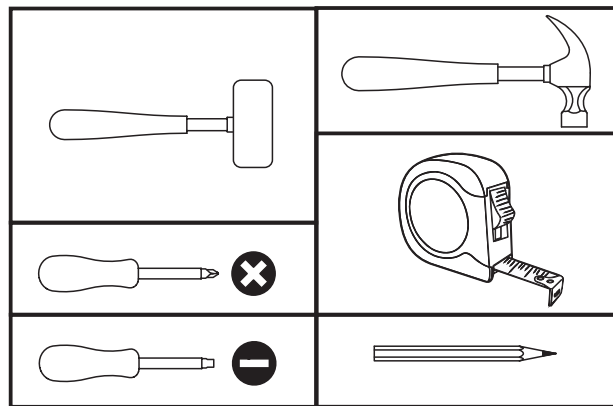


TIPS FOR FITTINGS CAM-LOCKS

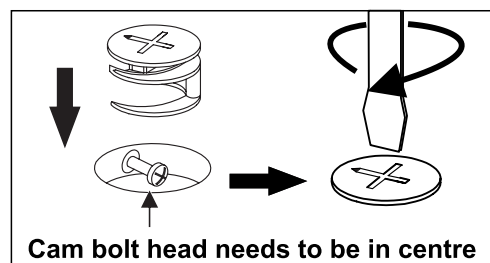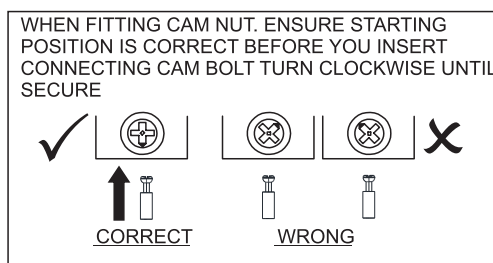

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

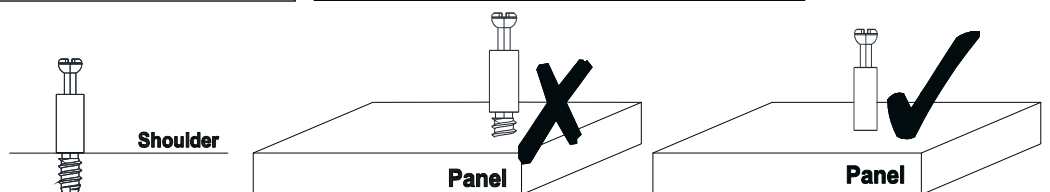

STEP 1

PARTS REQUIRED




1 - LEFT LEG x2

3 - RIGHT LEG x2

HARDWARE REQUIRED

G  08

TOOLS REQUIRED

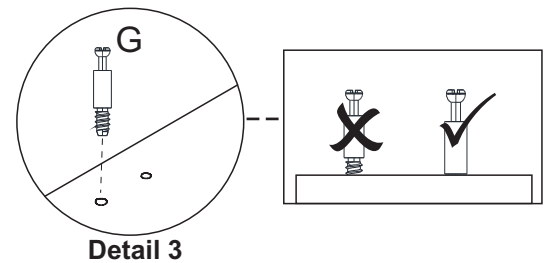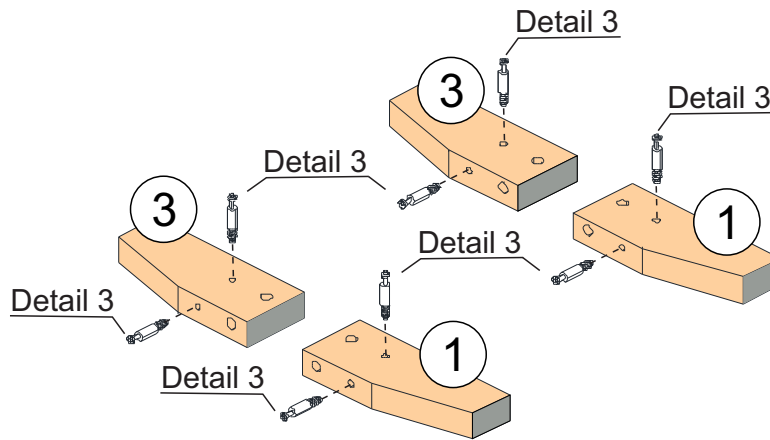

STEP 2


PARTS REQUIRED


2- LEG SUPPORT LEFT&RIGHT x2

4- LEG SUPPORT FRONT&BACK x2




HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

M  Ø8 x 30mm 08

TOOLS REQUIRED

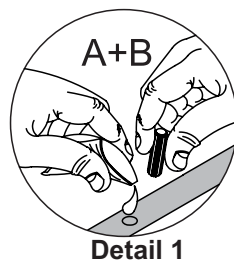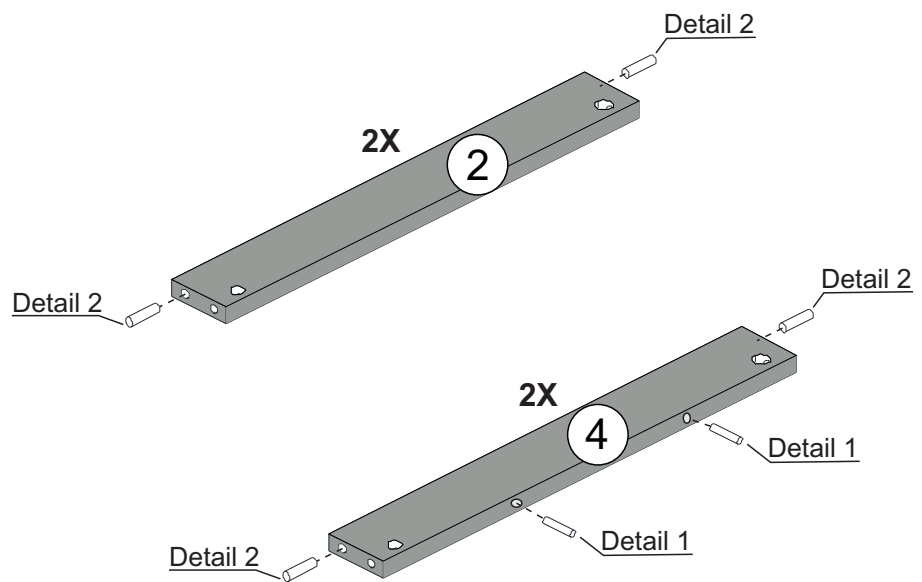

STEP 3




PARTS REQUIRED

8 - TOP PANEL x1

HARDWARE REQUIRED

G  04

TOOLS REQUIRED

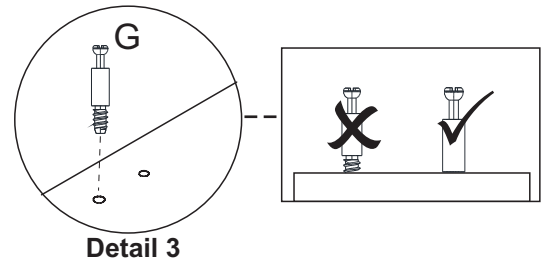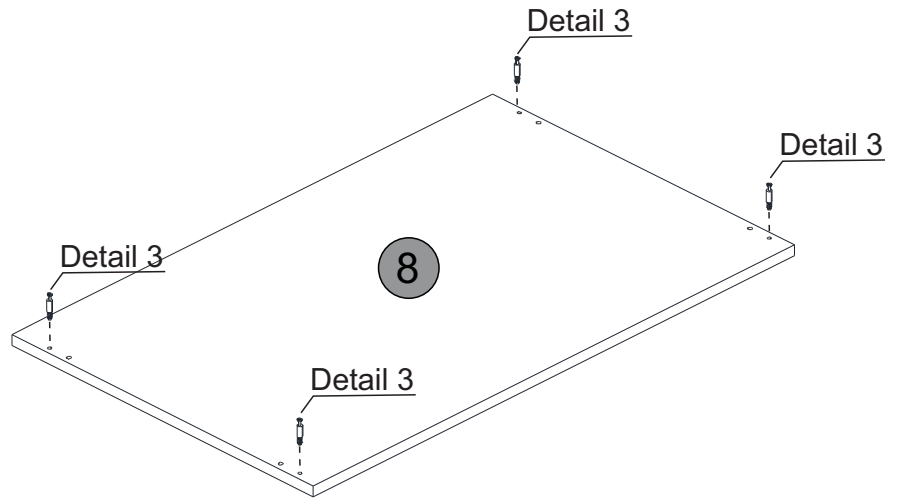


STEP 4

PARTS REQUIRED




7- RIGHT SIDE PANEL x1

HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

TOOLS REQUIRED

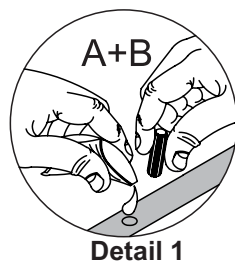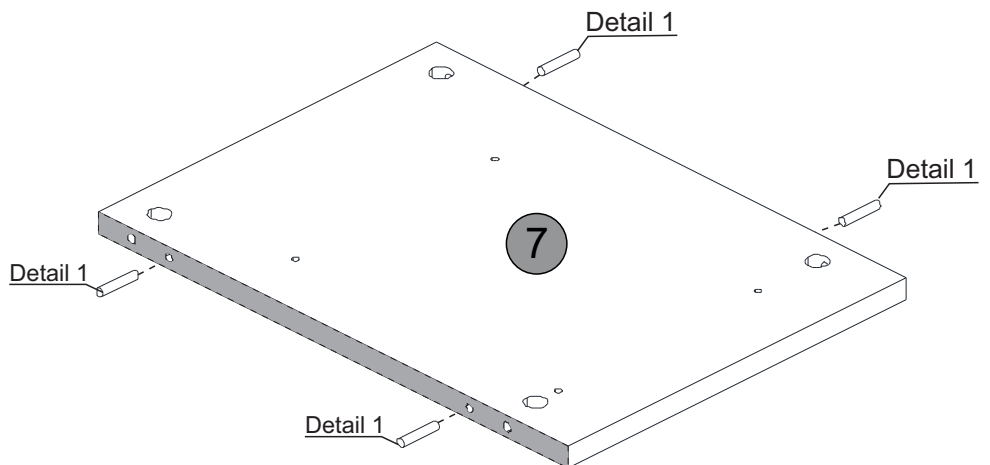

STEP 5

PARTS REQUIRED




7- RIGHT SIDE PANEL x1

HARDWARE REQUIRED

C  02
350mm

H  04
Ø6 x 8mm

TOOLS REQUIRED

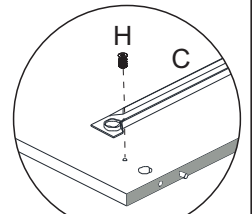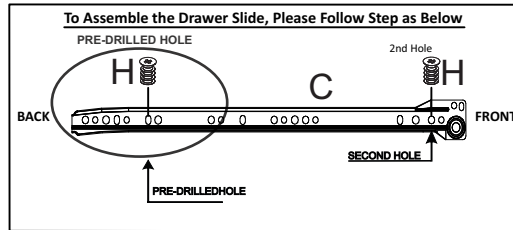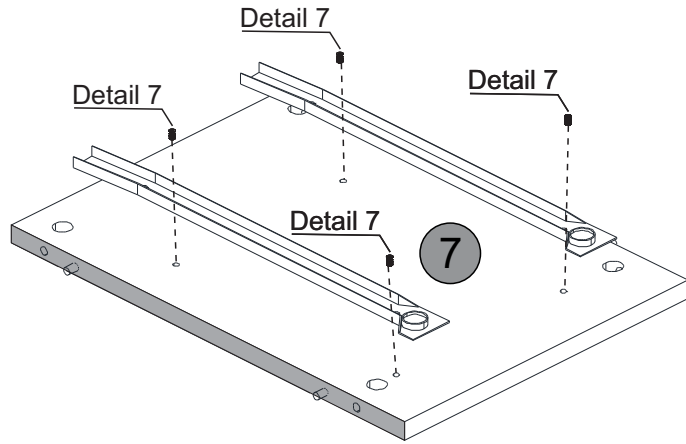


Detail 7


STEP 6

PARTS REQUIRED




6- LEFT SIDE PANEL x1

HARDWARE REQUIRED

A  01
Glue

B  04
Ø6 x 30mm

TOOLS REQUIRED

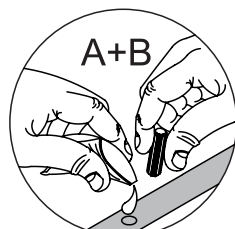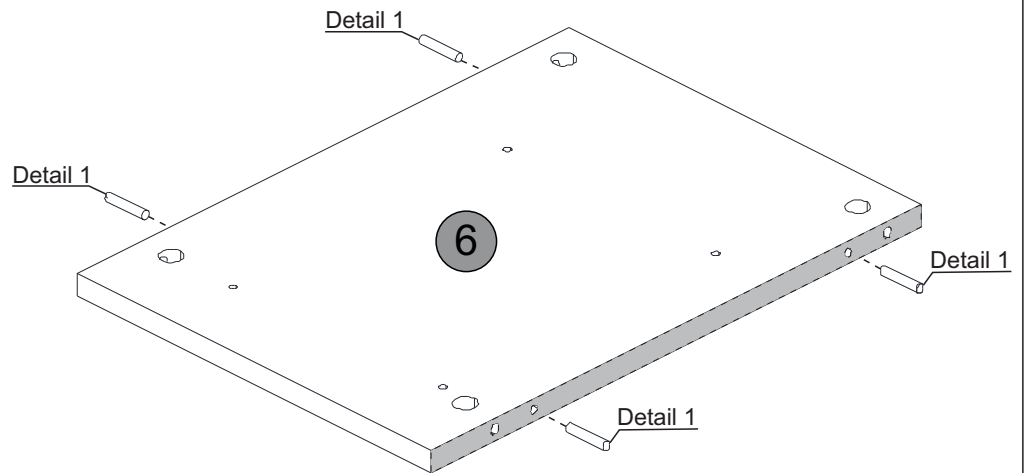


Detail 1

STEP 7

PARTS REQUIRED





6- Left Side Panel x1

HARDWARE REQUIRED

C  02
350mm

H  04
Ø6 x 8mm

TOOLS REQUIRED

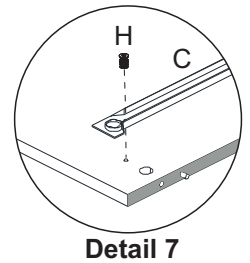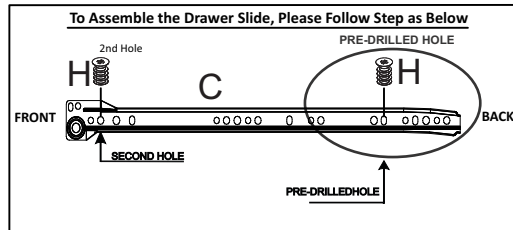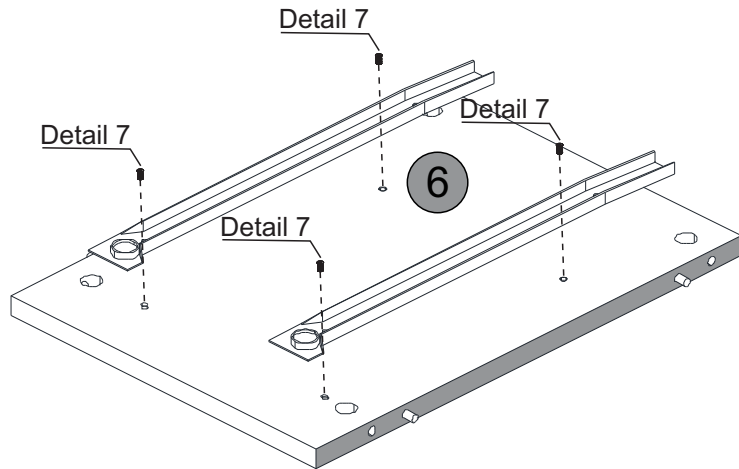

STEP 8


PARTS REQUIRED

1- LEFT LEG x2

3- LEG RIGHT x2






4- LEG SUPPORT FRONT & BACK x2

HARDWARE REQUIRED

A  01
Glue

L  04


TOOLS REQUIRED

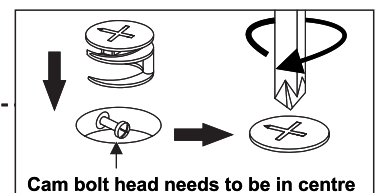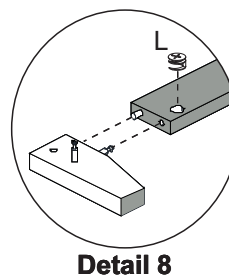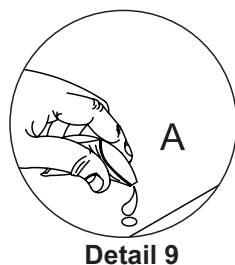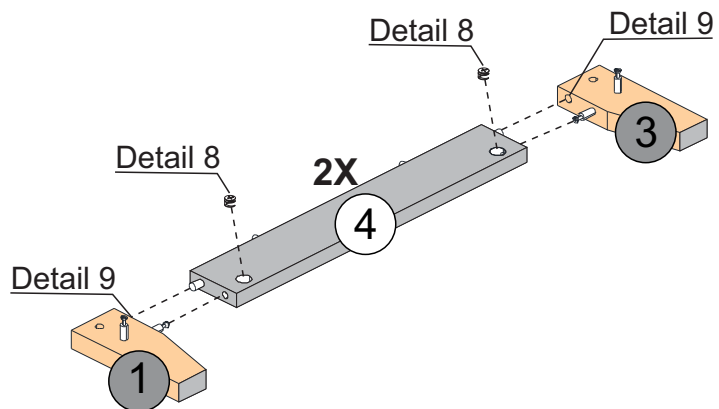

STEP 9

PARTS REQUIRED

2- SUPPORT LEFT & RIGHT x2



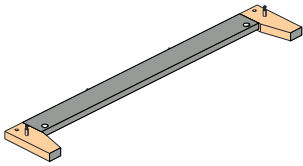


HARDWARE REQUIRED


A  01

L  02


TOOLS REQUIRED

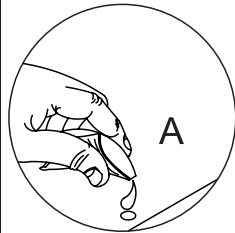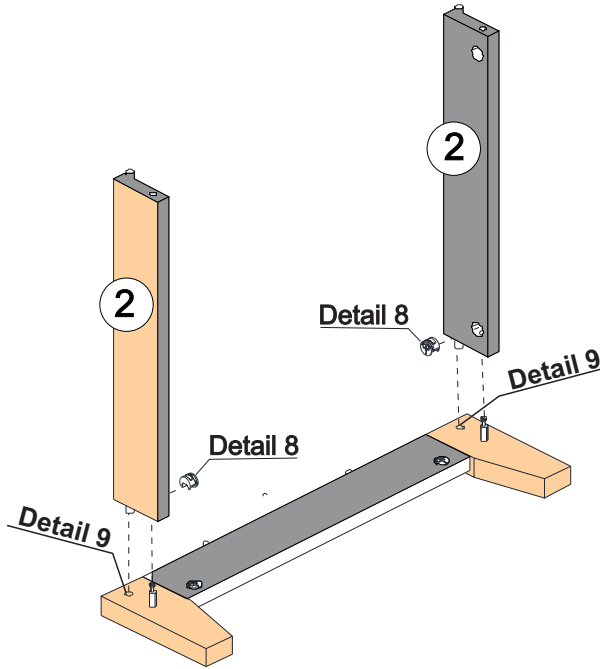

Detail 9

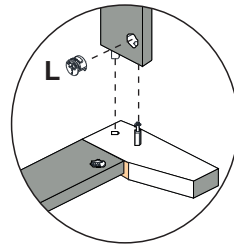


Detail 8

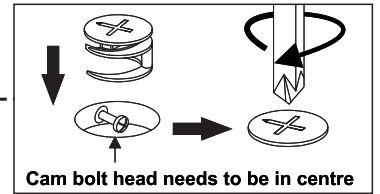


Cam bolt head needs to be in centre

STEP 10

PARTS REQUIRED



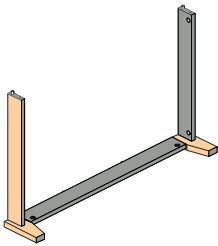


HARDWARE REQUIRED


A  01

L  02


TOOLS REQUIRED

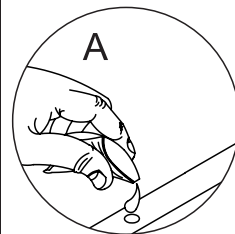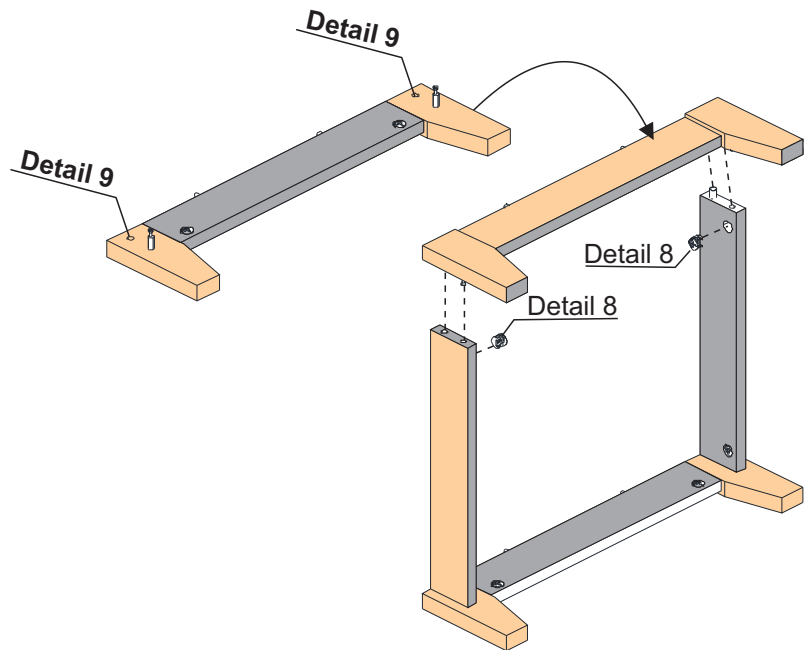

Detail 9

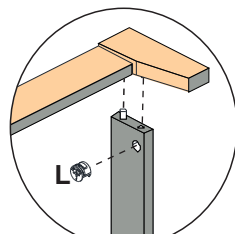

Detail 8

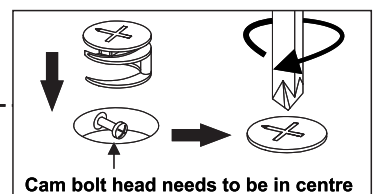


Cam bolt head needs to be in centre

STEP 11


PARTS REQUIRED

5- BASE PANEL x1



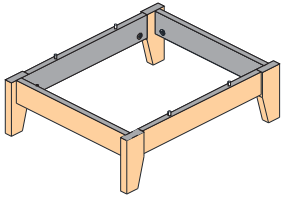


HARDWARE REQUIRED


A  01

D  Ø4,0 x 40mm 04

TOOLS REQUIRED

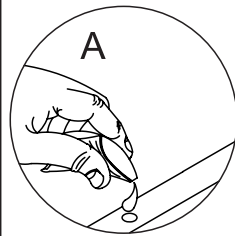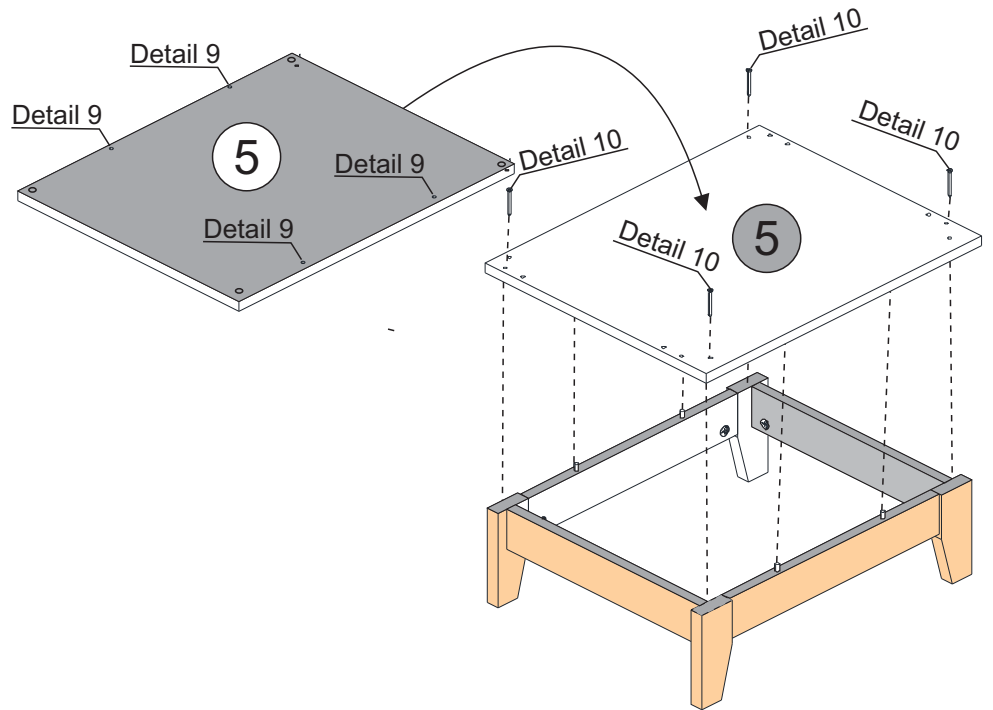


Detail 9

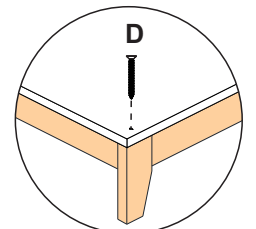

Detail 10

STEP 12




PARTS REQUIRED

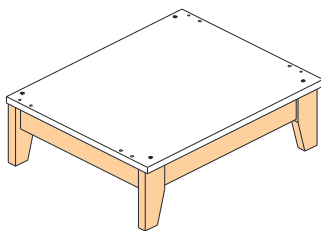


HARDWARE REQUIRED

G  04

TOOLS REQUIRED

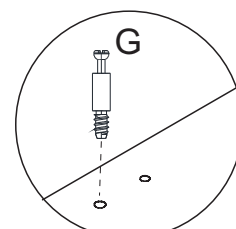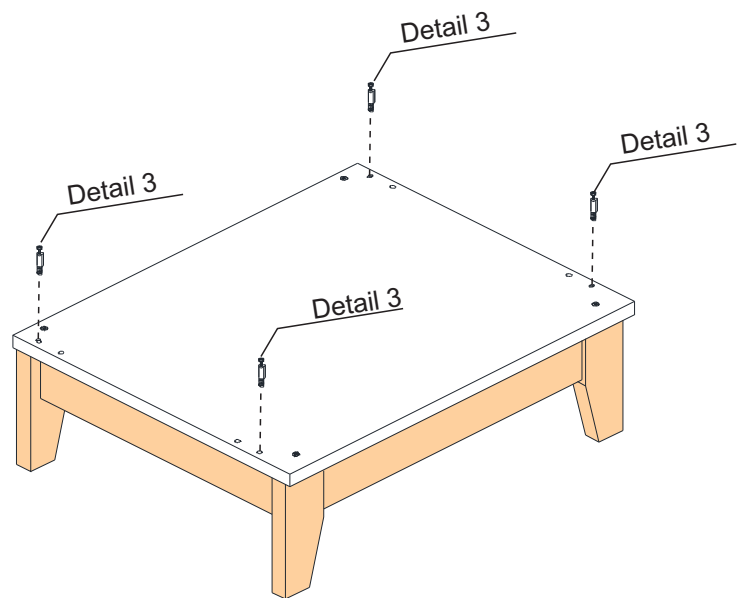

Detail 3

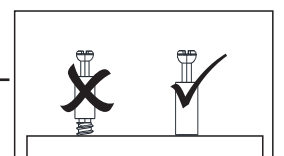


STEP 13

PARTS REQUIRED

6- LEFT SIDE PANEL x1

7- RIGHT SIDE PANEL x1



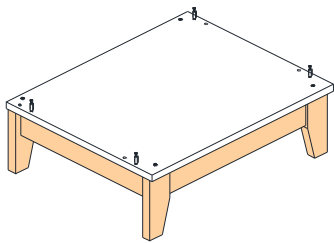


HARDWARE REQUIRED


A  01

L  04


TOOLS REQUIRED

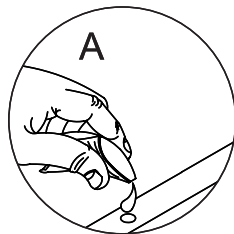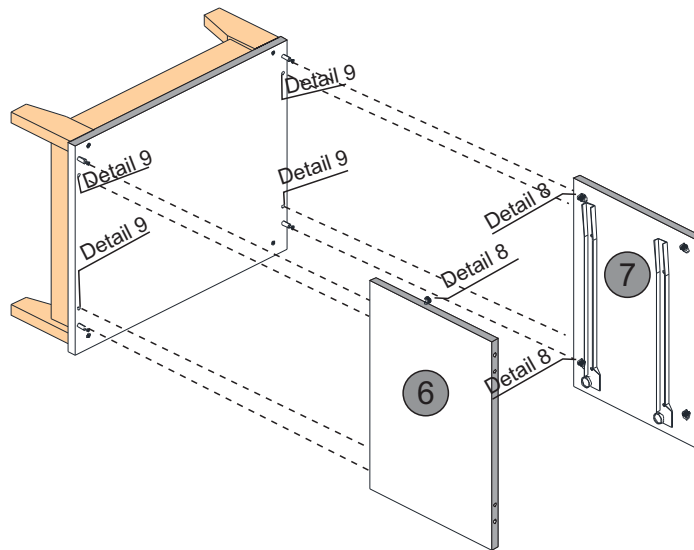

Detail 9

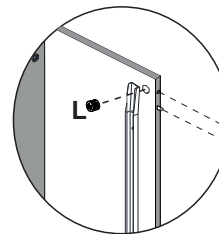

Detail 8

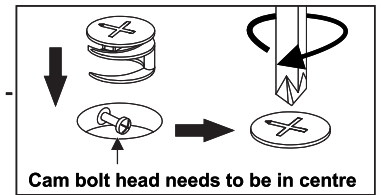


Cam bolt head needs to be in centre


STEP 14

PARTS REQUIRED

8 - TOP PANEL x1



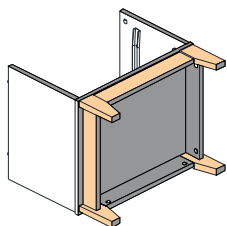


HARDWARE REQUIRED


A  01

L  04


TOOLS REQUIRED

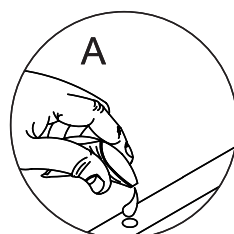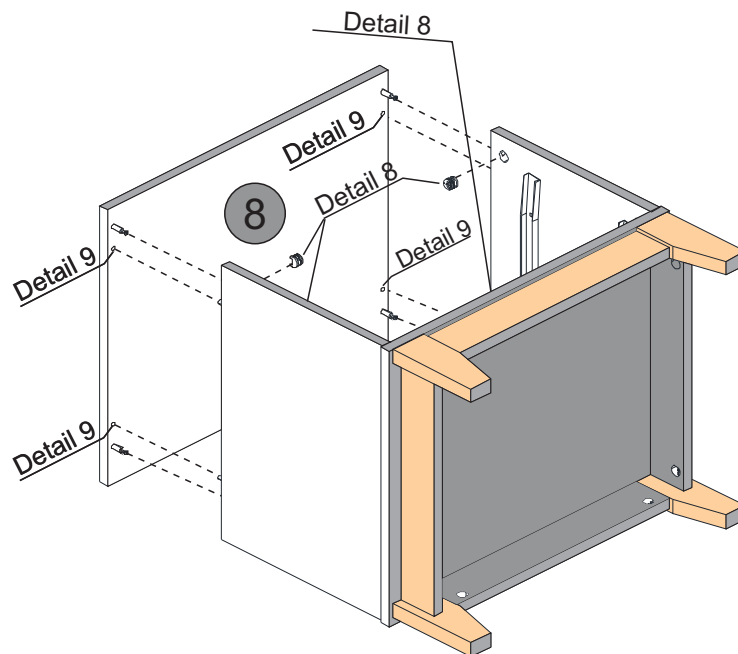

Detail 9

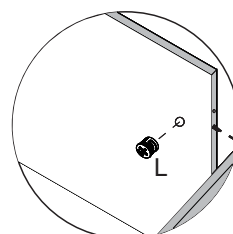

Detail 8

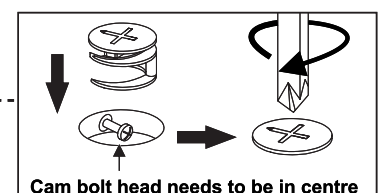


Cam bolt head needs to be in centre


STEP 15

PARTS REQUIRED



9 - BACK PANEL x1

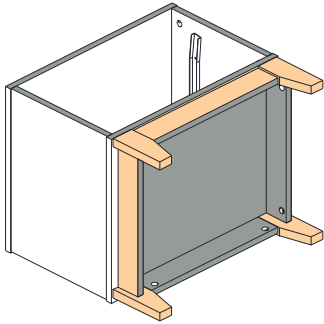


HARDWARE REQUIRED

E  12
10x10

TOOLS REQUIRED

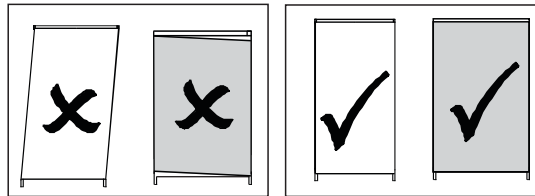

FOR YOUR REFERENCE
ORDER NUMBER
SHOULD BE HERE.

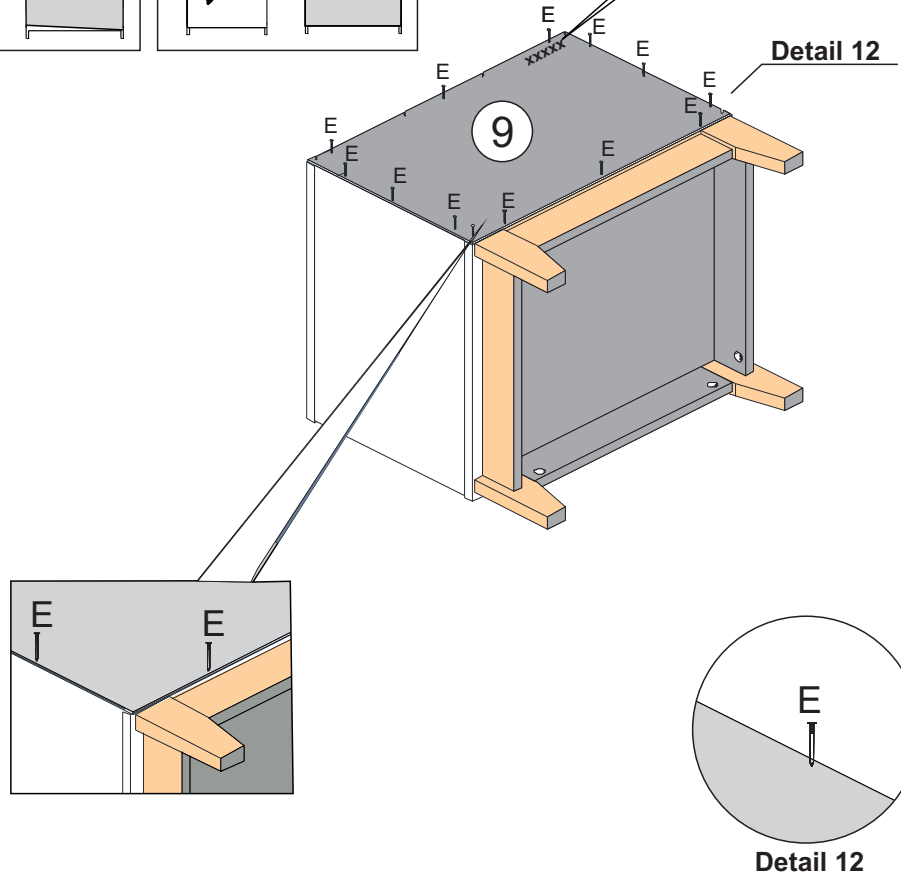

STEP 16

PARTS REQUIRED

13- DRAWER SIDE (LARGE) x2




15- DRAWER BACK (LARGE) x1

HARDWARE REQUIRED

A  01

B  08
Ø6 x 30mm

TOOLS REQUIRED

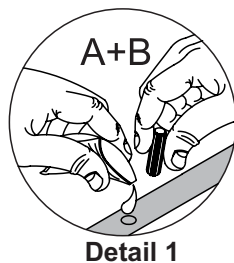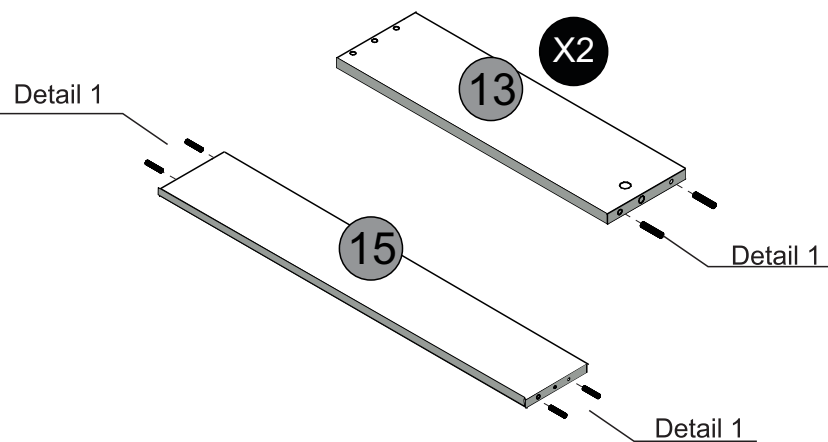

Detail 1

STEP 17




PARTS REQUIRED

16- DRAWER FRONT PINE x1

HARDWARE REQUIRED

G  02

TOOLS REQUIRED

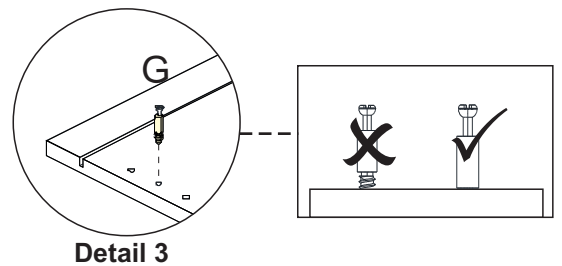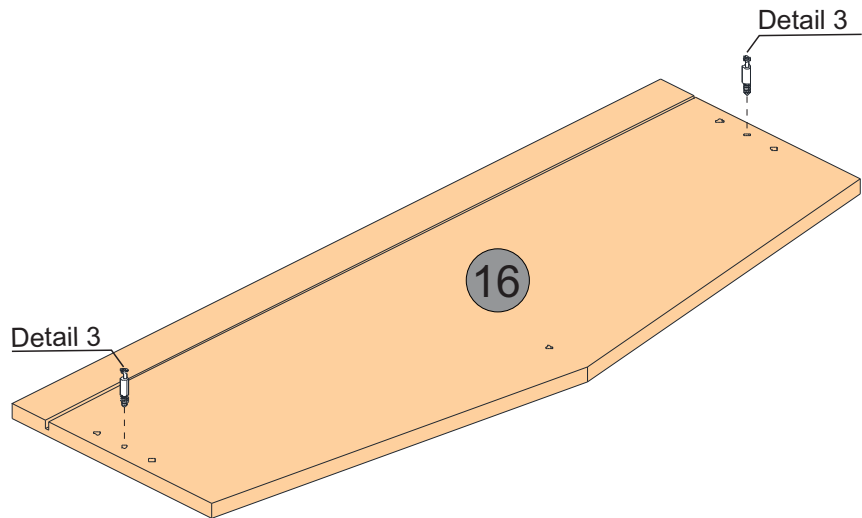

Detail 3


STEP 18

PARTS REQUIRED

13- DRAWER SIDE (LARGE) x2




15- DRAWER BACK (LARGE) x1

HARDWARE REQUIRED


D  02
Ø4,0 x 40mm

A  01

TOOLS REQUIRED

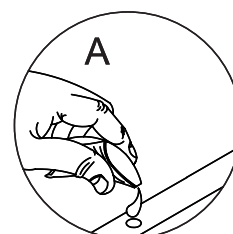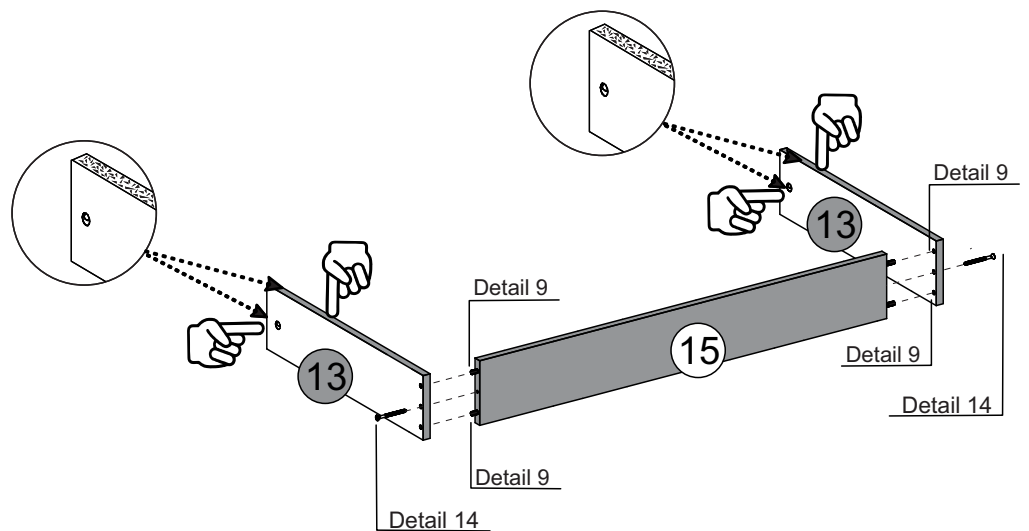

Detail 9

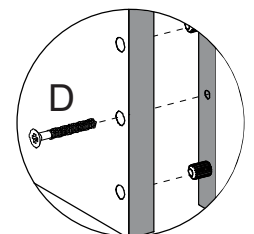


Detail 14




STEP 19

PARTS REQUIRED




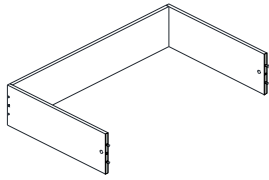
16 - DRAWER FRONT PINE x1




HARDWARE REQUIRED

- A  01
- F  Ø12mm 02
- J  02


TOOLS REQUIRED

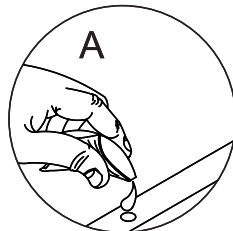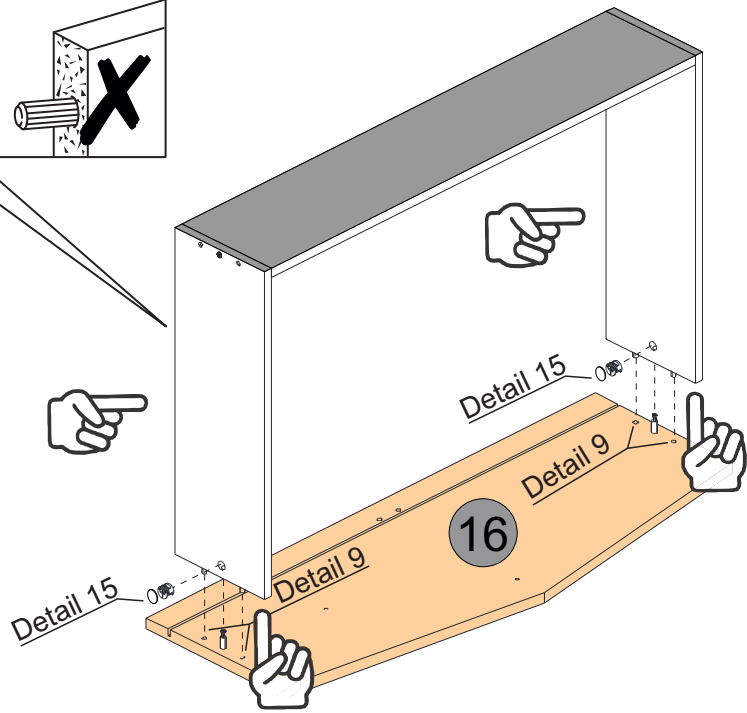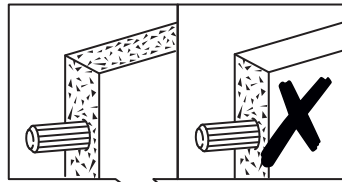

Detail 9

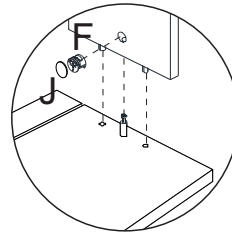

Detail 15

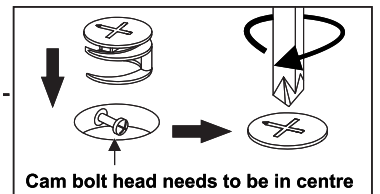


Cam bolt head needs to be in centre


STEP 20

PARTS REQUIRED




12 - DRAWER BASE x1

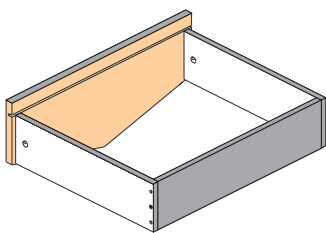





HARDWARE REQUIRED

E  05

TOOLS REQUIRED

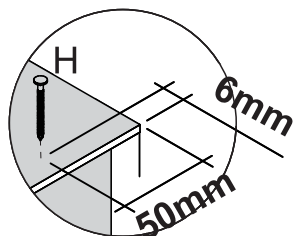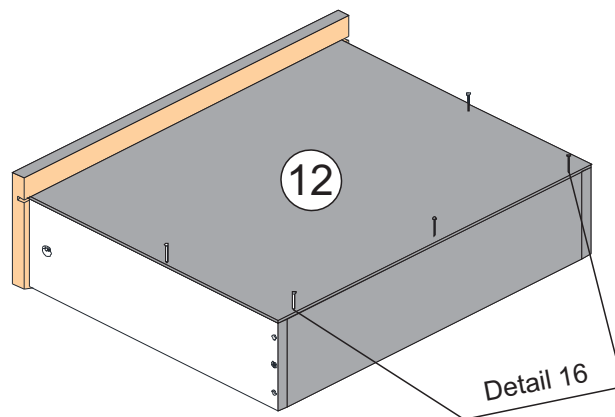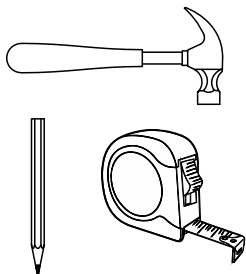


Detail 16

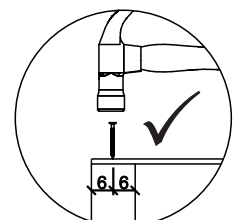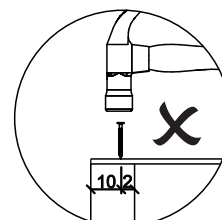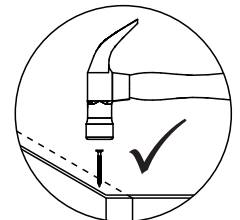
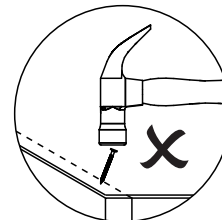


STEP 21





PARTS REQUIRED

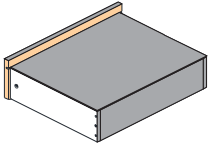

HARDWARE REQUIRED




TOOLS REQUIRED

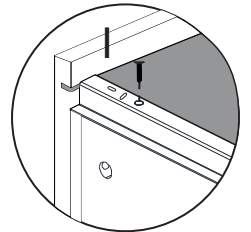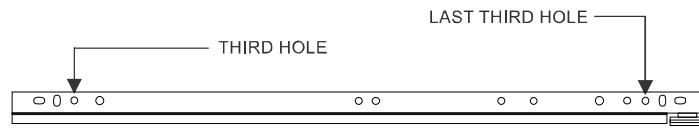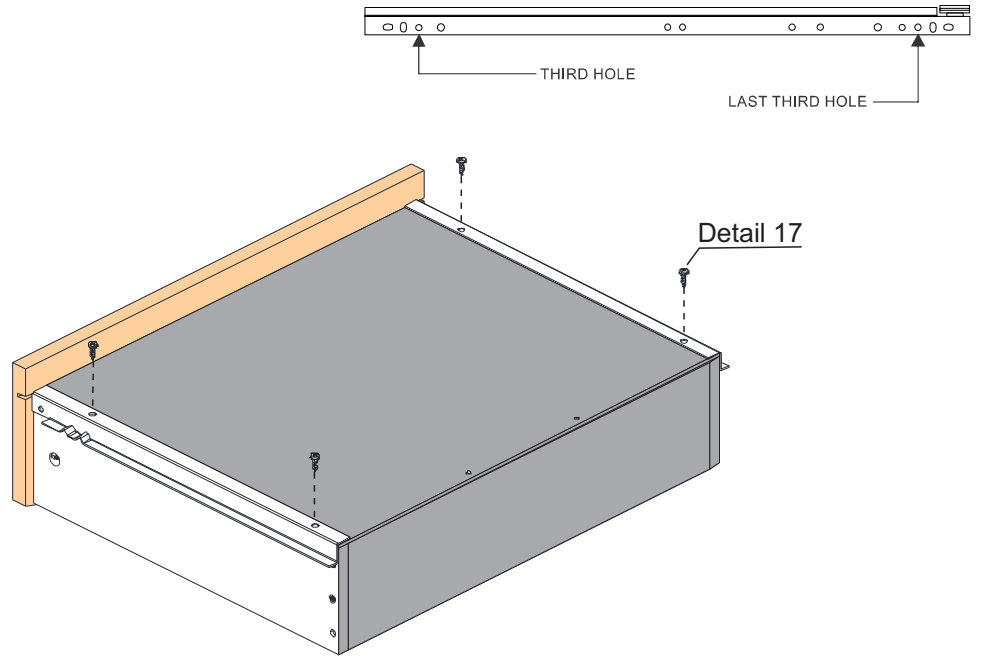



Detail 17

STEP 22




PARTS REQUIRED

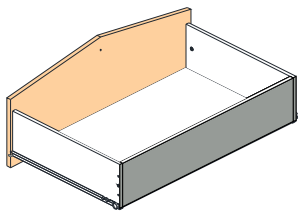

HARDWARE REQUIRED



TOOLS REQUIRED

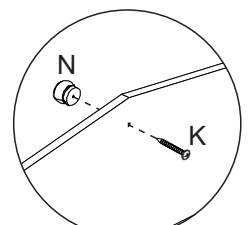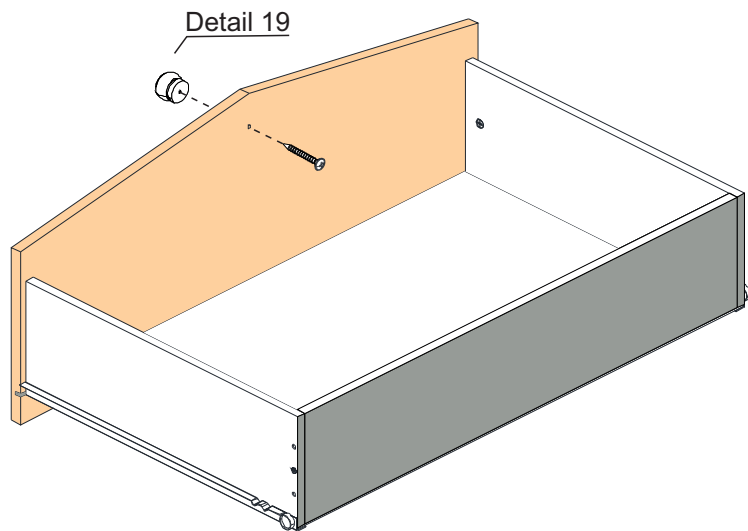

Detail 19

STEP 23


PARTS REQUIRED

10- DRAWER SIDE (SMALL) x2




11- DRAWER BACK (SMALL) x1

HARDWARE REQUIRED

A  01

B  Ø6 x 30mm 04

TOOLS REQUIRED

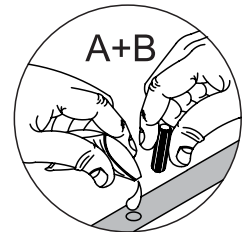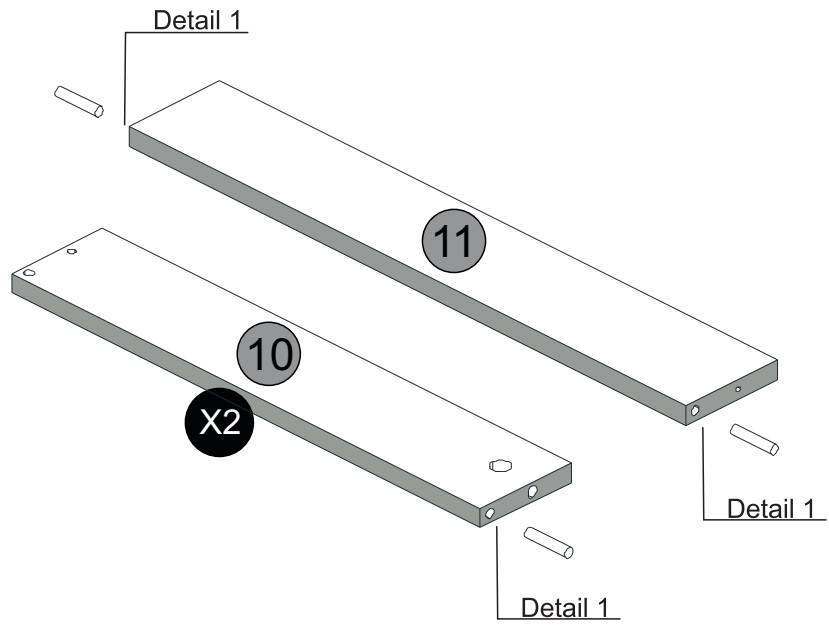

Detail 1

STEP 24




PARTS REQUIRED

14- DRAWER FRONT WHITE x1


HARDWARE REQUIRED

G  02

TOOLS REQUIRED

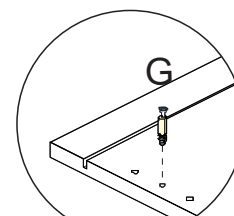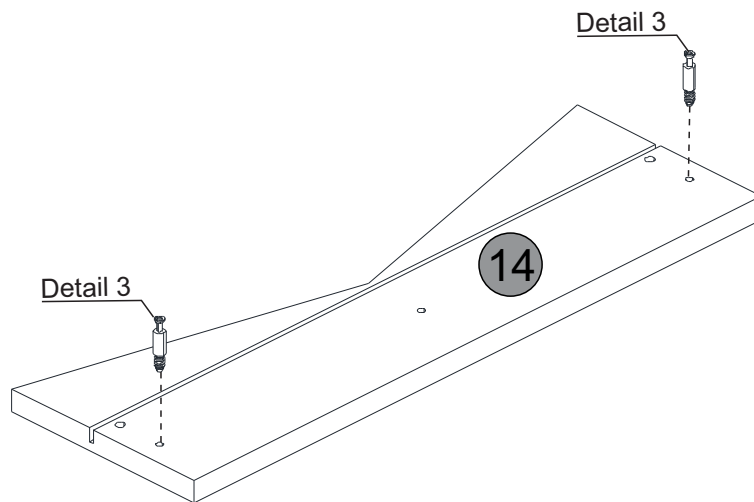

Detail 3

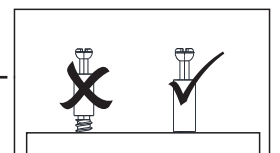

STEP 25


PARTS REQUIRED

10- DRAWER SIDE (SMALL) x2




11- DRAWER BACK (SMALL) x1

HARDWARE REQUIRED


A  01

D  Ø4,0 x 40mm 02

TOOLS REQUIRED

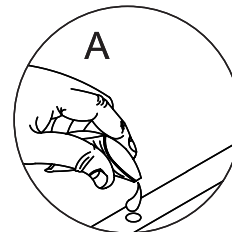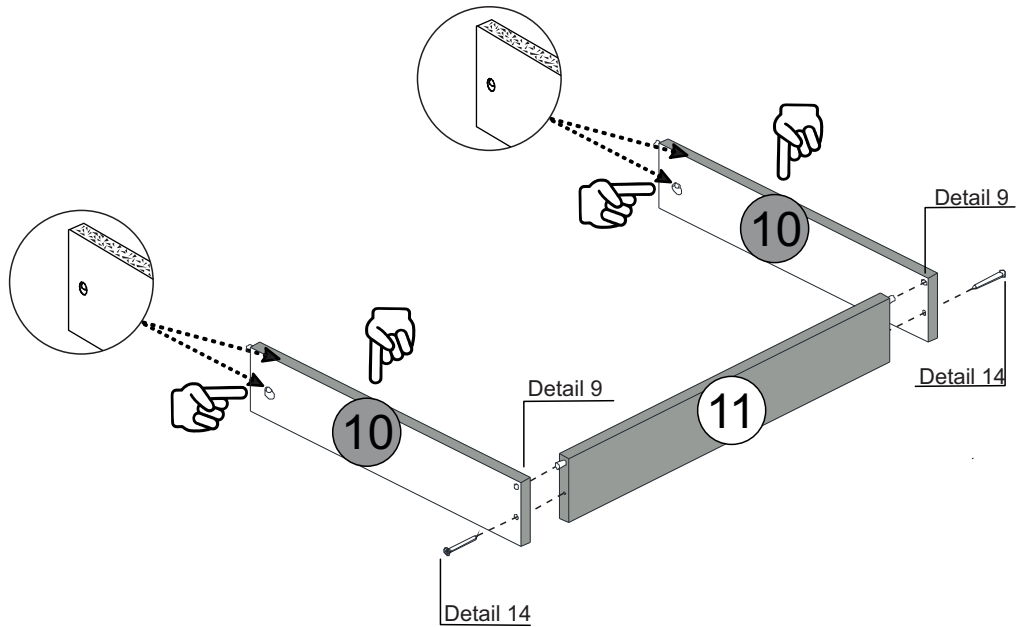

Detail 9

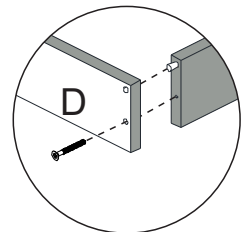


Detail 14


STEP 26

PARTS REQUIRED

16 - DRAWER FRONT PINE x1

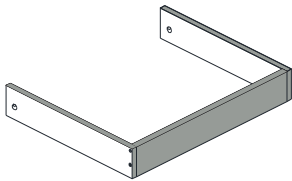




HARDWARE REQUIRED

A  01


F  Ø12mm 02

J  02


TOOLS REQUIRED

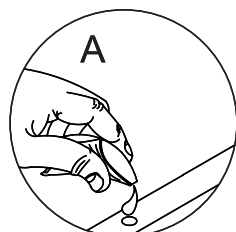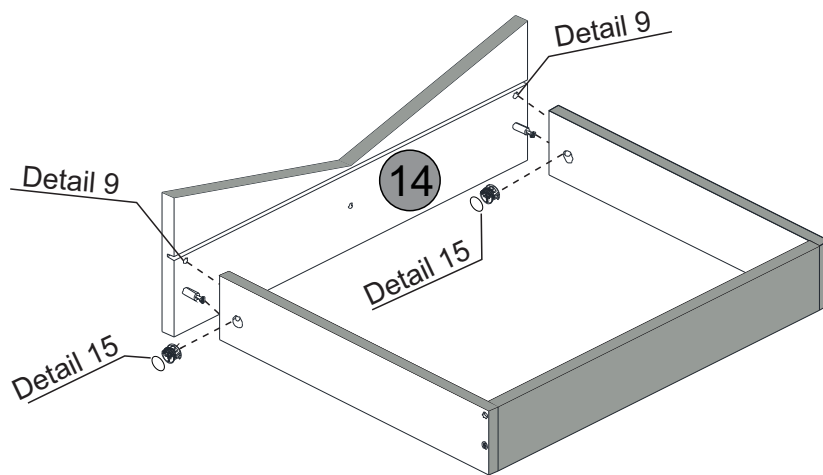

Detail 9

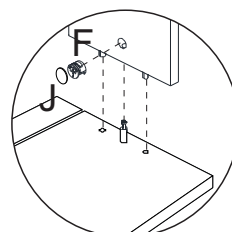


Detail 15

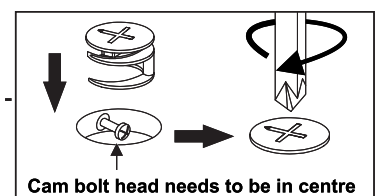


STEP 27

PARTS REQUIRED





12 - DRAWER BASE x1

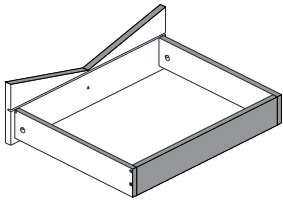

HARDWARE REQUIRED


E  05

TOOLS REQUIRED

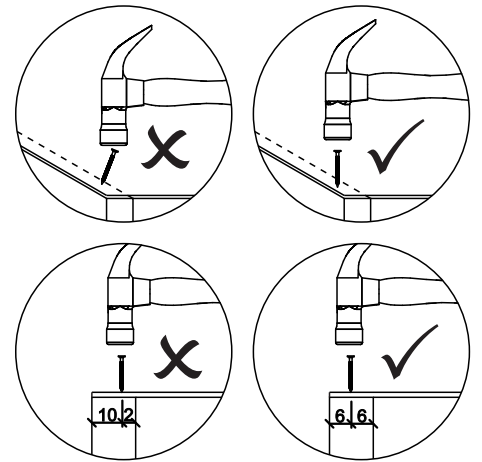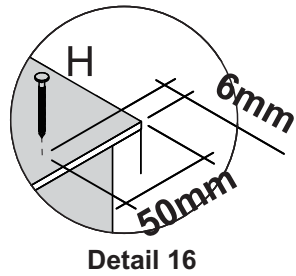
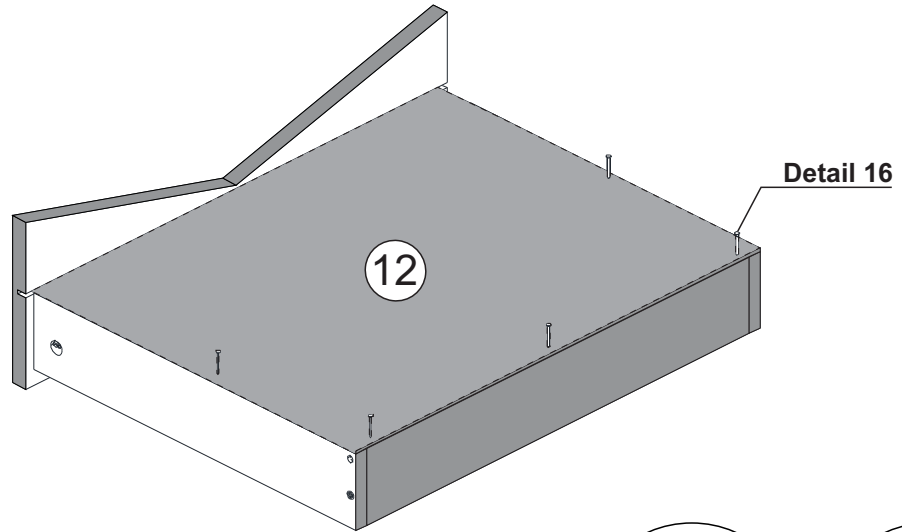
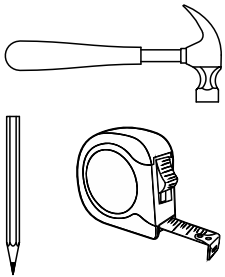


STEP 28




PARTS REQUIRED

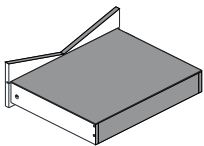

HARDWARE REQUIRED


C  LEFT 01
 C  RIGHT 01
 I  Ø3,0 x 14mm 04

TOOLS REQUIRED

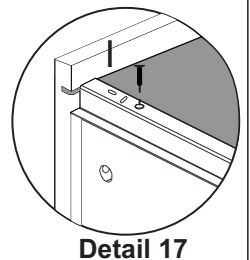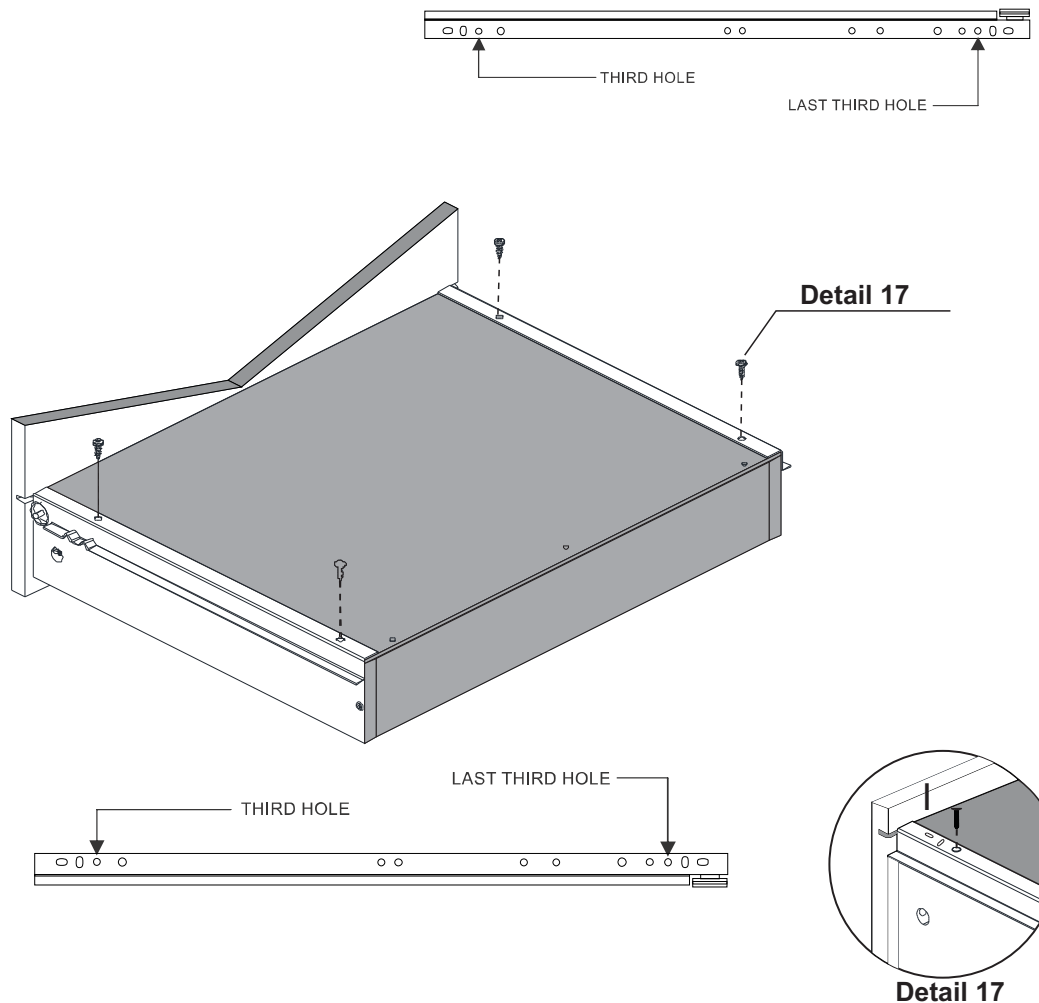


STEP 29




PARTS REQUIRED

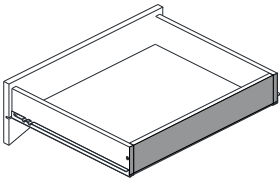

HARDWARE REQUIRED



TOOLS REQUIRED

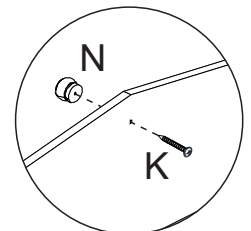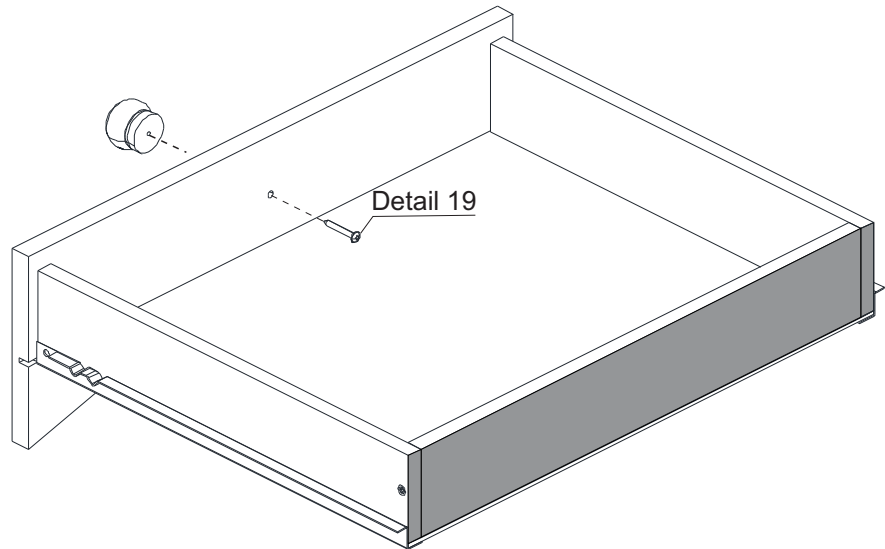

Detail 19

STEP 30

PARTS REQUIRED

