


BERGEN 2 DRAWER COFFEE TABLE OAK EFFECT/WHITE/GREY

2327HN

ASSEMBLY INSTRUCTIONS

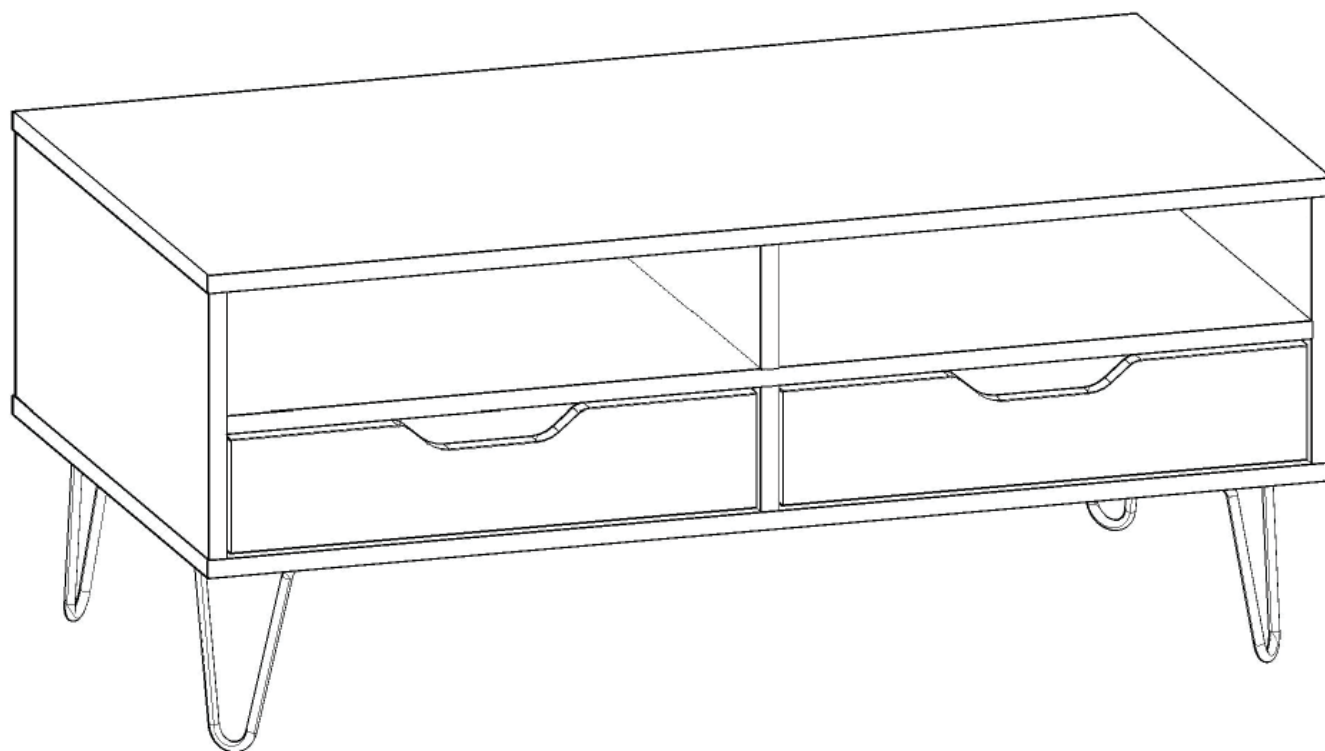


IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

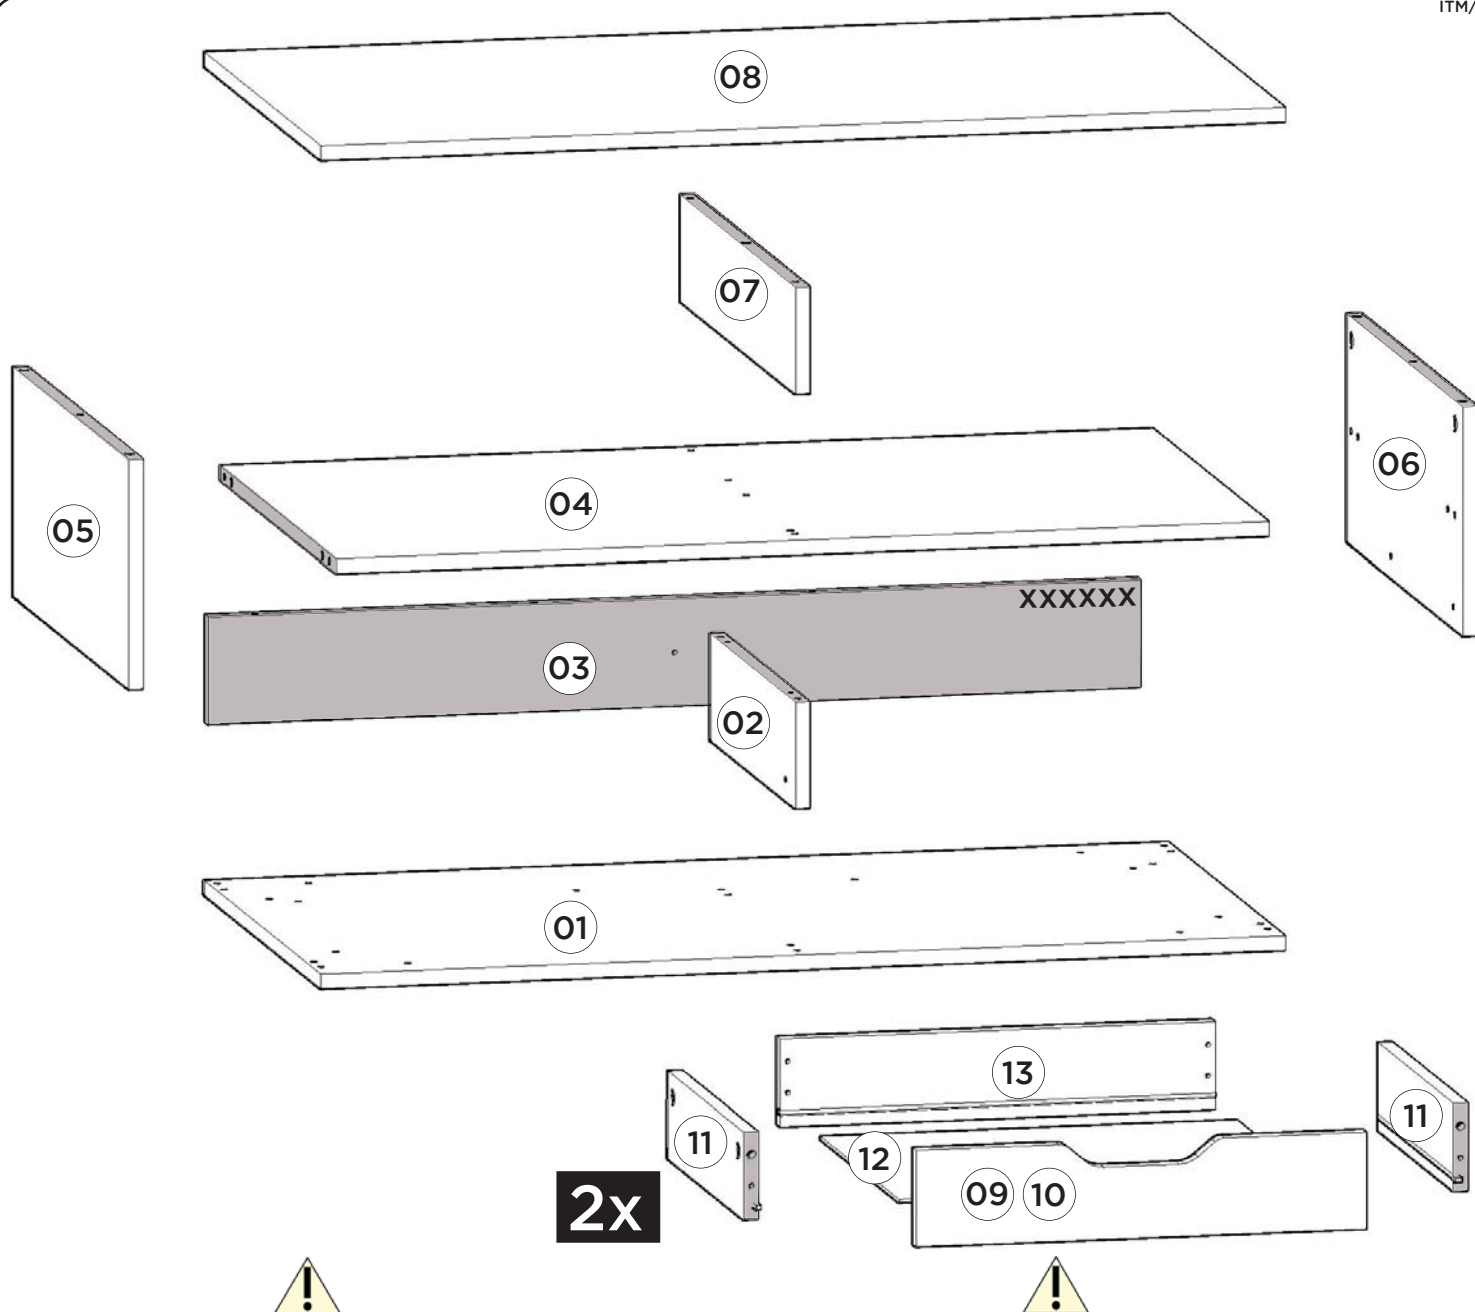

*Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe!!!
*Please assemble on a clean soft surface to avoid damage.

*Please check contents and read the instructions before commencing assembly.
*Assemble this product following the enclosed instructions carefully.
*Please take care to avoid damaging panels during assembly.









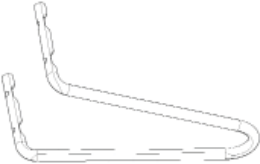
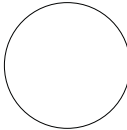

PARTS LIST

Please Note:





The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Code	Part Description	Quantity
01	S300-301-051-HN1-01	Base Panel	x1
02	S300-301-051-HN1-02	Division Panel	x1
03	S300-301-051-HN1-03	Bottom Panel	x1
04	S300-301-051-HN1-04	Shelf Panel	x1
05	S300-301-051-HN1-05	Left Side Panel	x1
06	S300-301-051-HN1-06	Right Side Panel	x1
07	S300-301-051-HN1-07	Upper Division Panel	x1
08	S300-301-051-HN1-08	Top Panel	x1
09	S300-301-051-HN1-09	Left Drawer Front	x1
10	S300-301-051-HN1-10	Right Drawer Front	x1
11	S300-301-051-HN1-11	Drawer Side	x4
12	S300-301-051-HN1-12	Drawer Bottom	x2
13	S300-301-051-HN1-13	Drawer Back Panel	x2

FITTINGS LIST



A 09x  Flat Head Screw Ø3,5x40mm	B 08x  Flan Head Screw Ø3,5x14mm	C 20x  Flat Head Screw Ø3,5x10mm	D 34x  Dowel Ø5x25mm
E 08x  Union screw 18mm	F 18x  Cam Bolt	G 18x  Cam Nut Ø15mm	H 02x  Drawer Runners
I 04x  Metal Leg	J 15x  Hole Plugs	K 01x  Glue	

TIPS FOR FITTINGS CAM-LOCKS

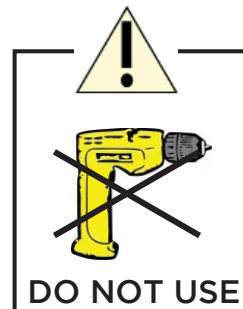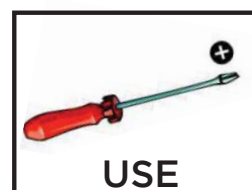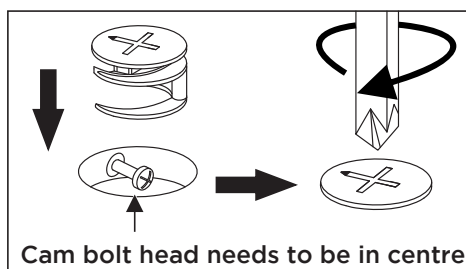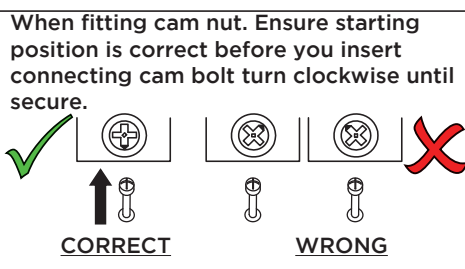




CAMBOLT


Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside).

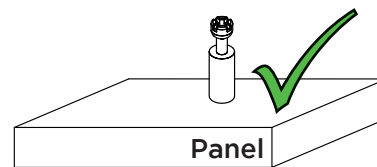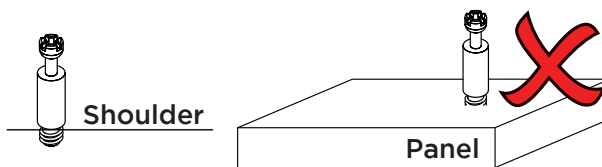


Pre-Assembly

<p>B</p>  <p>Flan Head Screw Ø3,5x14mm</p>	<p>08x E</p>  <p>Female Male Union screw 18mm</p>	<p>08x I</p>  <p>04x Metal Leg</p>
---	---	---


Detail 1

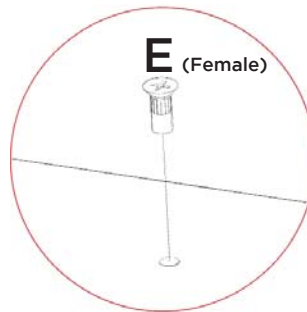


1

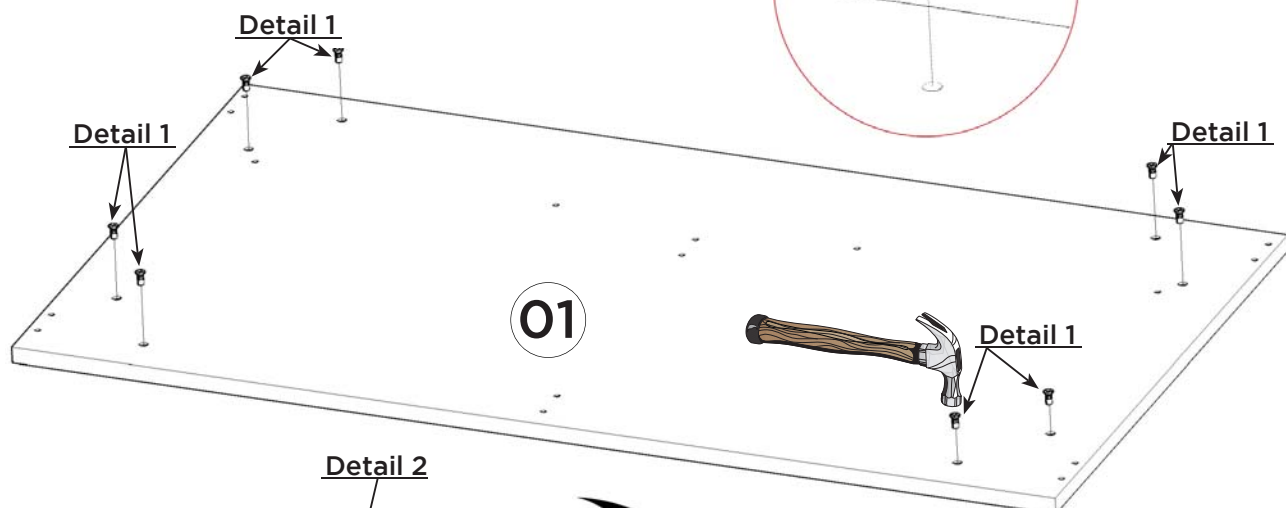


2

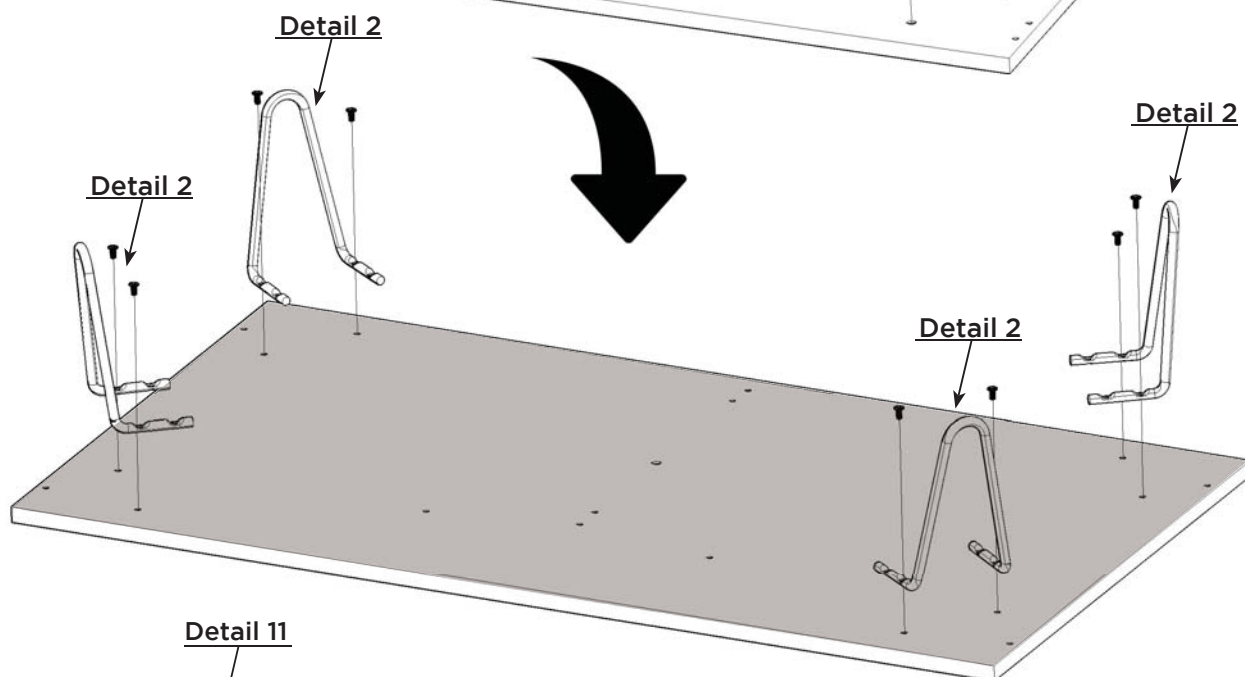


3

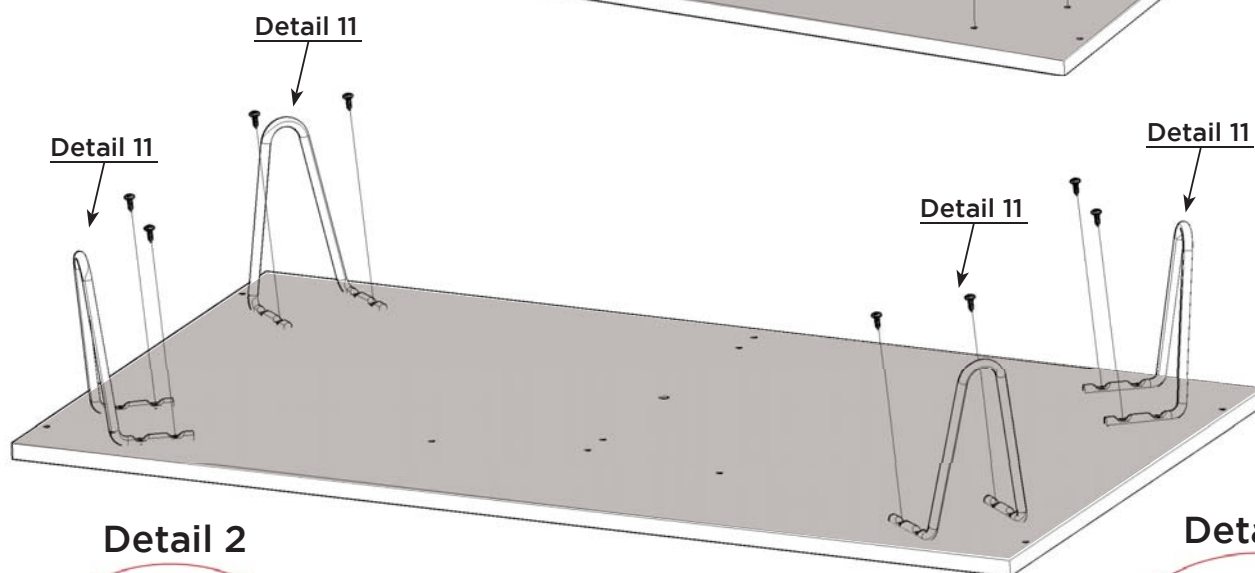

Detail 2

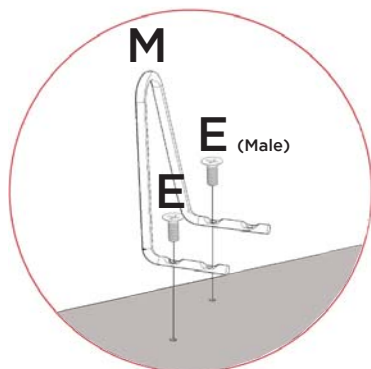


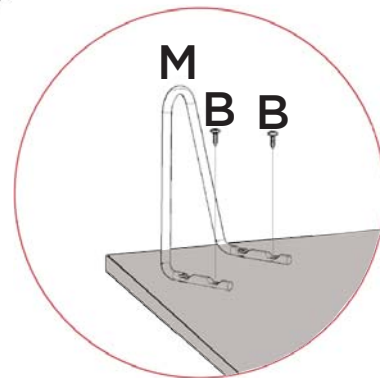



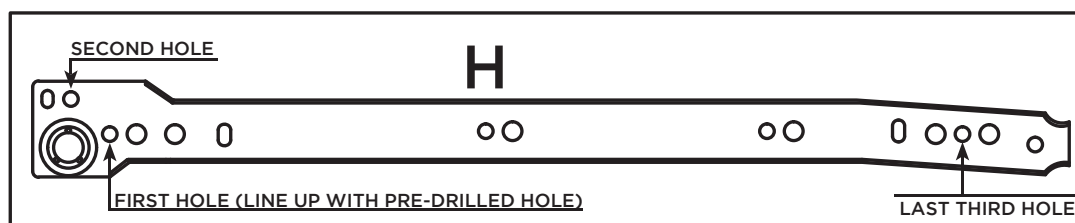
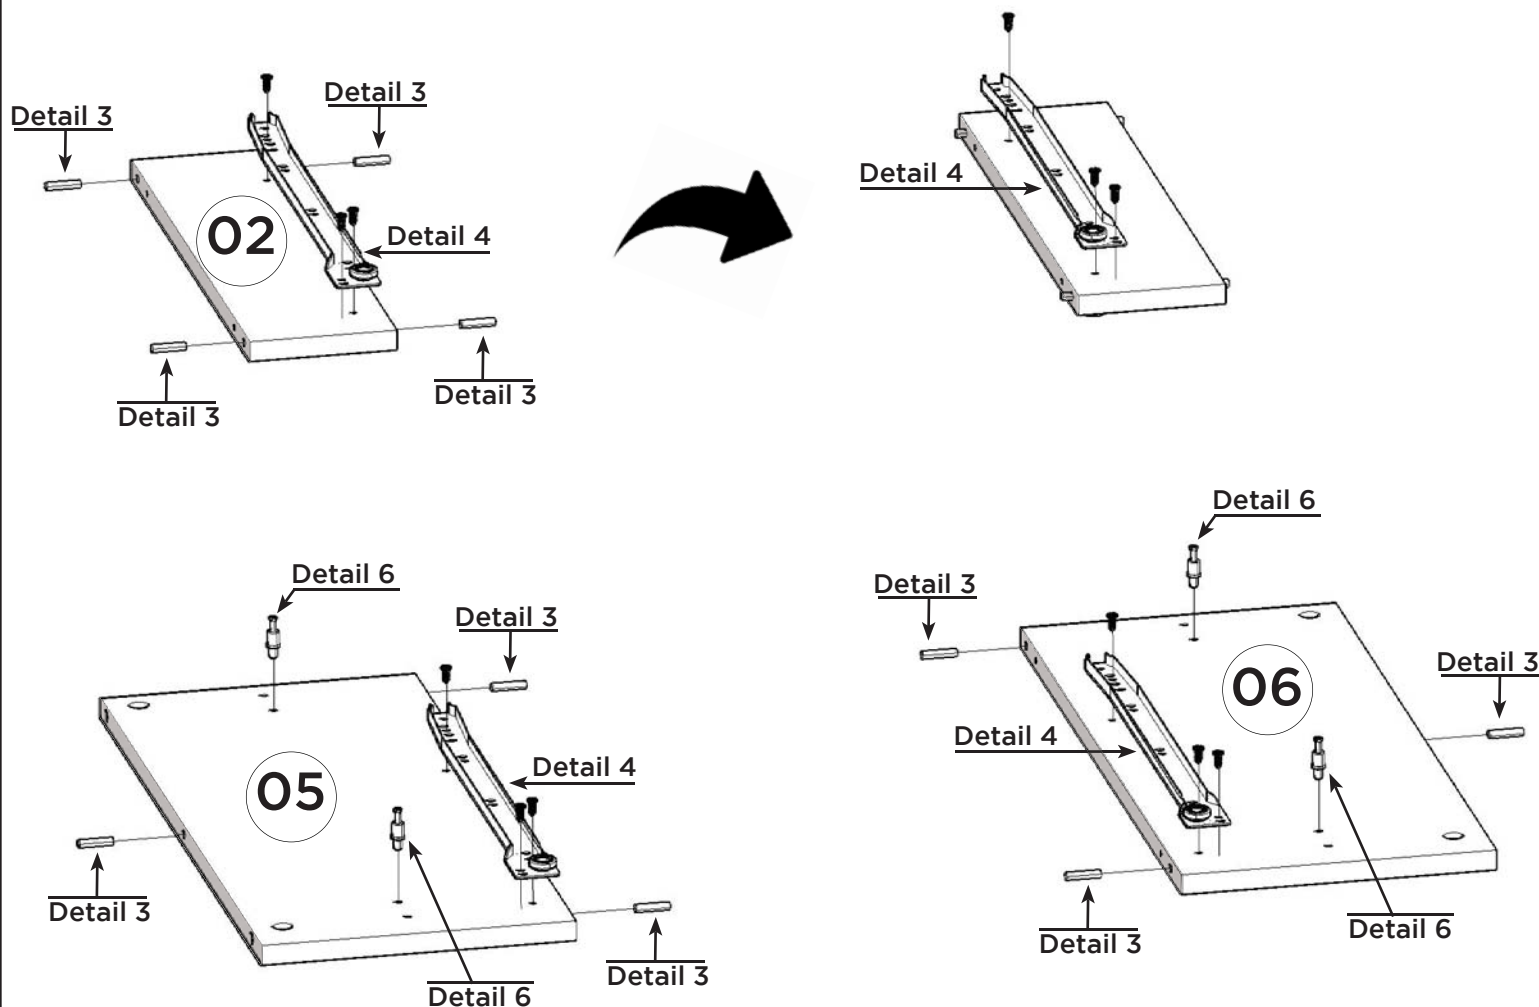
Detail 11




4

Pre-Assembly


<p>C</p>  <p>Flat Head Screw Ø3,5x10mm</p>	<p>D</p>  <p>Dowel Ø5x25mm</p>	<p>F</p>  <p>Cam Bolt</p>	<p>H</p>  <p>Drawer Runners</p>	<p>K</p>  <p>Glue</p>
---	--	---	--	---




Detail 3

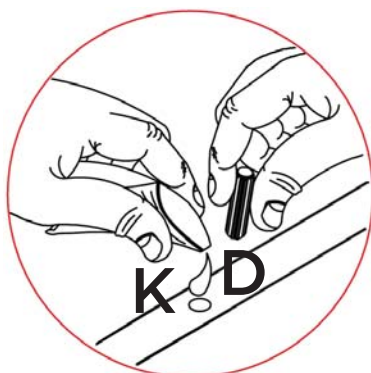




Detail 4

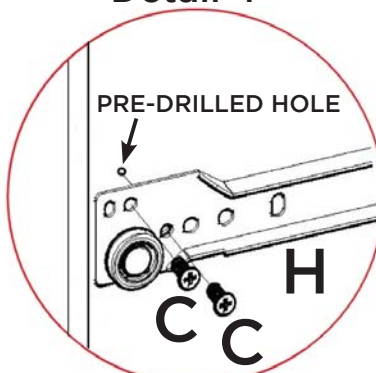



Detail 6

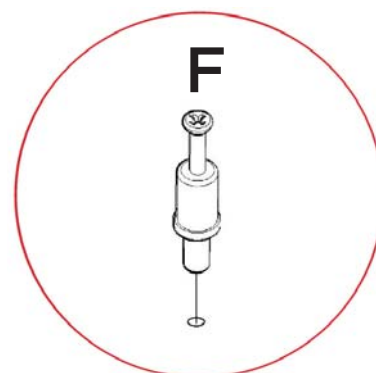


Pre-Assembly

D  Dowel Ø5x25mm	F  Cam Bolt	K  Glue
---	---	--


For your future reference
order number should be here

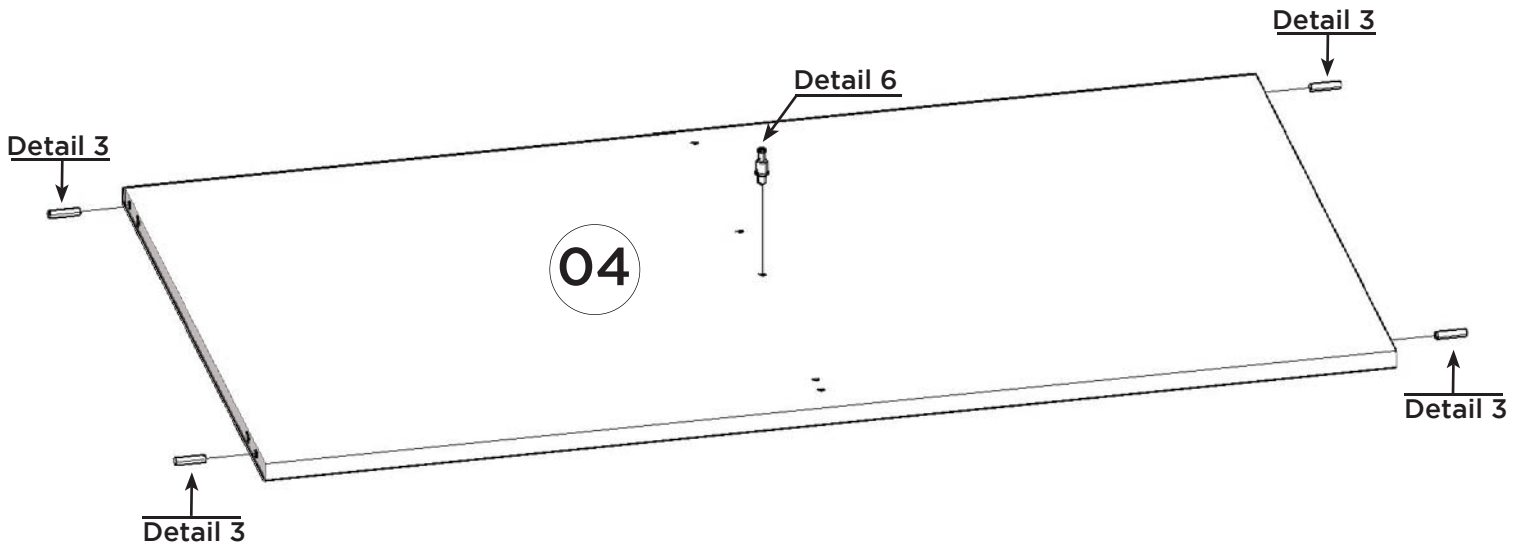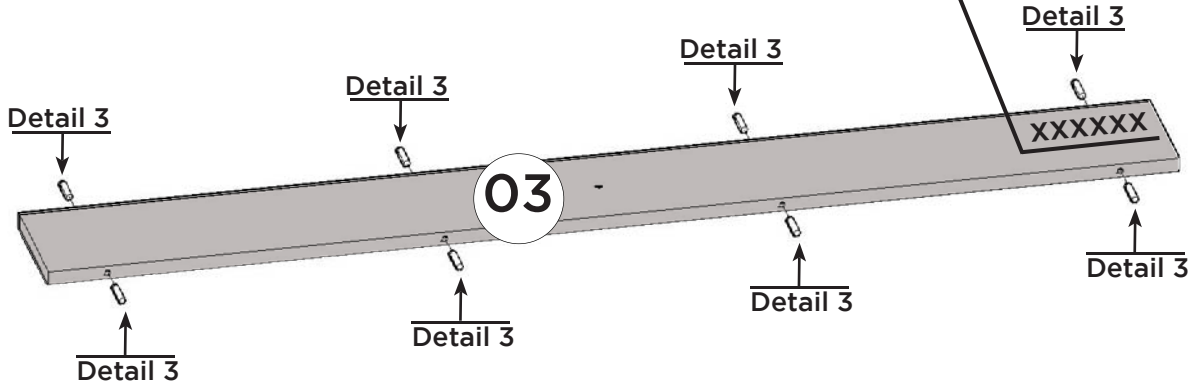

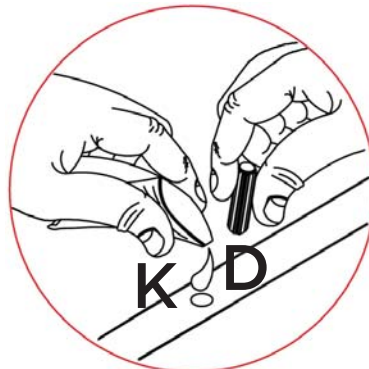


Detail 3



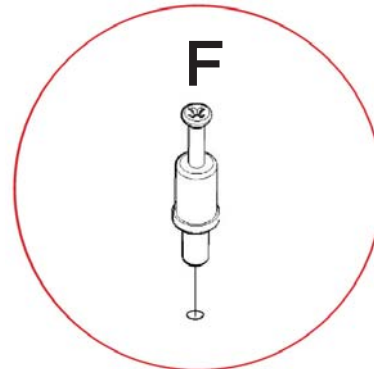


Detail 6







Pre-Assembly

D  12x Dowel Ø5x25mm	F  13x Cam Bolt	K  Glue
--	--	--

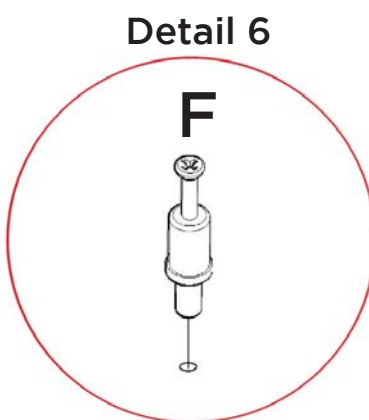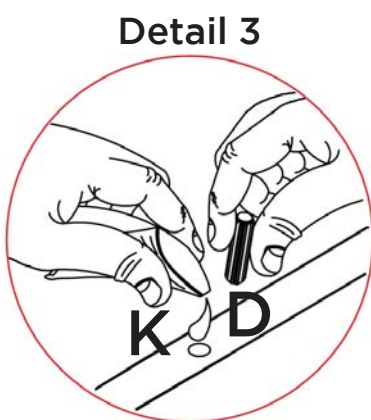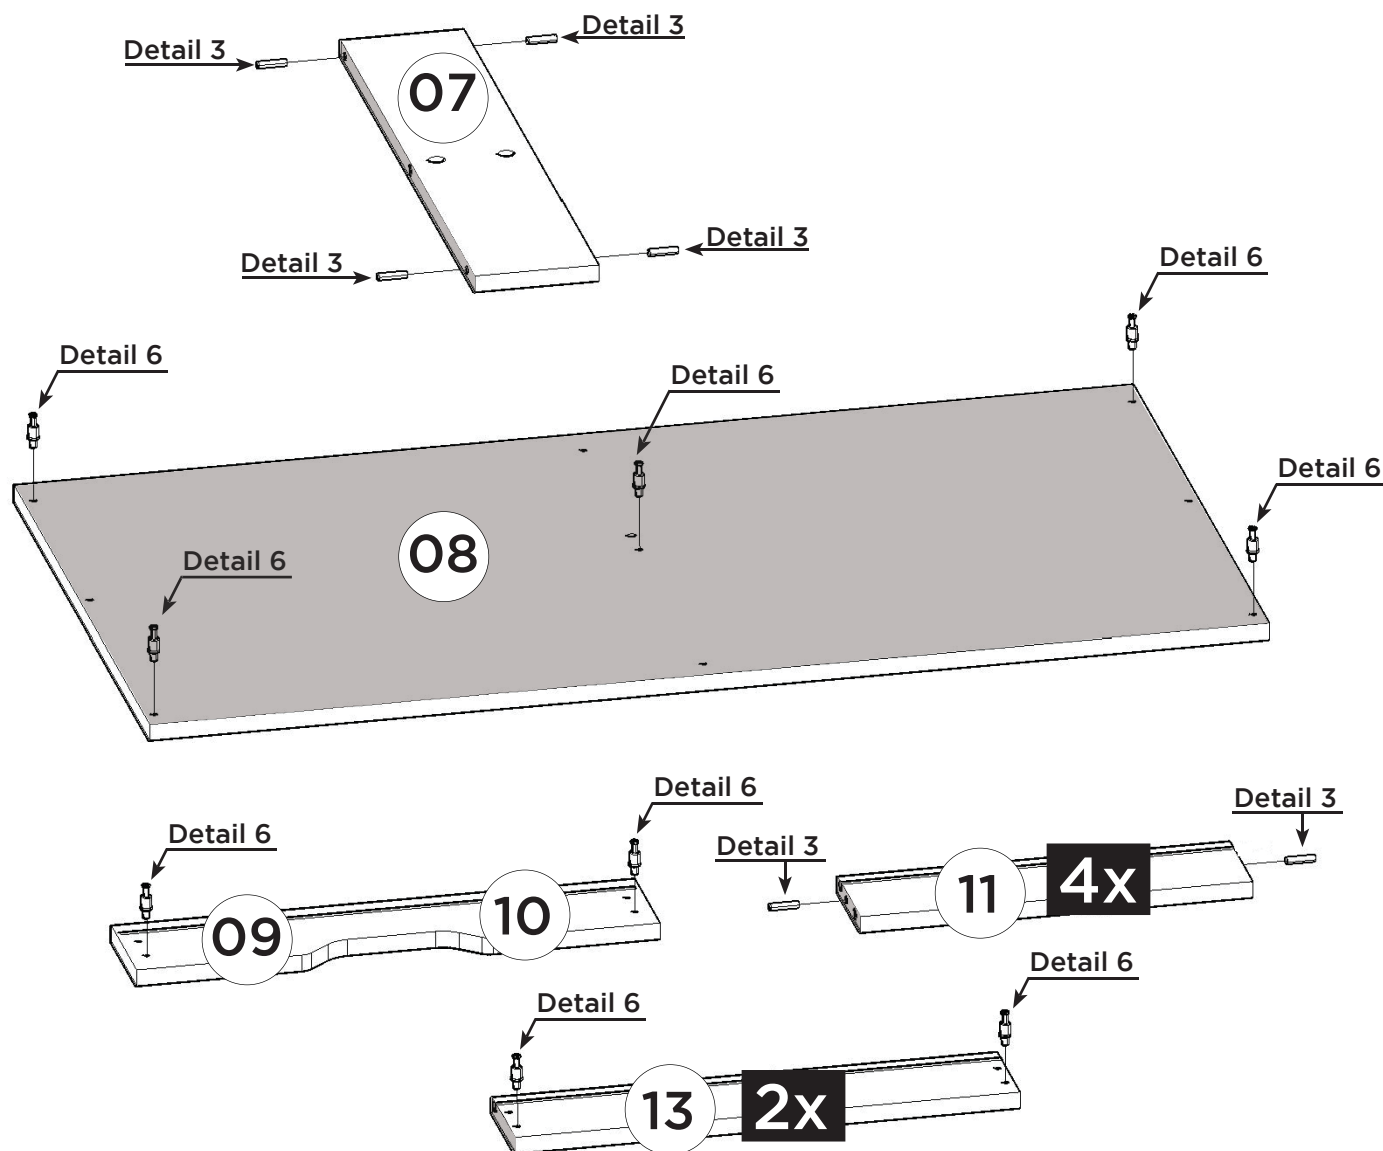


1


<p>A  02x</p> <p>Flat Head Screw Ø3,5x40mm</p>	<p>G  04x</p> <p>Cam Nut Ø15mm</p>	<p>K </p> <p>Glue</p>
---	---	--

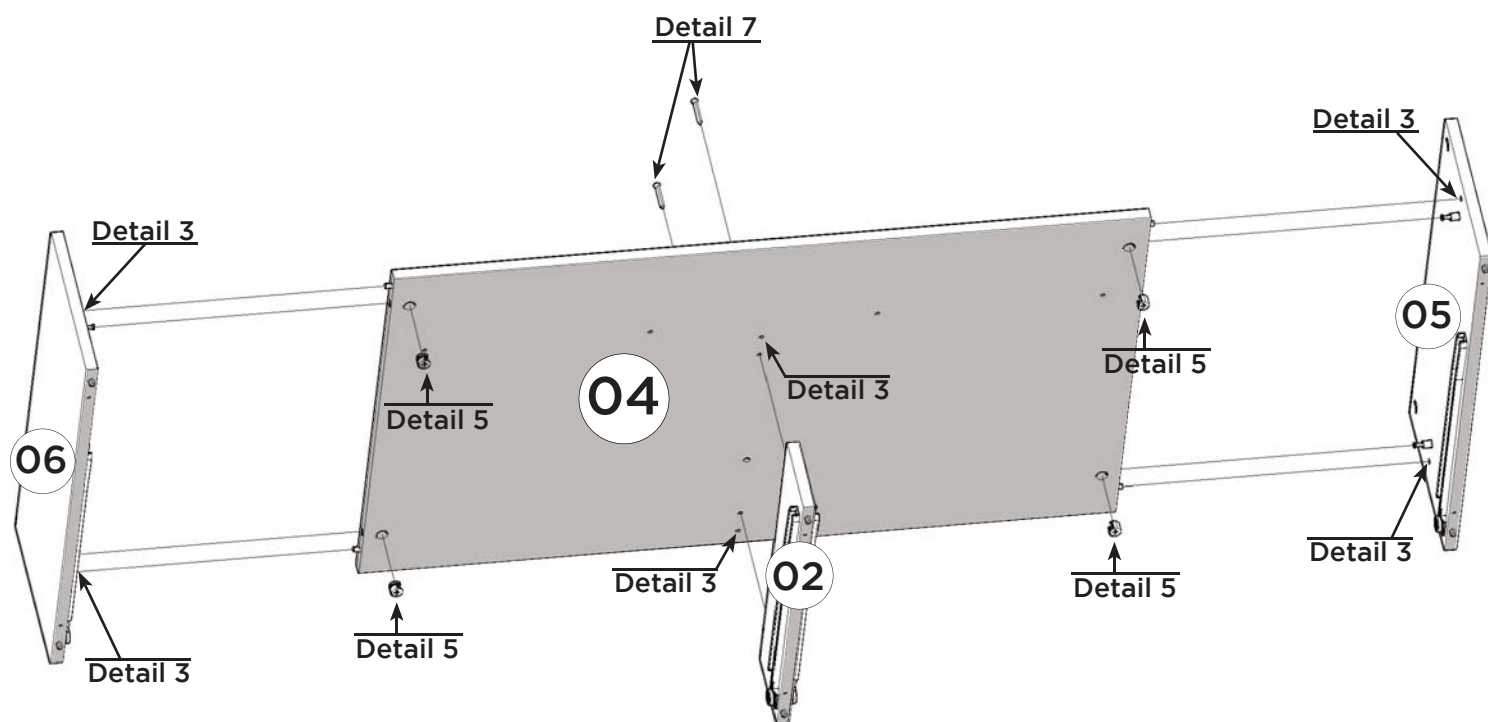


2

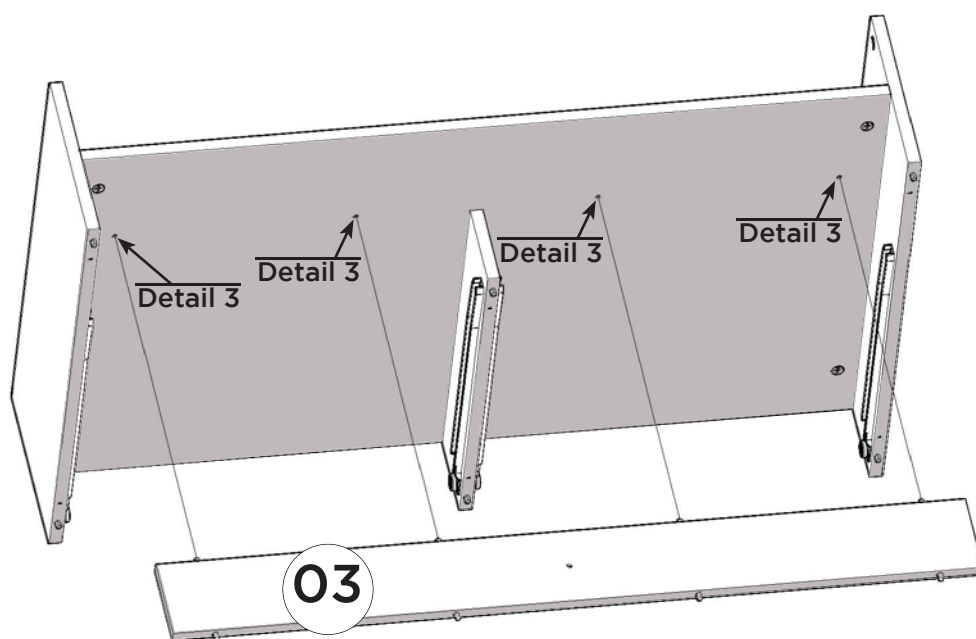


Detail 3

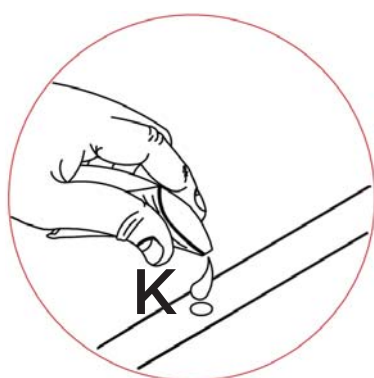




Detail 5

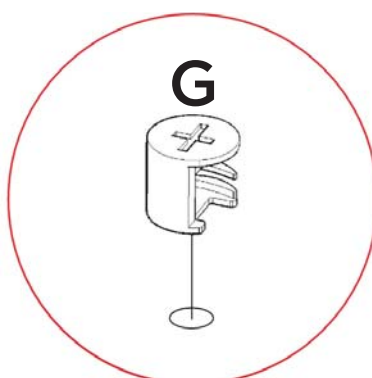


Detail 7

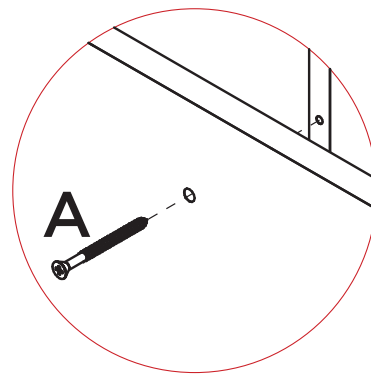


3

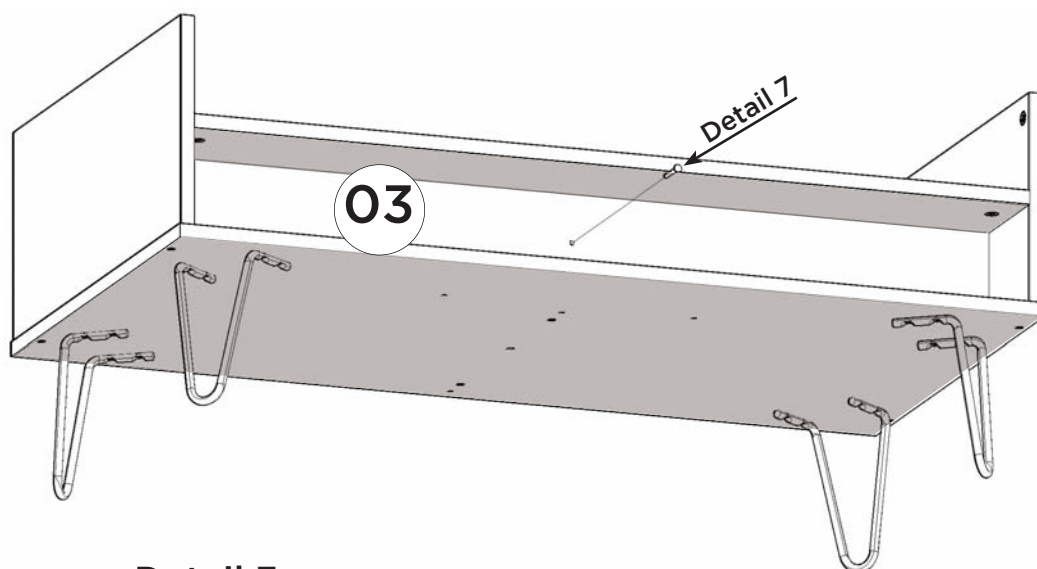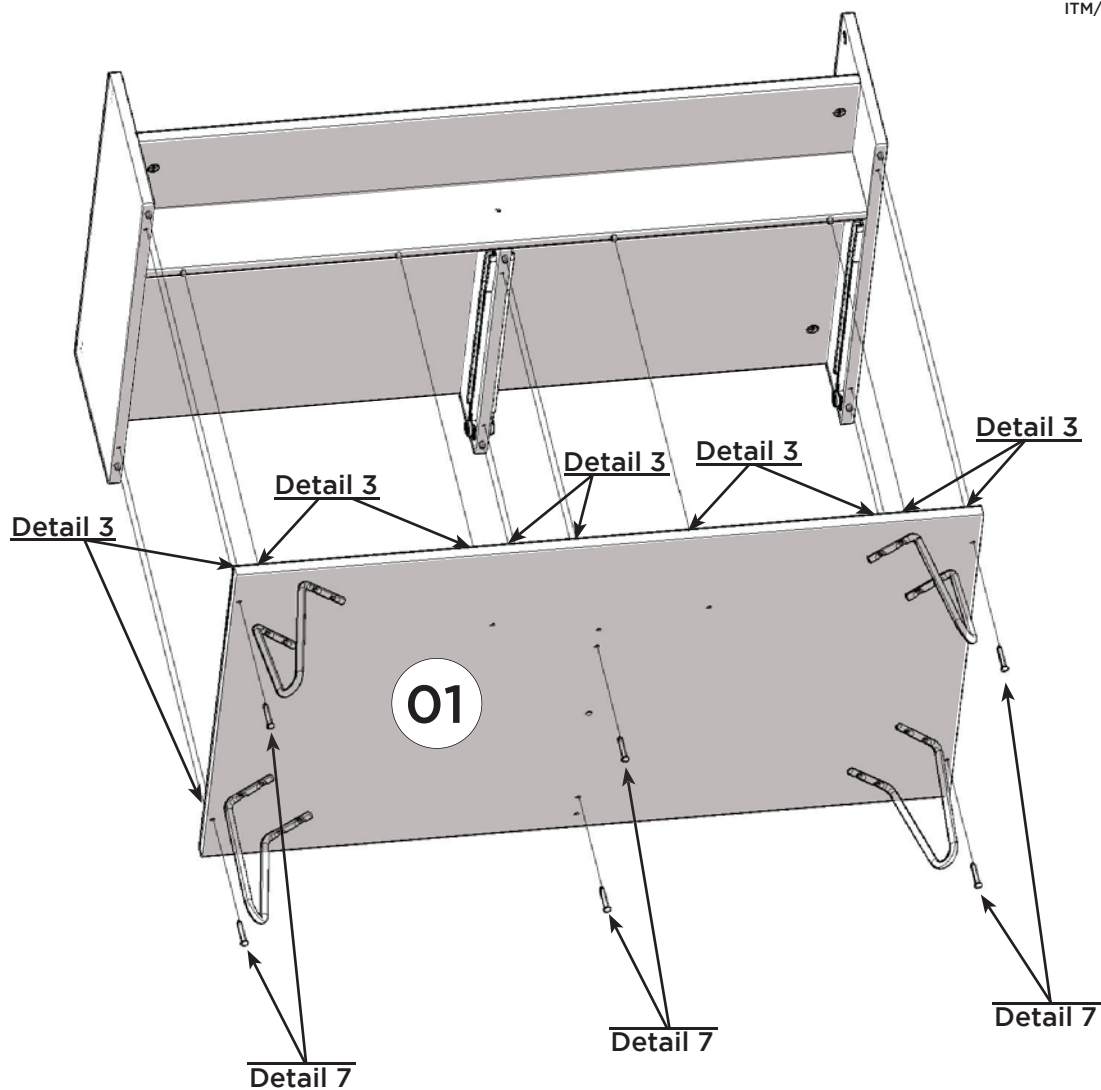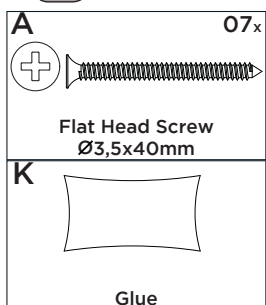




Detail 3

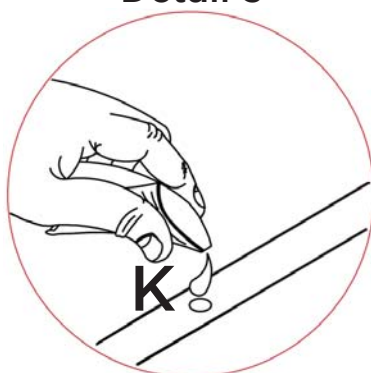


Detail 7

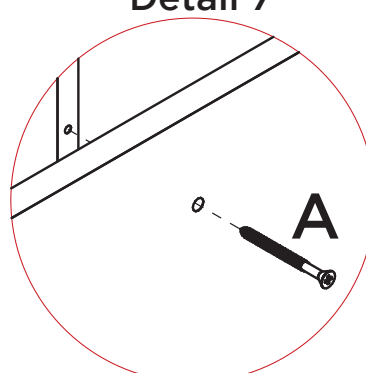


5

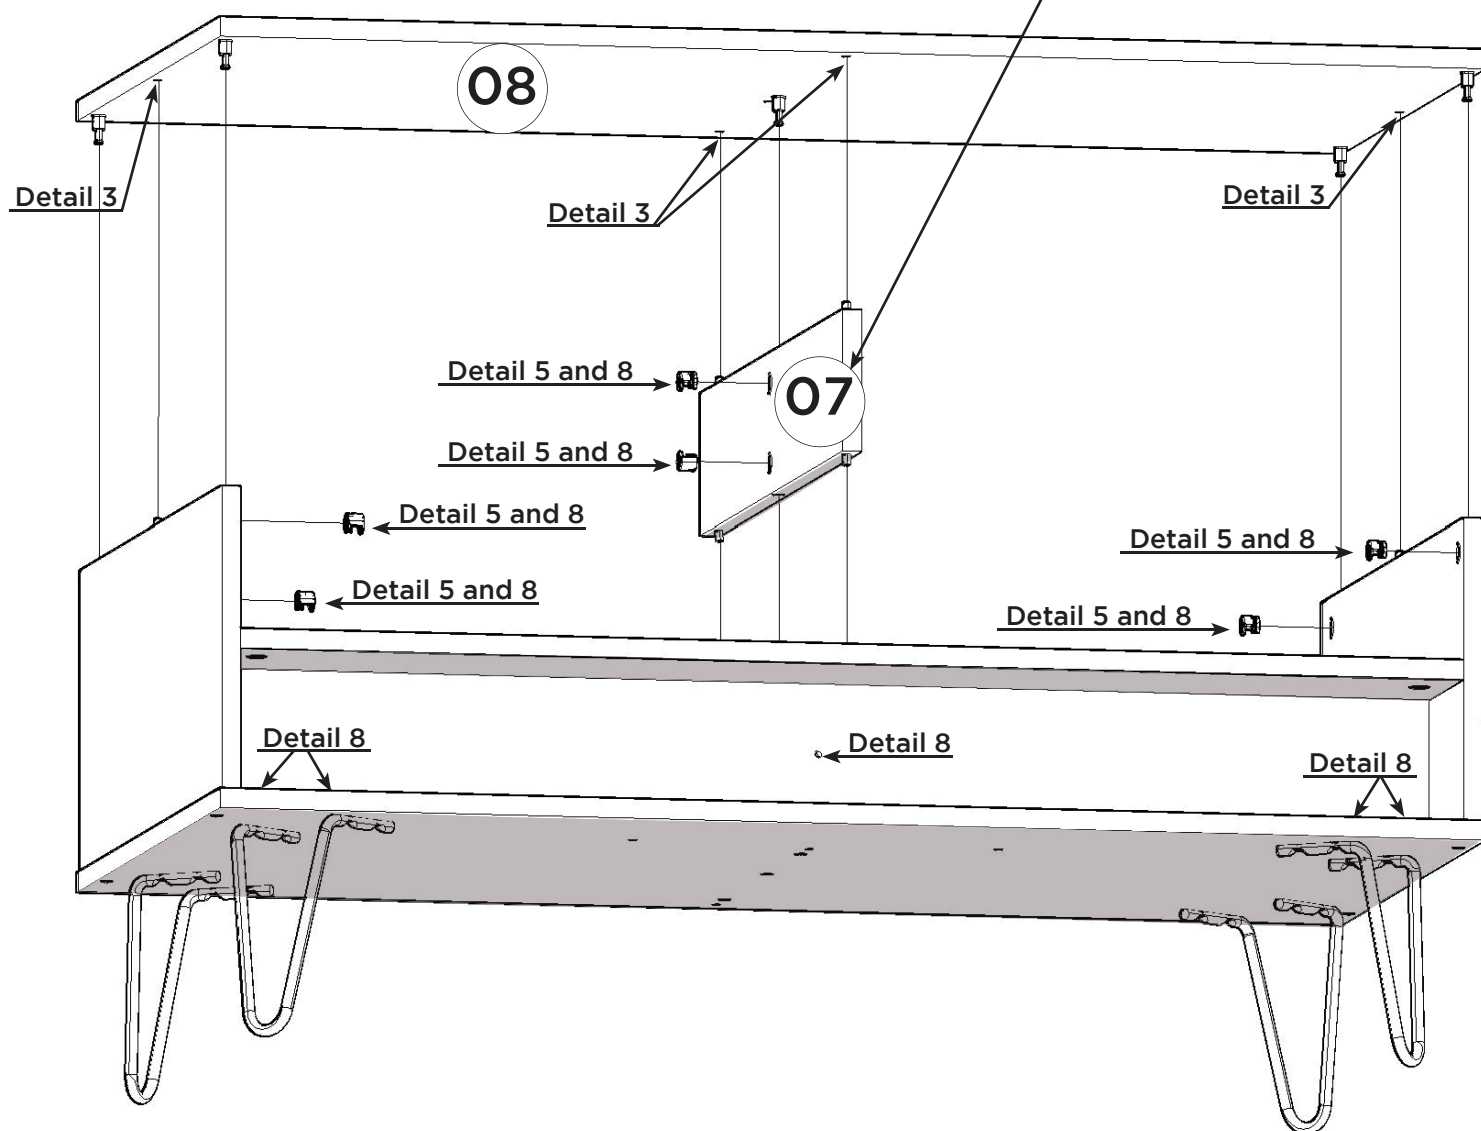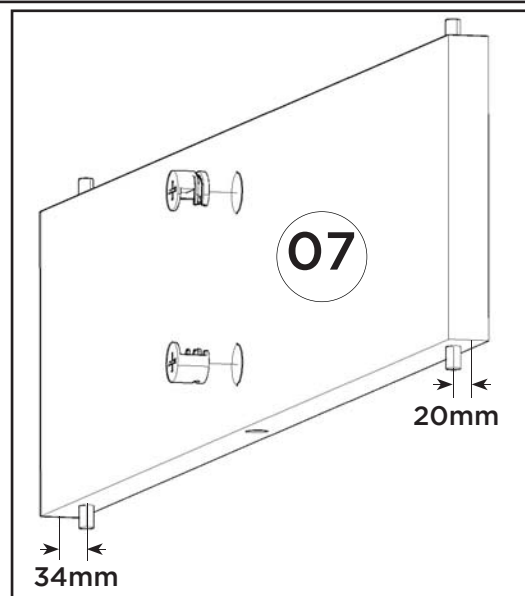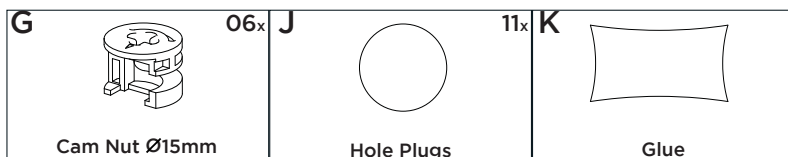


Detail 3

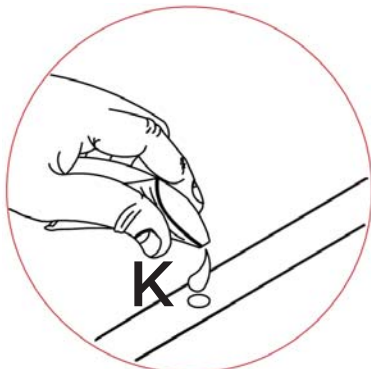


Detail 5

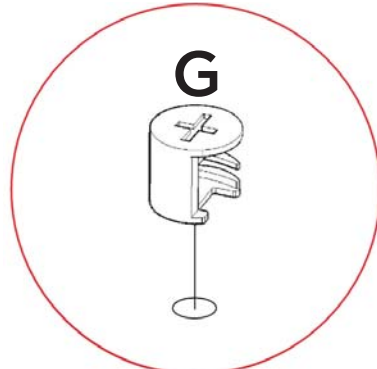

Detail 8

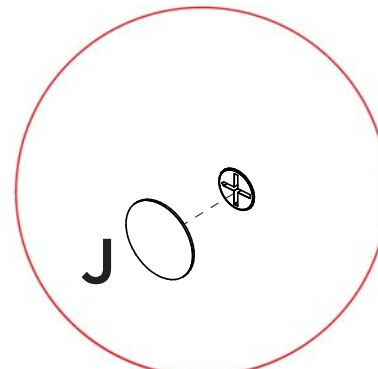


6

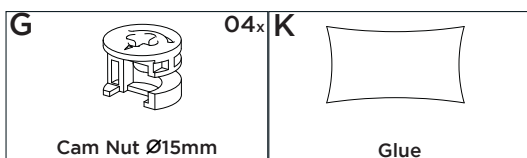


1°

2x

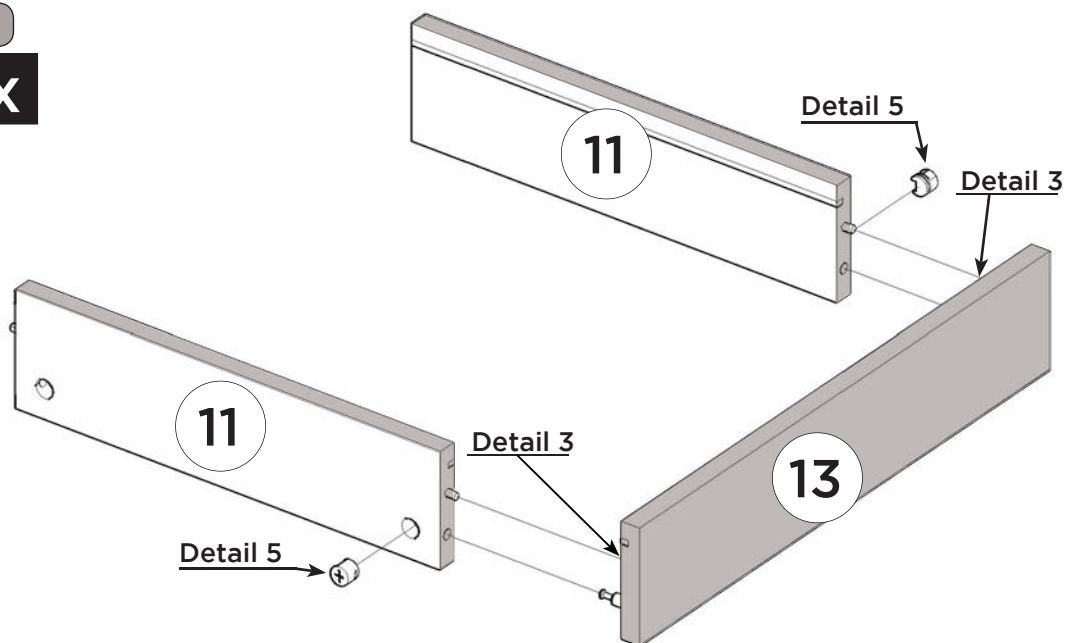


2°


2x

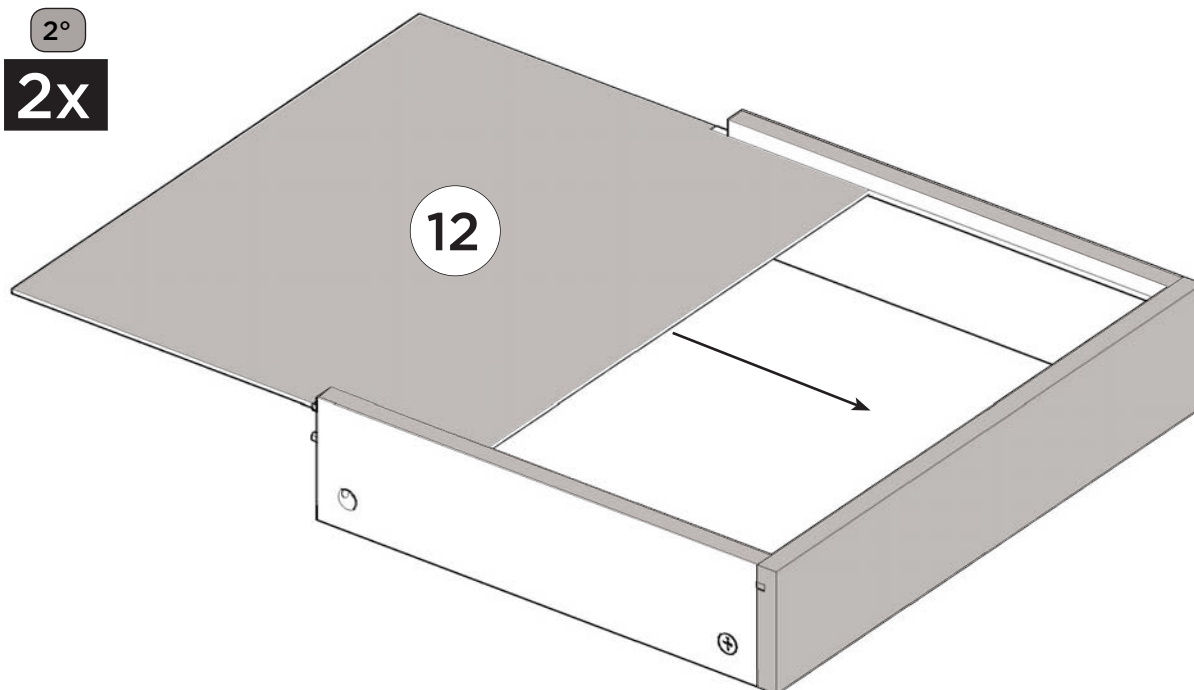



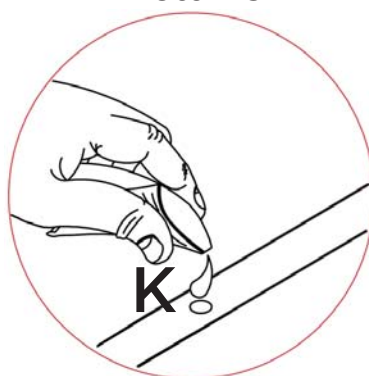

Detail 3


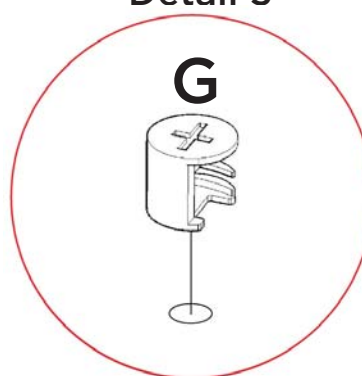


Detail 5




7


<p>C</p>  <p>08x</p> <p>Flat Head Screw Ø3,5x10mm</p>	<p>G</p>  <p>04x</p> <p>Cam Nut Ø15mm</p>	<p>H</p>  <p>2x 2x</p> <p>Drawer Runners</p>	<p>K</p>  <p>Glue</p>
--	--	--	---

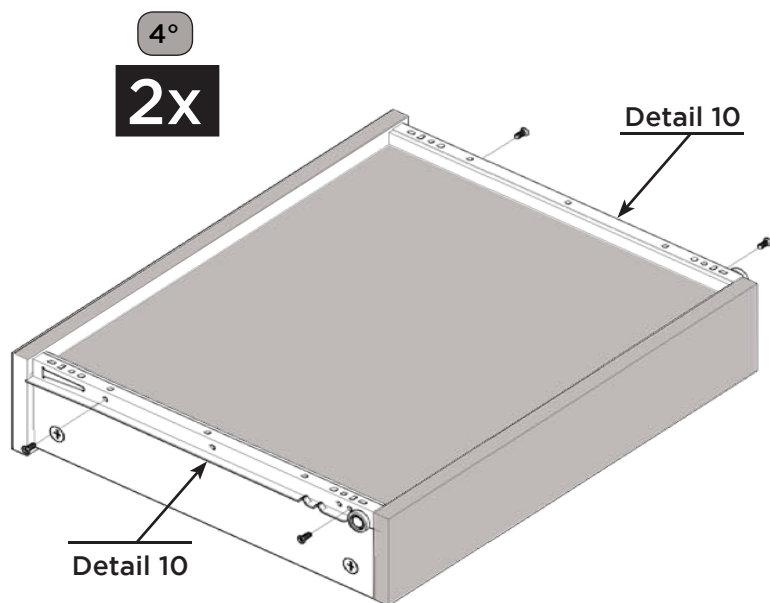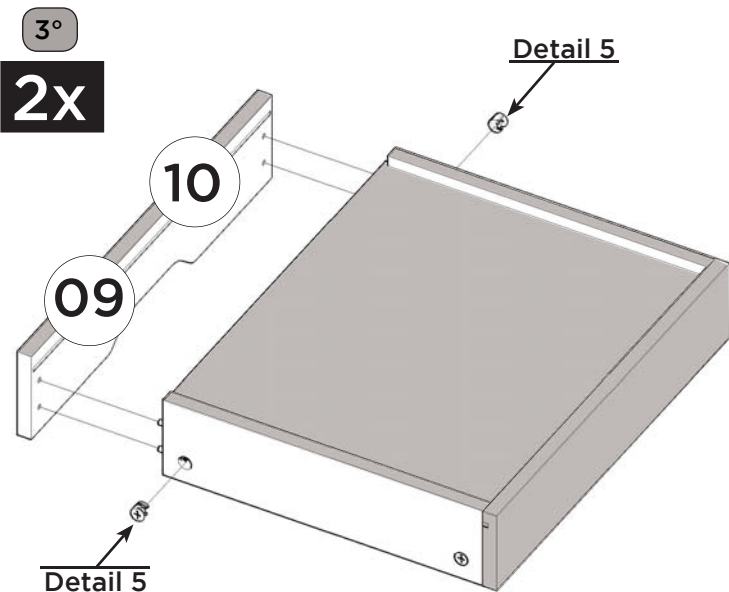


Detail 3

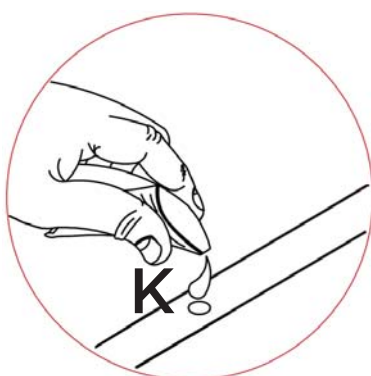



Detail 5

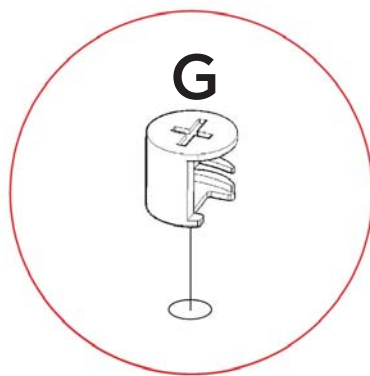



Detail 10

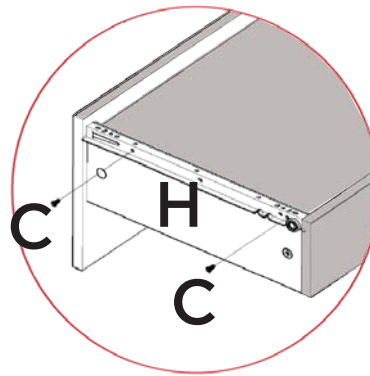

8

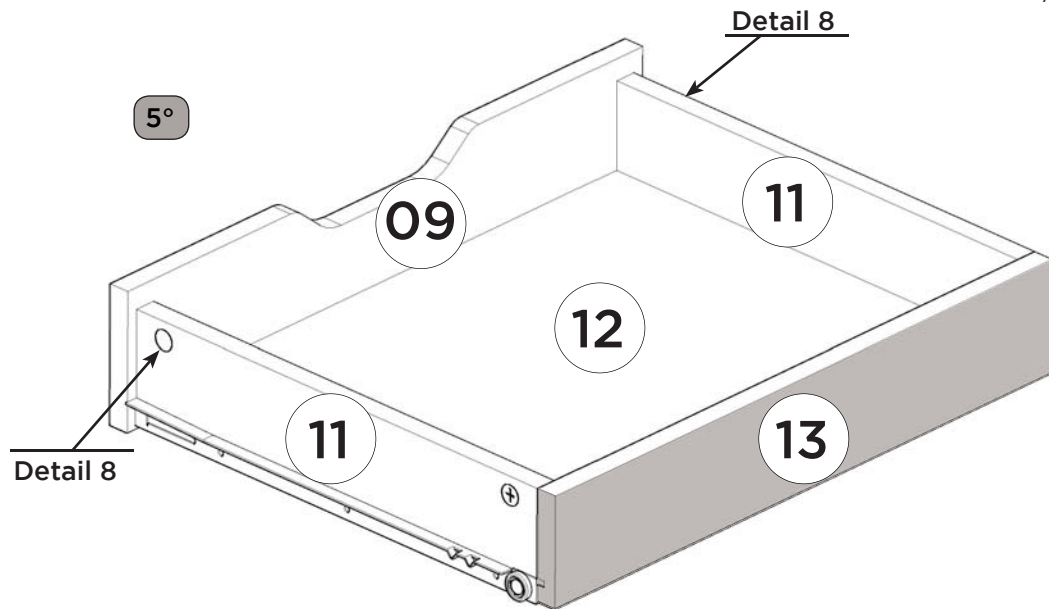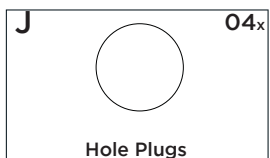

Detail 8

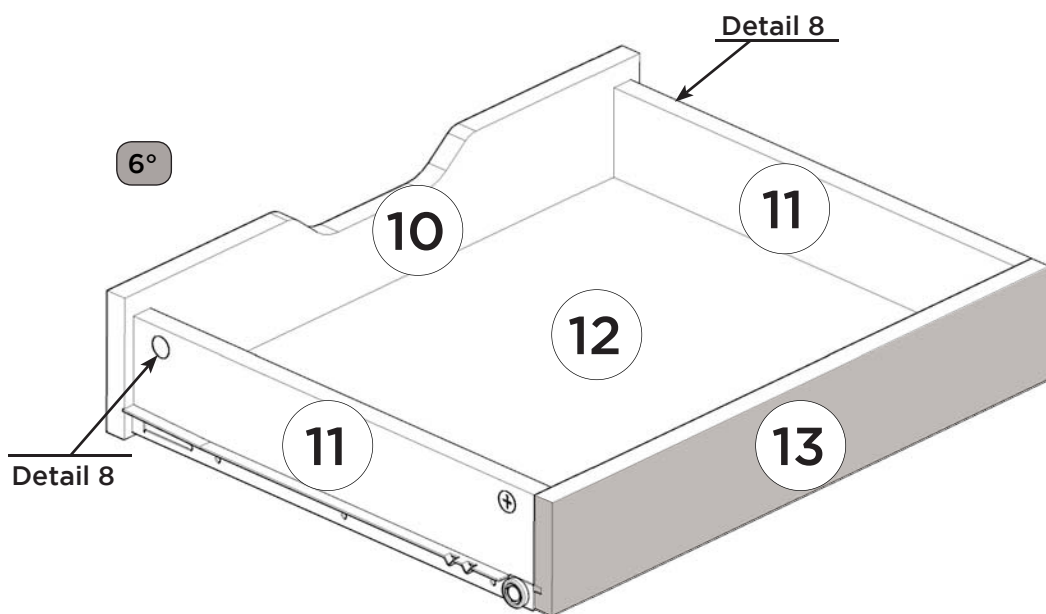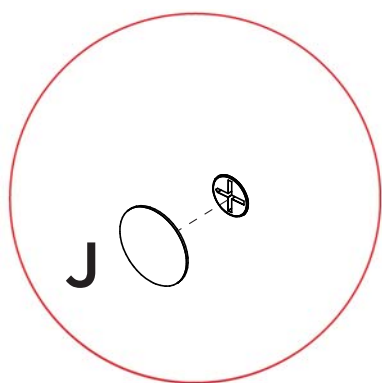

9

