


Corona Flat Screen Tv Unit

ASSEMBLY INSTRUCTIONS

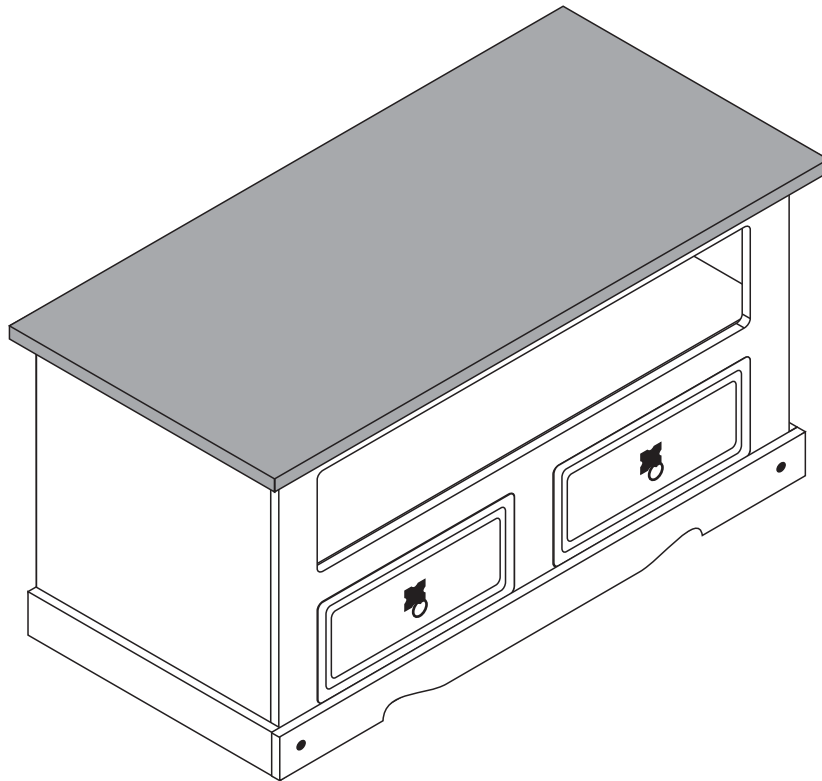

FOR DOMESTIC USE ONLY


IMPORTANT

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a duster, and do not use detergents of any kind. However, the surface will need to be retreated from time to time. This can be done by using block wax (unperfumed) and rubbing it over the whole item.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

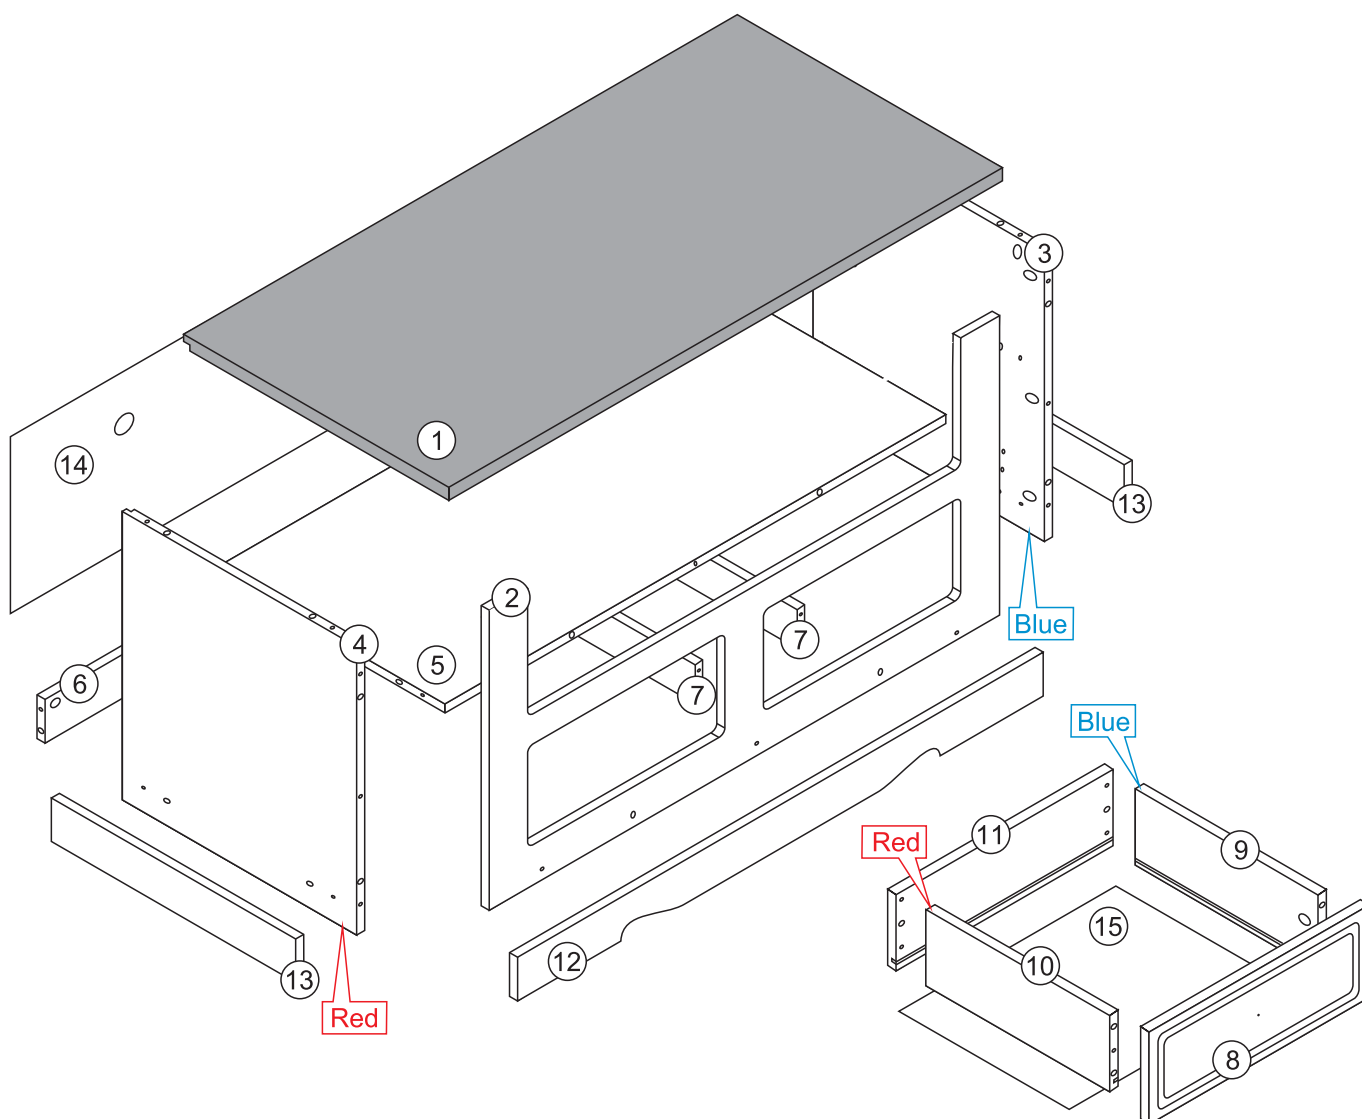

!
 * Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe !!!
 * Please assemble on a clean soft surface to avoid damage.
















!
 * Please check contents and read the instructions before commencing assembly.
 * Assemble this product following the enclosed instructions carefully.
 * Please take care to avoid damaging panels during assembly.

PARTS LIST

1	Top Panel	x1
2	Front Frame	x1
3	Right Side (Blue)	x1
4	Left Side (Red)	x1
5	Fixed Shelf	x1
6	Back Crossbeam	x1
7	Drawer Support	x2
8	Drawer Front	x2


9	Right Drawer Side (Blue)	x2
10	Left Drawer Side (Red)	x2
11	Drawer Back	x2
12	Front Plinth	x1
13	Side Plinth	x2
14	Back Panel	x1
15	Drawer Base	x2

Fittings List

A	 Cam Bolt (25x)	B	 Cam Nut (25x)	C	 Hole Plugs White (10x)
D	 Dowel Ø8x30 (42x)	E	 Plastic Foot (6x)	F	 Drawer Spacer (4x)
G	 Blanking Plug Screw Ø6x12 (4x)	H	 Black Handle With Bolt (2x)	I	 Drawer Runner 350mm (2xSet)
J	 Flanged Screw Ø5 x 50 mm (4x)	K	 Black Stud (2x)	L	 Flanged Screw Ø3,5 x 25mm (7x)
M	 Flat Head Screw Ø3 x 12mm (32x)	N	 Nail 10 x 10mm (18x)	O	 Glue (1x)




TIPS FOR FITTING CAM-LOCKS

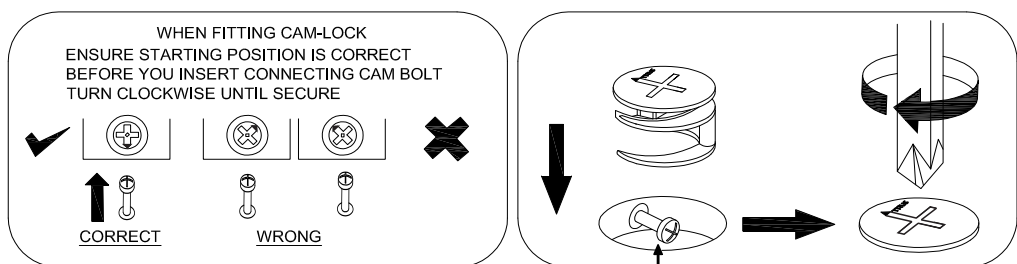



CAMBOLT

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)



















Cam bolt head needs to be in centre

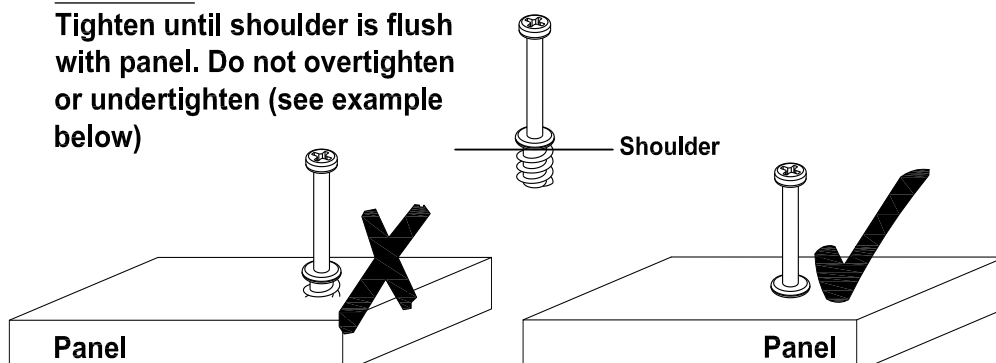

Pre-Assembly

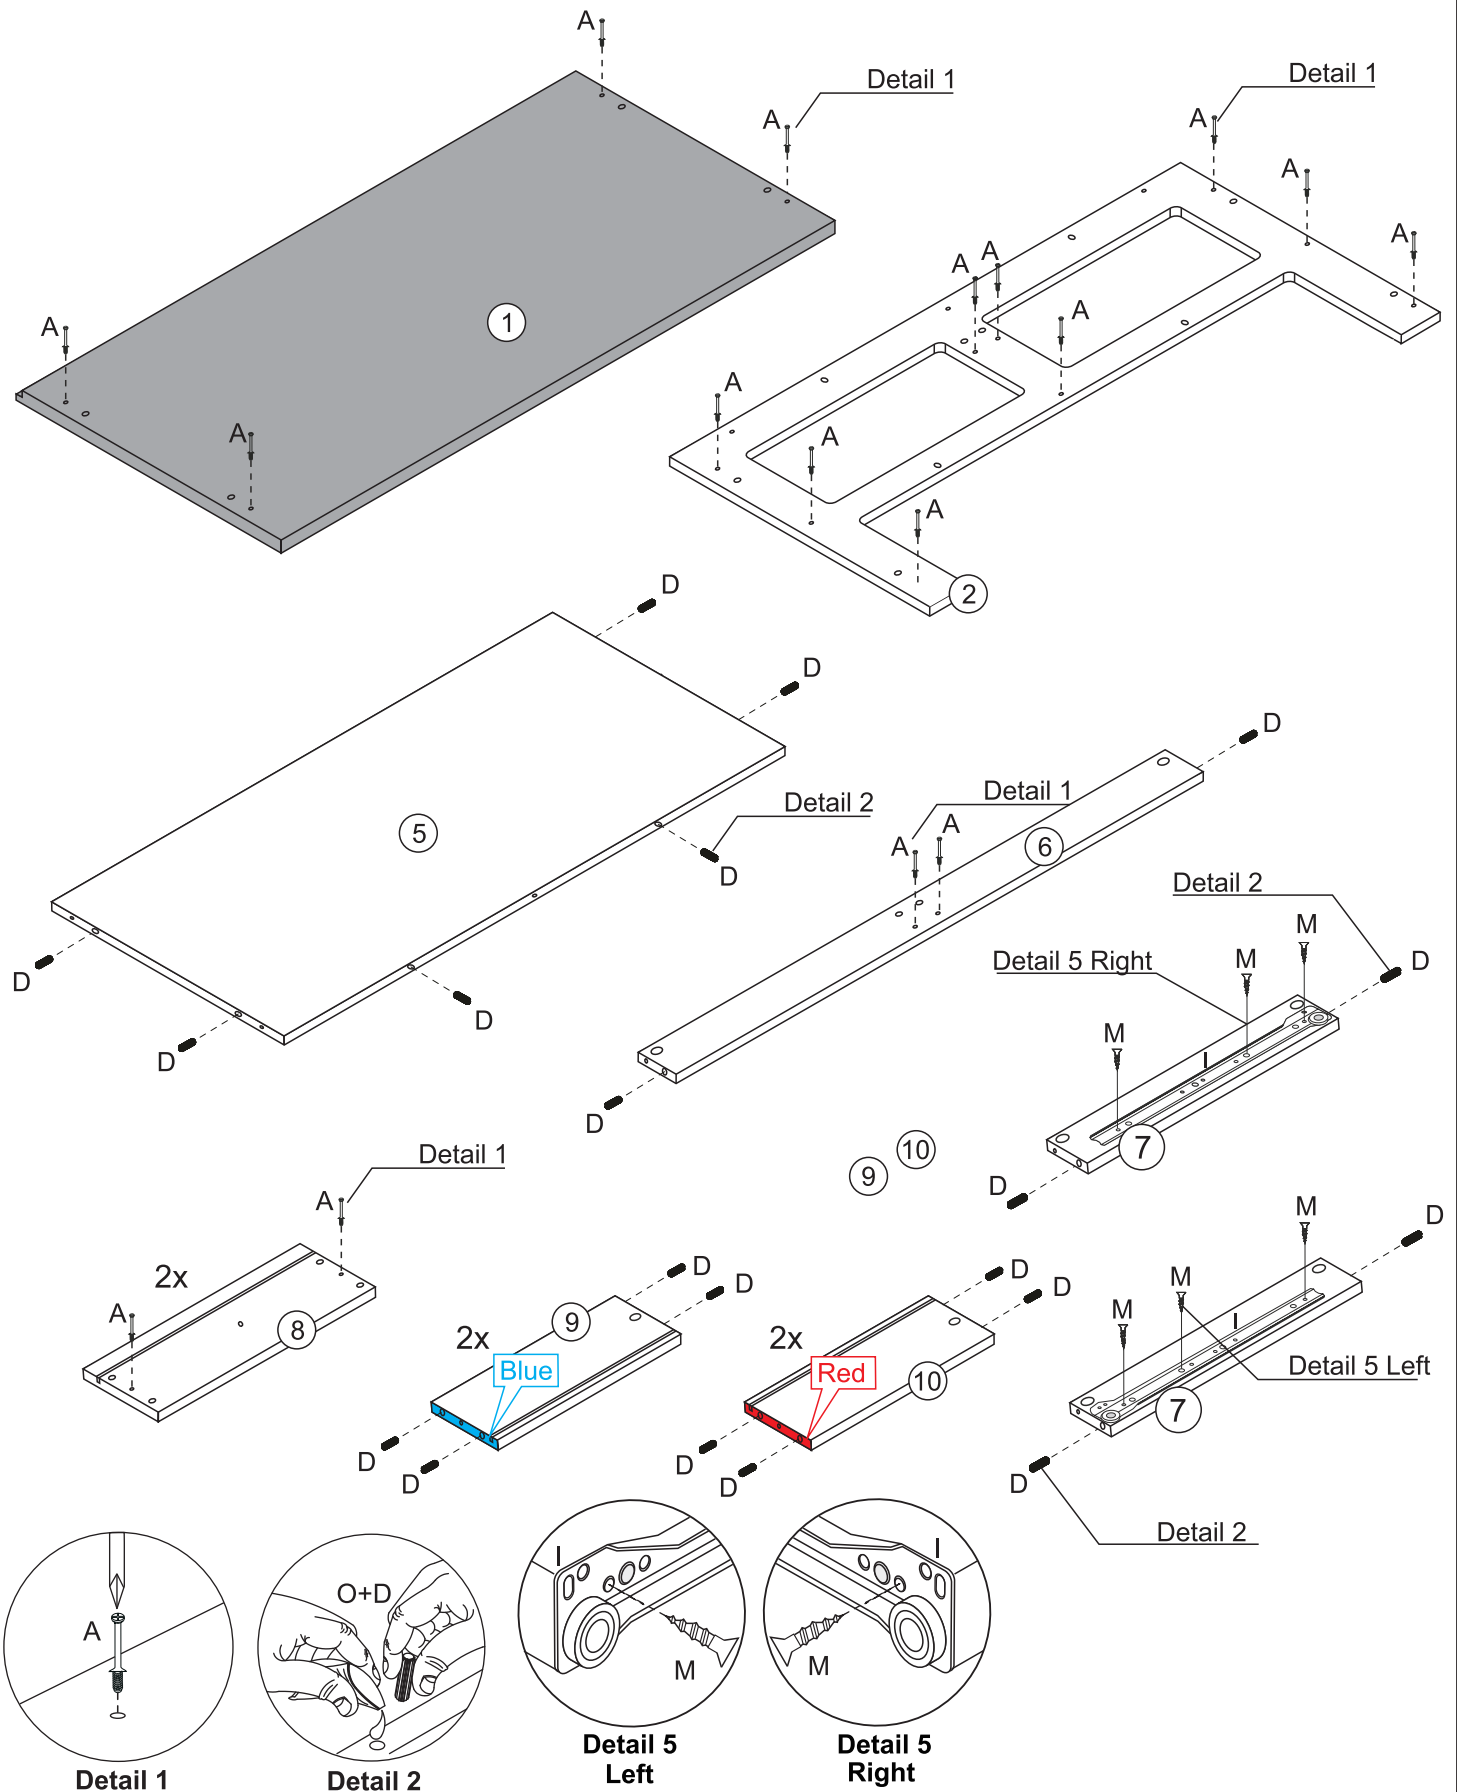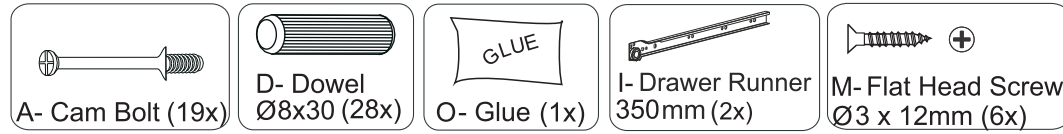

Pre-Assembly

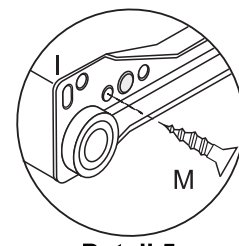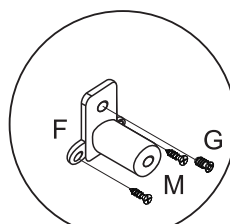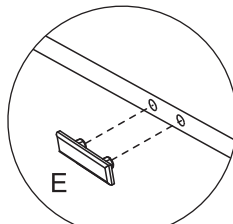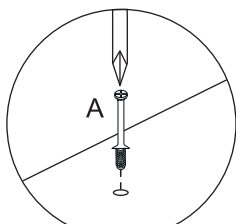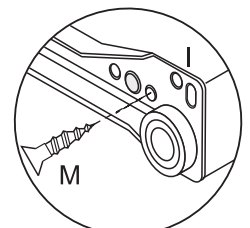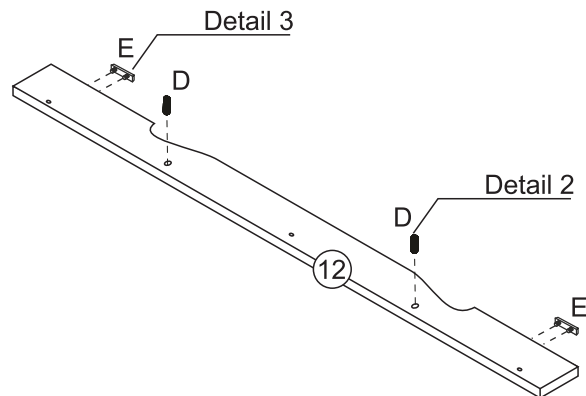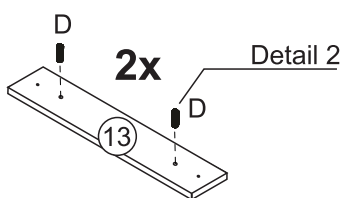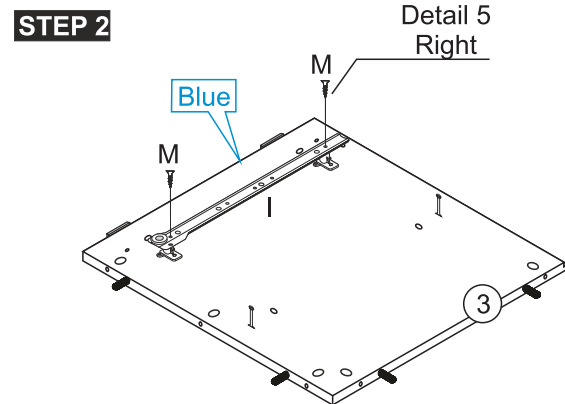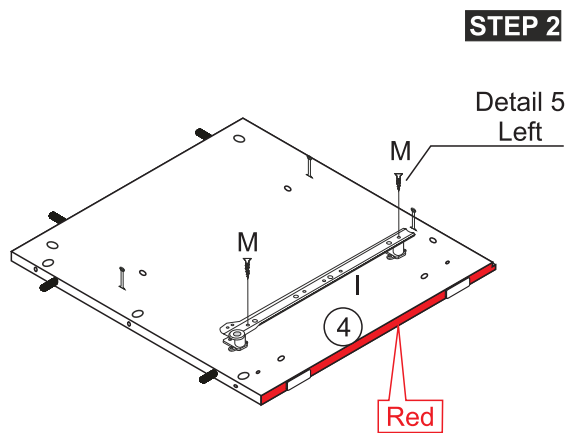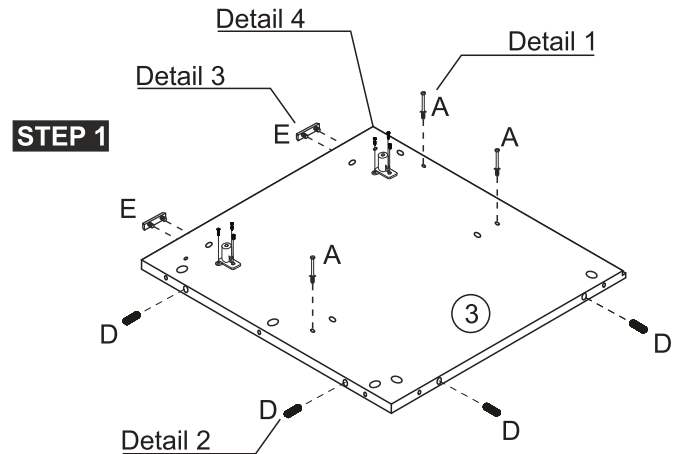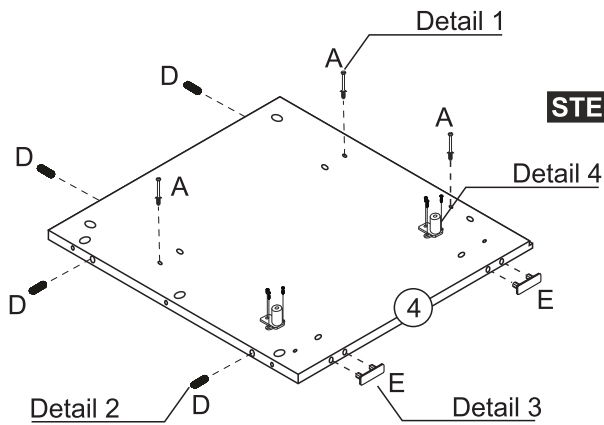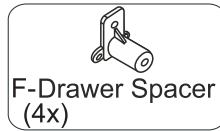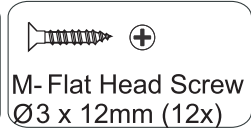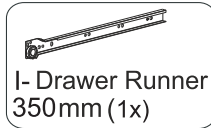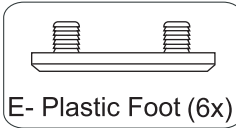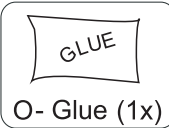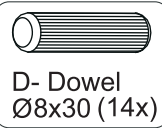
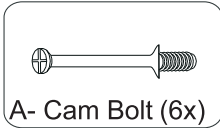


Detail 5 Right

1





B- Cam Nut (6x)

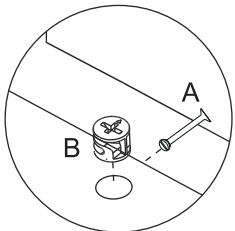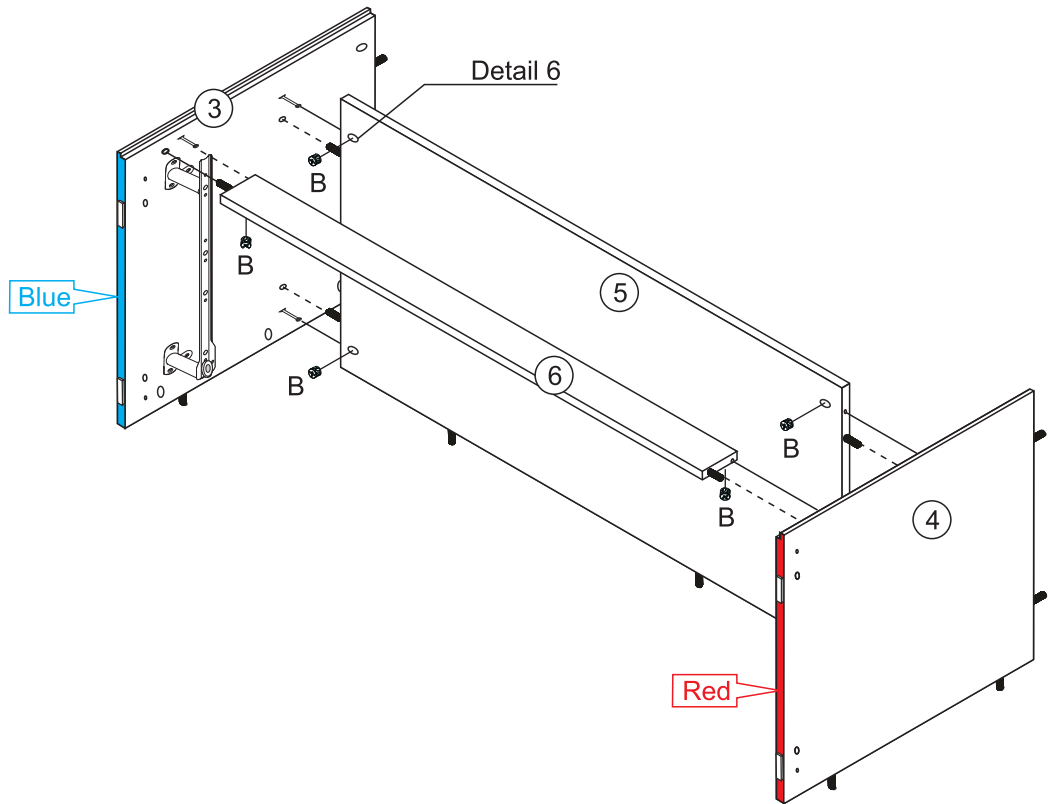**Detail 6**Fit and turn the
cam clockwise

2



B- Cam Nut (2x)

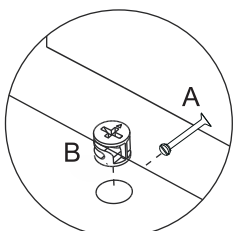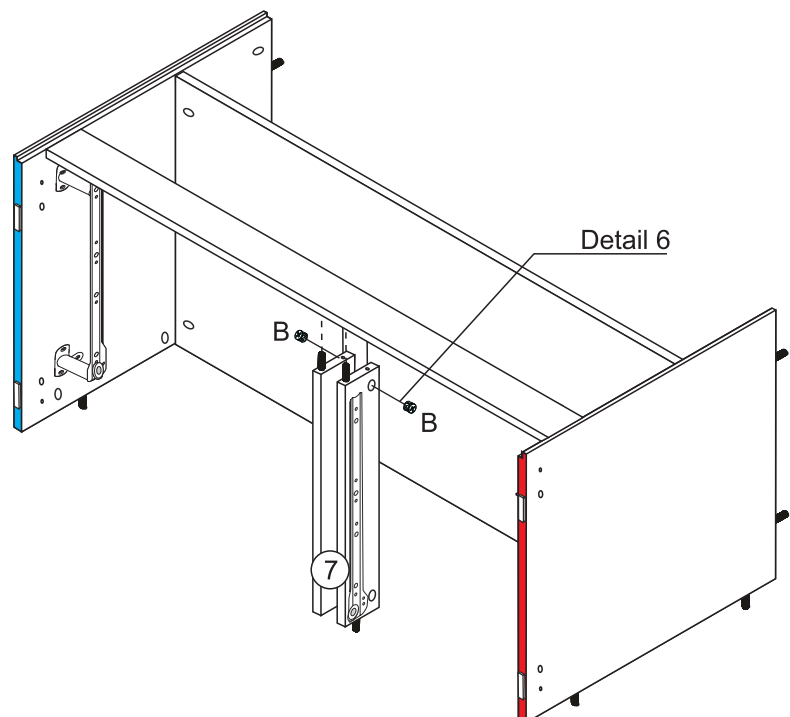**Detail 6**Fit and turn the
cam clockwise


3




B- Cam Nut (9x)

C- Hole Plugs
White (2x)Only Use The Hole
Plugs Here.

Detail 6

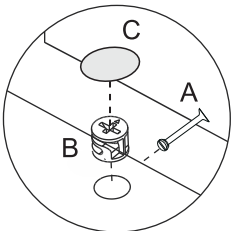
**Detail 6**Fit and turn the
cam clockwise

4

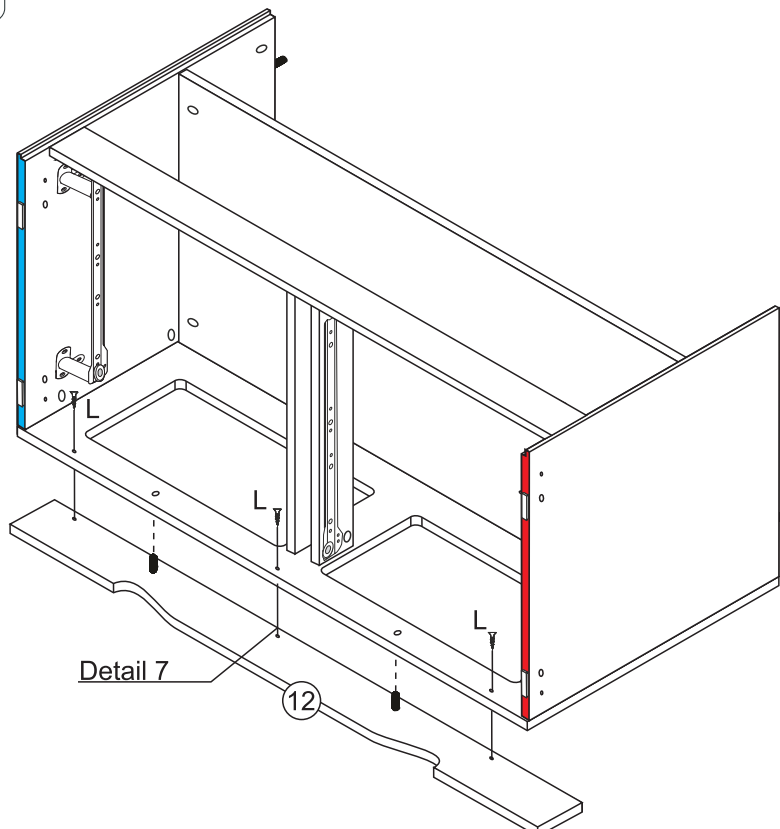L- Flanged Screw
Ø3,5 x 25mm (3x)

Detail 7

12

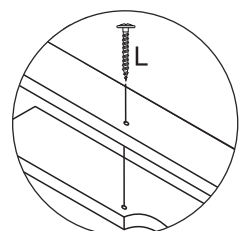
**Detail 7**

5




L- Flanged Screw
Ø3,5 x 25mm (4x)

ATTENTION
Finished edge must
be facing up

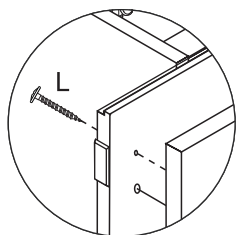

Detail 7

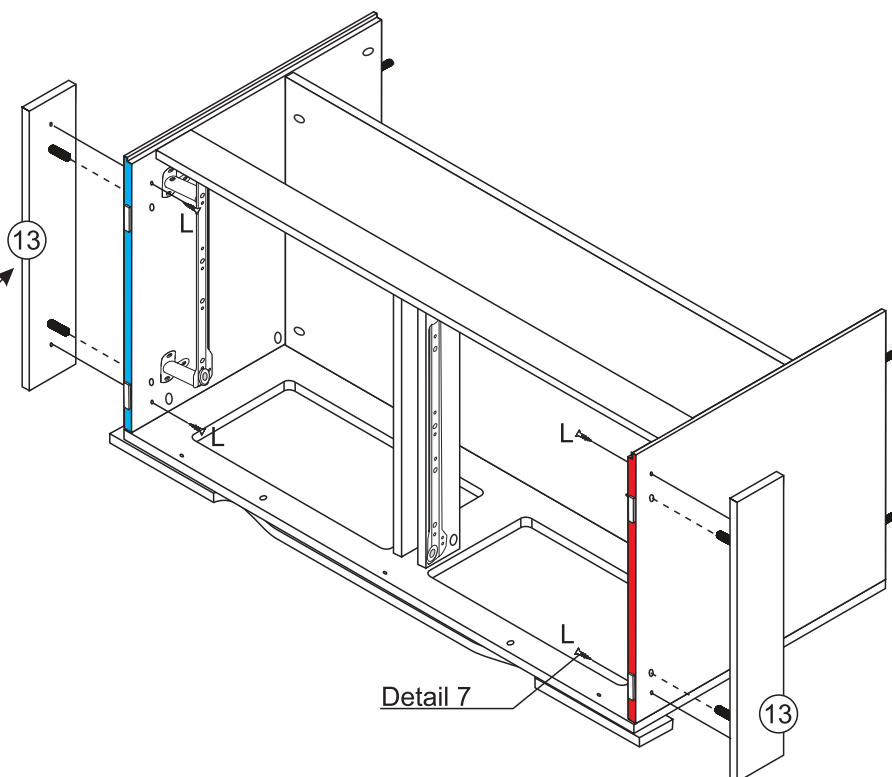

6





B- Cam Nut (4x)



C- Hole Plugs
White (4x)

**Use The Hole
Plugs Here.**

Detail 6

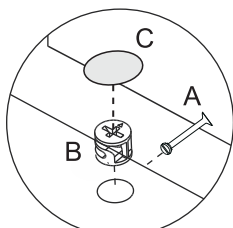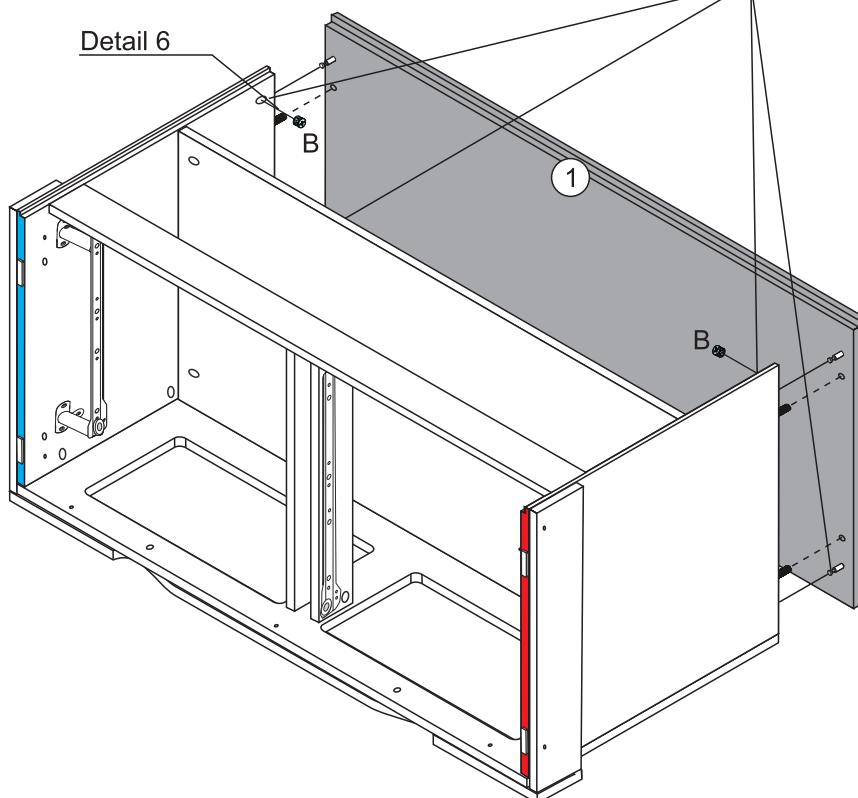



Detail 6

Fit and turn the
cam clockwise


7

N-Nail 10 x 10mm
(18x)

M-Flat Head Screw
Ø3 x 12mm (6x)

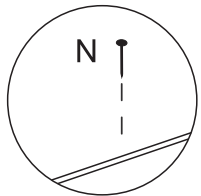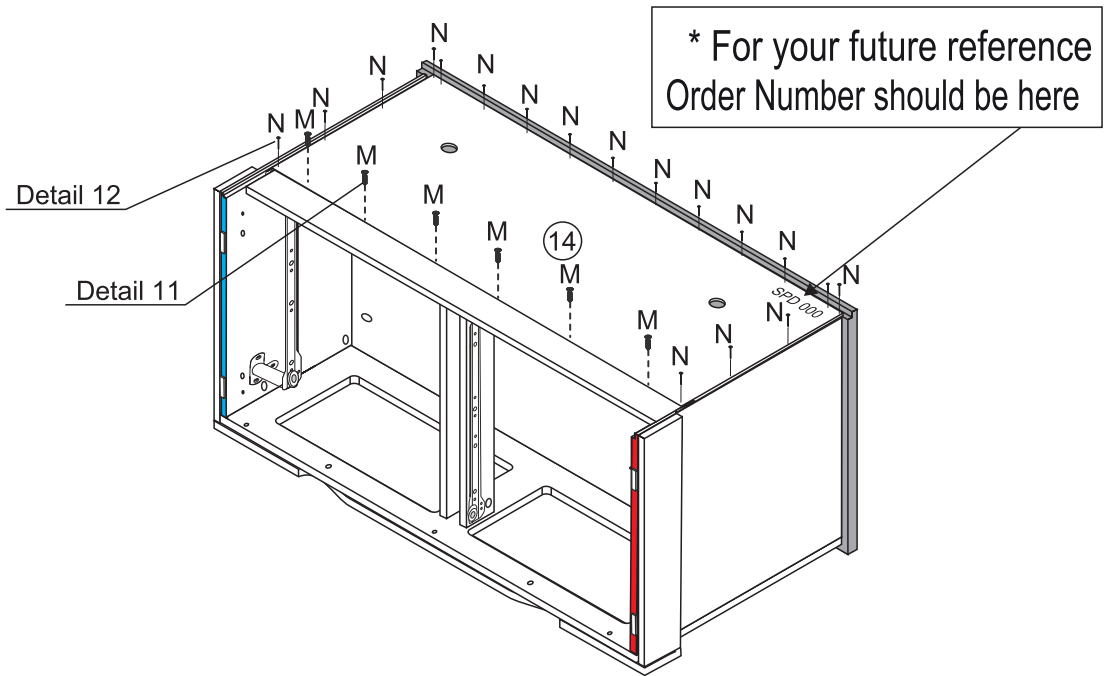


Detail 12

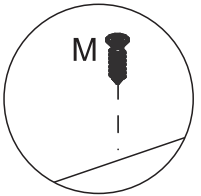



Detail 11

8


K-Black Stud
(2x)

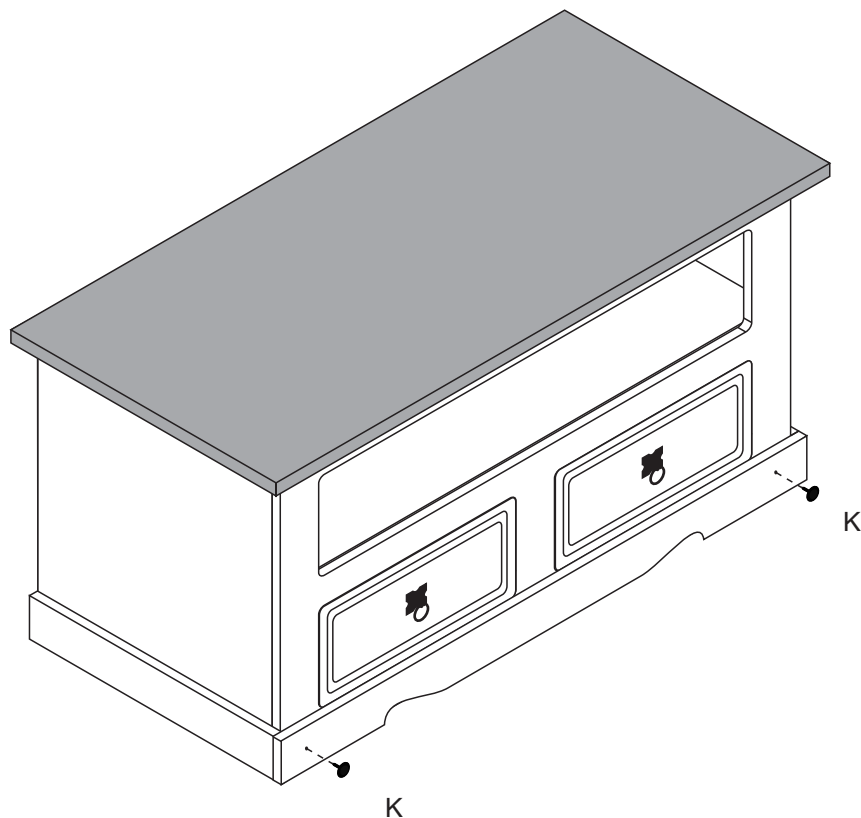


9

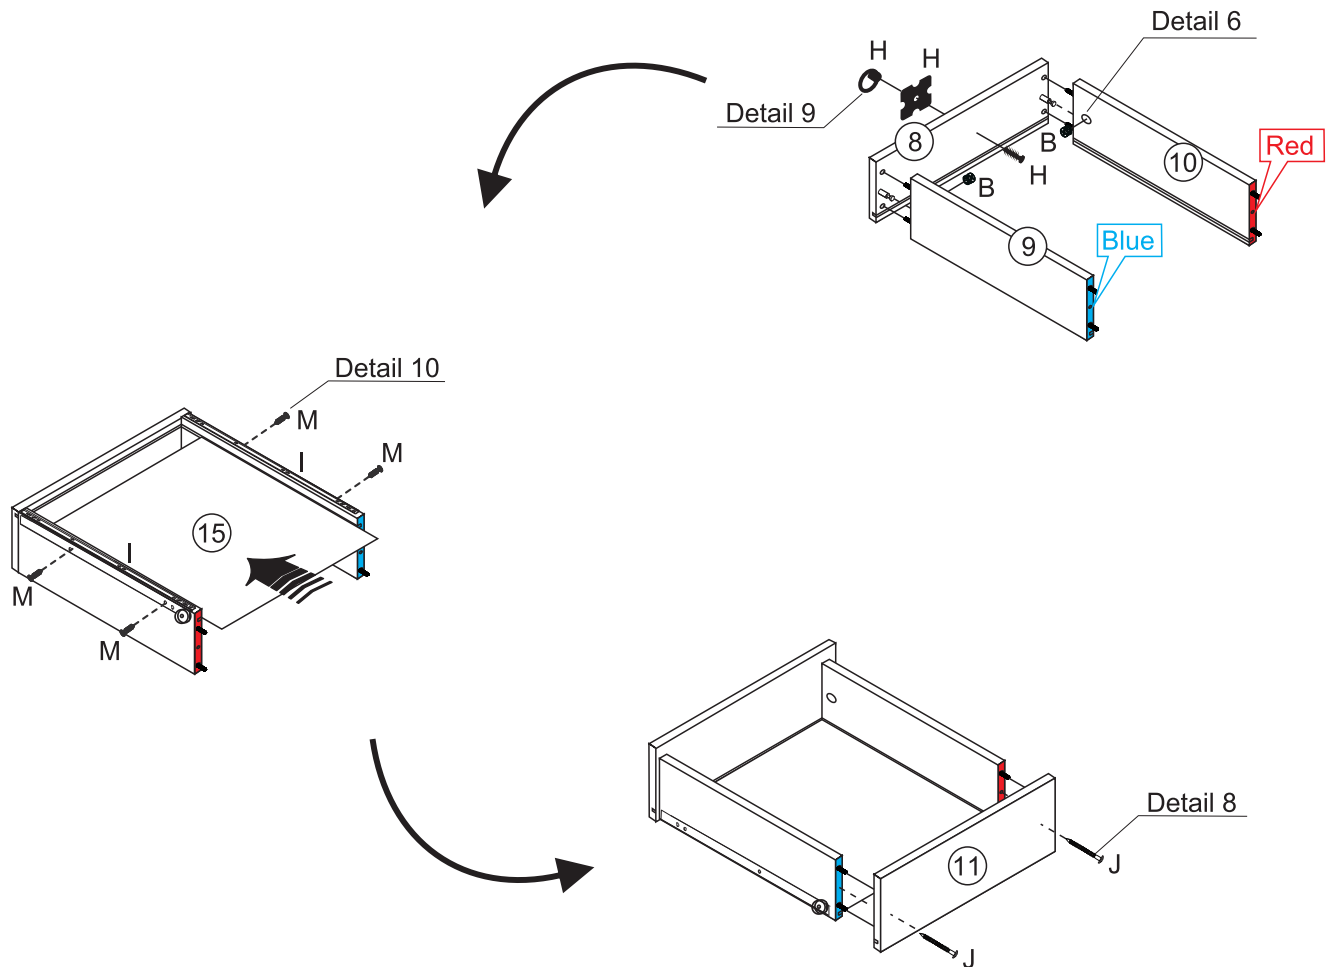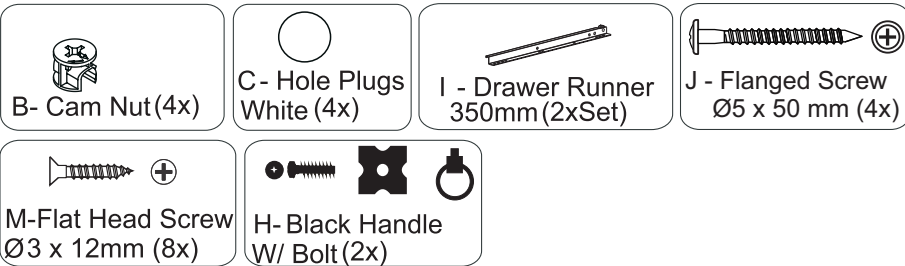


***REPEAT THE SAME STEPS FOR ALL DRAWERS**

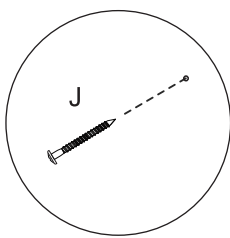

Detail 8

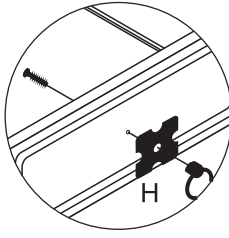

Detail 9

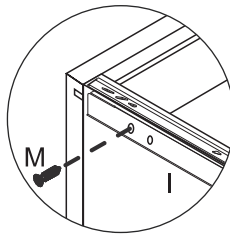

Detail 10

